

陶瓷暖風機

HT015

使用說明書



重要的安全資訊

- 必須適應具體的電源 (220V-240V~ / 50HZ)
- 插頭必須插入符合地方法律法規的接地插座中。
- 請不要另外自配電源線，如果您的插座與暖風機的電源線不匹配，請找合資格的電工為您配上合適的插座。
- 按照下面列出的所有安全預防措施，以減少受傷或遭電擊的危險。
 - 為了安全起見，使用此電器產品前，請仔細閱讀所有說明。
 - 保留說明書。如果你把產品交給其他人使用時，請一定要把說明書一併交給對方。
 - 在沒有專人指導或監管的情況下，缺乏經驗和相關知識的人（包括兒童）或身體智力有障礙的人請勿使用該產品。
 - 應照顧好兒童，確保他們不會亂玩家電。
 - 清潔過程時請拔下產品插頭。
 -  警告：為了避免過熱，請勿覆蓋暖風機。
 - 暖風機不得位於插座或其他裝置的下方。
 - 在浴缸，淋浴或游泳池內，不可使用這種暖風機。
 - 當水濺到產品時，請立即停止使用；否則，可能會發生觸電危險；
 - 嚴禁在浴室等潮濕的地方使用；
 - 使用前請確保產品裡面無水殘留。

- 如果電源線損壞，為了避免危險，必須由製造商、合資格人仕更換。
- **警告：**該產品的某些部分會變得非常熱，可能造成燒傷。當兒童和身體智力有障礙人士在場時要特別注意照顧他們。
- **警告：**在沒有適當人員監護下，如果沒有能力自行走動者，請不要獨自在房間使用這種暖風機。
- 為了更方便地使用該產品，並避免錯誤操作造成任何危險，請注意以下事項。
 - 清潔產品時，請關閉並拔下插頭，直到產品完全停止工作。
 - 請不要拉電源線拔出電源插頭。它可能會導致電源線損壞或漏電。
 - 使用該產品時如果有異常氣味或噪音，請立即停止使用，並立即拔出電源插頭。
 - 請不要把重物放在電源線上或折疊電源線。它可能導致漏電。
 - 請不要讓孩子長時間被此電器直吹。這可能會影響孩子的健康。
 - 請不要濕手觸摸插頭。
 - 請不要把木棍或金屬插入通風口。它可能導致漏電，短路或產品損壞。
 - 請將暖風機放在穩固，平坦的表面上，防止發生翻倒或者被撞翻的危險。
 - 不要在戶外使用。

- 此產品僅為家庭使用。
- 切勿將此設備或電線或插頭浸在液體中。
- 請不要在一個開著的窗口前面或者附近使用暖風機。
- 存放裝置時遠離陽光直射和兒童拿不到的地方。
- 使用此產品時，不要超越在說明書中規定的明確操作。
- 本產品在開啟後必須時刻關注它。
- 不要將任何物體插入暖風機。
- 不要直接把衣服或毛巾覆蓋在暖風機上或用它來烘乾衣物。
- 當使用暖風機時，將易燃物或爆炸性的物質，遠離暖風機。
- 不要讓兒童或寵物靠近此暖風機。不要讓兒童操作此產品。當兒童在附近，使用暖風機時需要嚴格的監管。
- 使用暖風機時，請不要接觸高溫部分。
- 使用暖風機時不要跟其他家電共用插座。
- 不要使用延長線。
- 如果電源線或電源插頭損壞，不要再使用此產品。要將此暖風機送至合資格或指定維修服務機構去檢查和維修。
- 如果它不能正常工作，請拔掉插頭並告知產品的客戶服務中心。
- 不要在動物或植物附近使用此產品。
- 請妥善處理包裝。
- 缺乏經驗和相關知識的人（包括兒童）或身體智力有障礙的人必須在有專人監督或指導的情況下使用本產品。除非一直被監

管，否則兒童請遠離本產品。

 
- 暖風機僅用於個人室內取暖，請不要用於加熱任何液體或其他物質。
- 如長時間不使用本產品，需拔下電源插頭。
- 因為電加熱被覆蓋或不正確的放置會引起火災，因此不得利用帶有可自動接通電源的程序器，定時品或任何其他裝置來使用本加熱器。
- 使用時，電源線不可觸碰產品高溫表面。
- 切勿以拉扯電線的方式來拔出插頭。使用時切勿扭折或用力按壓電線，並確保電線沒有損毀。

一、功能特點


1. 採用 PTC 陶瓷發熱體，可根據環境溫度變化自動微調功率；不氧化特性使其使用壽命更長；
2. 兩檔功率選擇，熱度可調；
3. 採用直流散熱風扇，噪音小；
4. 具有傾倒斷電保護、雙重過熱保護裝置（溫控器、溫度保險絲），使用更安全；
5. 具有擺頭功能，大角度左右自動送風，風力柔和；熱力均勻；
6. 防水滴功能（IP21）；

二、產品各部件功能名稱

● 產品結構示意圖

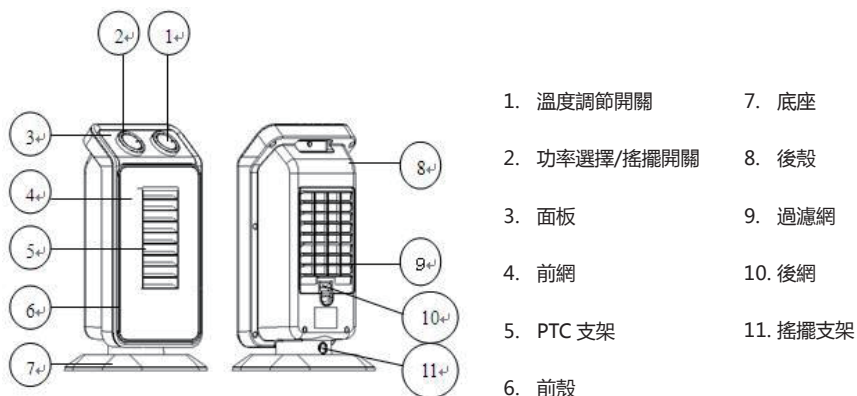

● 操作面板及顯示面板

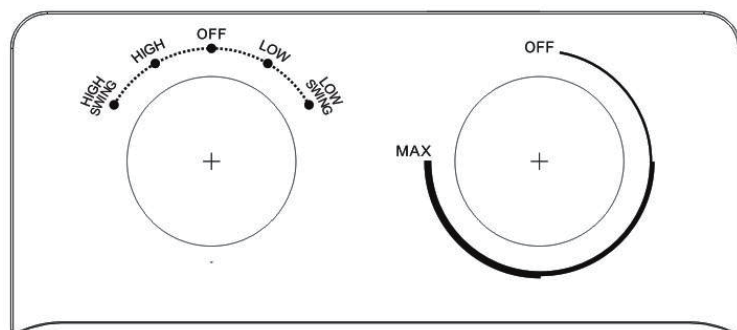 

三、產品使用方法

功能及說明

1. 連接電源前，請先閱讀“重要的安全資訊”、“注意事項”等內容後，並確保電源插座符合要求。

(1) 將產品的電源線插頭接上電源，產品進入通電狀態。

(2) 在通電狀態下接通電源，並且旋轉“功率選擇/搖擺開關”處於選擇模式，旋轉“溫度調節開關”選擇所需要的高/低溫度。

(3) 暖風機通過 功率選擇旋鈕選擇功率（即 高功率擺動/高功率/低功率/低功率擺動），通過“溫度調節旋鈕”選擇所需的高/低溫度（順時針旋轉溫度調節旋鈕，直至聽到“tak”一聲，電暖器才會開始運作）。

(4) 旋轉“功率/搖擺旋鈕”可選擇不同功率及搖擺。

a、共 4 個功能分別為：高功率+搖擺/高功率/低功率/低功率+搖擺。

b、停止使用本機時請把所有“旋鈕”旋轉到關機（“OFF”）；

“旋鈕”使用有效行程為：從“高檔+搖擺”到“低檔+搖擺”大約 120°範圍內旋轉操作，當檔位旋鈕在“高檔+搖擺”位置時，不可繼續用力左旋，在“低檔+搖擺”位置時，亦不可繼續用力右旋。以免損壞旋鈕，影響本機功能。

四、安全警告及注意事項

為了避免操作失誤帶來的危險及更方便使用本機，下面用圖示的形式給出幾種注意事項。在熟悉下面圖示內容的情況下，閱讀產品使用說明書。


符號含義說明

 警告	表示可能會導致人員死亡或重傷或財務損壞的內容
 禁止	表示必須絕對禁止的行為
 強制執行	表示務必執行的強制內容

- 若產品發生故障，請送往維修站或通知售後服務中心，請勿擅自拆卸、更換零部件。隨意拆卸，改造都會影響產品的安全性。



 禁止拆卸

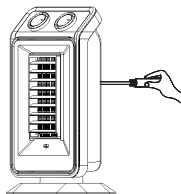


- 不能用濕手觸摸電源線插頭，否則會有觸電的危險。



禁止觸摸



 注意觸電

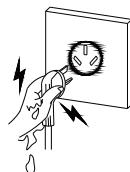


- 嚴禁將木棍、金屬棍等異物塞入進、出風口。會導致漏電、短路及產品損壞的可能。



注意觸電



 
一般性禁止

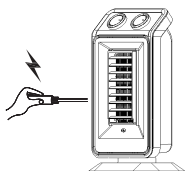

- 請勿在產品周圍噴灑殺蟲劑及可燃性噴霧劑，這可能使產品受損，並導致電擊的危險。



 
一般性禁止

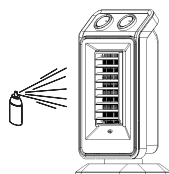

- 避免將產品出風口長時間、直接向幼兒吹風。會導致幼兒生病或影響健康的可能。



 一般性禁止

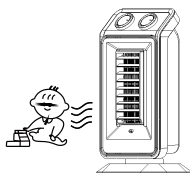


- 拔掉電源線插頭時，請勿拉扯電線，會導致電源線受損，漏電等危險。







注意觸電



     一般性禁止

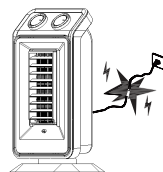

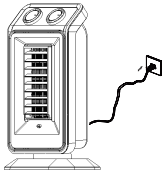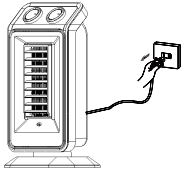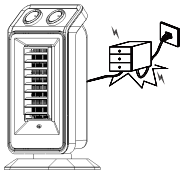● 確保電源線插頭未粘異物，並將插頭完全插入。 會導致漏電的危險。  注意觸電  必須執行 	● 異常處理：當產品在使用中出現異味、異音時，請立即停止使用，並拔掉電源。 備註：當產品在最初期使用時，可能會有一些“異常的味道”或白煙產生。因為在發熱絲塗上了防銹的物質，避免在運輸時發生氧化的問題。這是很正常及安全的。請放心使用！  必須執行 
● 若電源線有裸露或有損壞時，請勿使用。會導致漏電短路及引起火災的危險。如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。  注意觸電  必須執行 	● 請勿折疊或將重物放置到電源線上。會導致漏電的危險。  必須執行 
● 外出或長時間不使用本機時，必須關機，並將電源線插頭從插座中拔出。 ● 當有小孩、動物或行動不便缺乏自製能力的人在場而無人看護時，應避免使用本機。  必須執行	● 使用本機，必須使用經檢查符合要求的合格電源插座。且插座的承載能力不得低於 10A/220V。 ● 必須確保使用的電源電壓與本機銘牌指定的電壓（220-240VAC）一致。 ● 搬運時請確認使用電壓。  必須執行

 
- 為避免過熱，禁止覆蓋暖風機。
- 嚴禁將物品放置在機體上。



- 使用本產品時，請勿觸碰發熱的表面。




一般性禁止



發熱的表面

五、清潔與保養

 - (1) 進行清潔與保養前，請先將電源線插頭拔出，並且在暖風機冷卻後才可以進行。
- (2) 外表面積塵時，要用軟布擦拭。
- (3) 清潔時，不能使用汽油、天那水、稀釋劑及任何容易損壞外表面的物質。
- (4) 如果後網網布髒時，可取出網布進行清洗，清洗完無水珠後可裝上繼續使用。

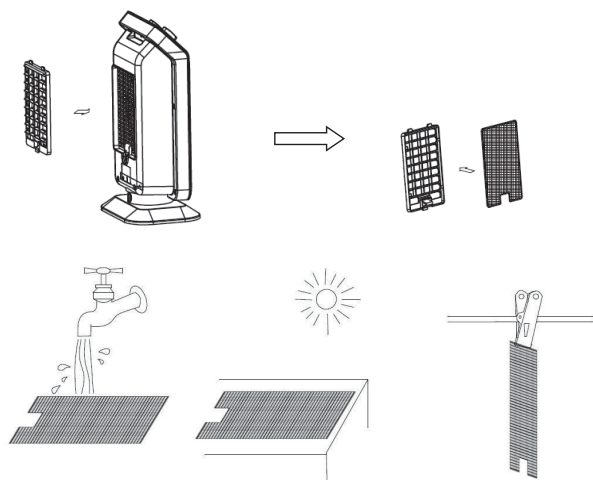

- (5) 存儲時應先將暖風機冷透、吹乾，包裝好存放於乾燥通風處。

六、技術參數

產品型號	HT015
額定電壓	220-240VAC
額定頻率	50Hz
額定功率	1500W
外型尺寸 (長×寬×高)	195mm×140mm×353mm

Ceramic Heater

HT015

User Manual



Important Safety Information

- Must be supplied with 220V-240V~/50Hz.
- The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local law and regulations.
- Do not modify the plug provided with the appliance. If it does not fit the outlet, please consult with a qualified electrician for advice.
- Follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.
 - Read all the instructions carefully before using this appliance and keep then for future reference.
 - Retain the manual. If you pass the product to a third party, make sure to include this manual.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the Appliance.
 - Unplug the appliance during cleaning.



- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet or other appliance.
- Do not use this heater in the surroundings of a bath, a shower or a swimming pool.
- Stop using immediately when water splash into product, otherwise, it may have electric shock hazard.
- Do not use in wet area such as bathroom.
- Make sure no water inside the product before you use it.
- If the supply cord is damaged, it must be replaced by the manufacturer, qualified persons in order to avoid a hazard.
- **CAUTION** – some parts of this product can become very hot and may cause burns. Particular attention has to be given where children and vulnerable people are present.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- In order to use the product more conveniently and avoid any danger caused by wrong operation, please pay attention to the notices.
 - Turn it off and remove plug until the product stops

working and cool down completely before clean the unit.

- Please do not pull out the power plug by pulling the power cord. It may cause the power cord damage or electric shock.
- If there is abnormal smell or noise when uses the product, please stop using and pull out the power cord immediately.
- Please don't put heavy unit onto the power cord or fold the power cord. It may lead to electric shock.
- Please don't have the wind blow to the children directly for a long time. It may influence the children's health.
- Please don't touch the plug by wet hands
- Please don't put the wood or metal stick into the air inlet or outlet. It may lead to electric shock, or product damage.
- Place the appliance on a stable and flat surface to avoid it tipping over or being knocked over.
- Do not use it on outdoor areas.
- This appliance is for household use only.
- Do not immerse the appliance or the electrical cord or plug in liquids.
- Do not use the heater in front of or close to an open window.
- Store the appliance away from direct sunlight and out

of the reach of children.

- Do not use the appliance for any purpose not expressly specified in this manual.
- This appliance must be attended at all times when it is switched on.
- Do not insert any objects into the heater.

- Do not put clothes or towels directly on the heater or use it to dry laundry.
- When using the Ceramic heater, keep combustible materials or explosive objective, away from Ceramic heater.
- Do not place the appliance close to children or pets. Never let children operate this appliance. Close supervision is necessary when this is used near children.
- Do not touch hot surface when in use.
- Do not share the same circuit receptacle with others appliances, otherwise may have burn hazard.
- Do not use extension cord.
- Do not operate the appliance with a damaged cord or plug. Send the heater to a suitably qualified or appointed service agent for inspection and repair.
- Unplug heater if it fails to operate properly and inform customer service center.
- Do not use the heater near animals or plants.
- Dispose of packaging properly.

 
- Persons (including children) with reduced physical, sensory or mental capabilities, or any individual lacking experience and knowledge should be supervised or given instruction by a person responsible for their safety when they using this appliance. Unless being supervised, children can't use this appliance.
- The heater only for personal use, not for heating any liquids or other danger things.
- Disconnect power plug from power supply when the appliance is not in use for a long period of time.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not place the power cord on hot surface when using.
- Do not pull the power supply cord to remove it from the socket. Do not twist or press the power supply cord, and make sure it is not broken.

A. Features


1. Use the high quality PTC heating element, can be automatically trimming power according to the change of the environment temperature, No oxidation characteristics make it has a longer service life;
2. Two gear knobs, for power selection & heat adjustment;
3. Using the DC cooling fan, low noise;
4. With tip-over switch, and double over-heating protection (thermostat, temperature fuse), use more safe.
5. Swing, automatic air supply with wide- angle, wind downy, heat evenly
6. Drip protection function (IP21)

B. Components Description

- Product structure

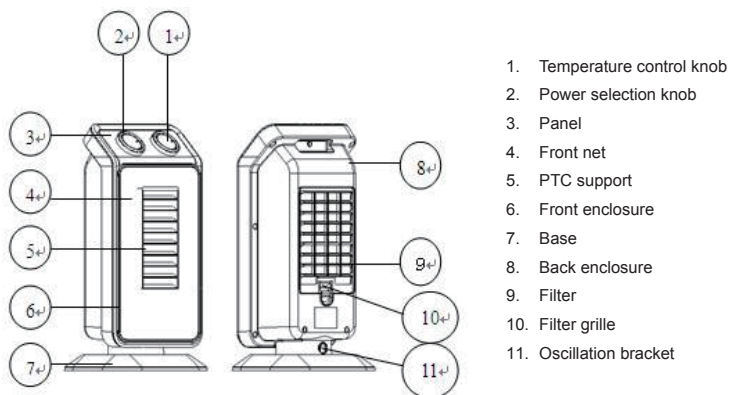

- Display & Operation panel

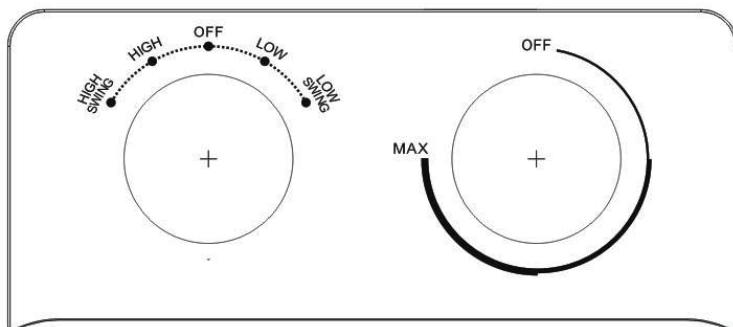 

C. Product operation instruction

Functions and instructions

1. Please refer to the Important Safety Information, and make sure the power outlet meeting the requirement before insert the plug to connect the power;
- (1) Plug in the power cord, products into electricity state;
- (2) It is energized by spinning power selection knob (High Swing / High / Low / Low Swing) and the "Temperature control knob" for required temperature settings (To operate the heater, temperature control knob must be in clockwise rotation until "tak" sound to be heard);
- (3) Required temperature setting can be determined by spinning temperature control knob to your required temperature position; the interior temperature will be gradually rose.
 - a. During the use process, the heater will automatically maintain the set temperature. When the indoor temperature reaches the set

temperature, heater will automatically shut down, when the indoor temperature is lower than the set temperature, heater automatically open again, cycle in order to keep the temperature needed for you.

- b. Temperature control knob rotation within a specified range of operation, the knob should not travel beyond the scope of effective instruction, in order to avoid damage the knob, and affect the machine function.

(4) Rotary "Power selection knob" for different gear;

- a. Five gears and the function are: high power + swing / high power /power off/low power /low power + swing;

- b. Stop using this unit please make "power selection knob" in "OFF" position.

"Power knob" use effective stroke is: from "high power + swing" to "low power + swing" rotating within the scope of operation, when the gear knob in "high power + swing" position, do not continue to force left-hand, in "low power + swing" position, do not continue to force right hand. In order to avoid damage the knob, influence the machine function

D. Safety warning and matters needing attention

In order to avoid the danger of wrongdoing and more convenient to use the machine, in the form of graphic below several points for attention are presented. Under the condition of the familiar with graphic content below, read the product instruction manual.


- Symbolic meaning

 Warning	Something that maybe result in severe damage to the units or your life.
 Forbidden	Some actions that must be absolutely prohibited.
 Must Obey	The content or actions that must execute absolutely as it said.

- With any indication of malfunction, contact service center repairs. Do not attempt to disassemble the product or replace faulty parts with unauthorized components because it will damage the unit.



 No Disassembly

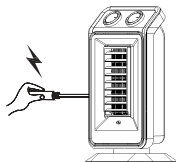

- Do not hand the plug or product with wet hands. Otherwise it may cause electric shock.



Electric shock



Do not touch



 
- Do not stick sticks, metal or other object into the outlet, otherwise it will cause electric shock or even damage the heater.



Electric shock




General forbidden

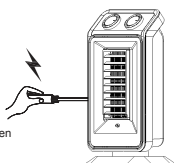

- Do not use pesticide or other flammable spray around the product. Because it will damage the heater and lead to electric shock.



 
General forbidden

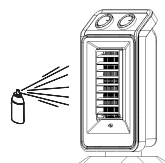

- Do not face the wind outlet to baby directly for long. Or it will be bad to baby's health.



 General forbidden

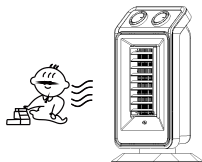


- Do not pull the wires when unplug the power cord plug, because it will damage the wire and lead to electric shock.



Electric shock



 General forbidden

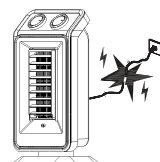


- Make sure there are no abnormal items in the wire, and the plug is absolutely plug in. Otherwise it will cause electric shock



Electric shock



 
Must obey

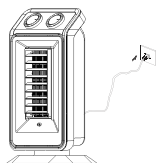

- Stop operating the heater, and unplug the plug. When there is unusual smell or unusual sound from the product.
Remark: There will be "new" smell/little smoke since the protective substances to be applied on heating element before transportation. It is entirely normal and not a cause for concern.



 
Must obey

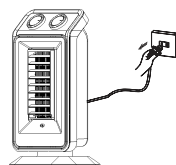

Do not broken power cord, otherwise it will result in electric shock, and fire, Please contact service center for repairs. 	Do not fold power cord or place heavy object on it, because it can cause electric shock. 
- Power off the heater and unplug the power cord when not using for a long time. - Should avoid using the device, if there is any child or animal or disable people or people who are lack of self-control. 	- Using the power outlet that meets the inspection requirements and the carrying capacity of the socket is no less than 10A/220V. - Ensure the power supply voltage is consistent with the specified voltage in the machine (220-240VAC). - Make sure the service voltage when relocation. 
- To avoid overheat, do not cover the heater. - Never place any objects in the device. 	Do not touch hot surface when in use. 

D. Cleaning & Maintenance

 - (1) Make sure that the device is switched off and chill-down before cleaning or maintenance.
- (2) Wipe the surface of the device by using a soft clean cloth when the surface is dirty.
- (3) When cleaning, do not use petrol, tianna water, attenuant and anything which is easy to damage the outer surface of the material.
- (4) During the usage, if the filter grille is dirty, it may cause overheat inside please bring out it and cleaning. The filter grille can continue to used after there is no water on it.

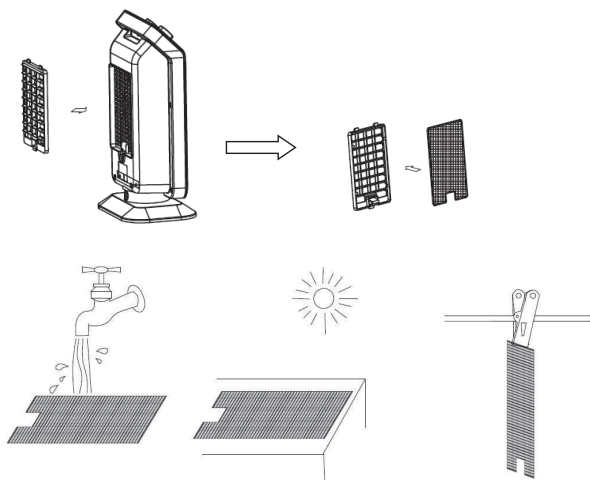

- (5) When storage, the heater should be firstly cold, dried, and packaged in dry and ventilated place.

E. Technology Parameters

Model NO.	HT015
Voltage	220-240VAC
Frequency	50Hz
Power	1500W
Dimension(L*W*H)	195mm×140mm×353mm