

Register your product online

網上登記新產品保養

For Singapore Warranty, please scan QR code or visit below website:



<https://www.whirlpool.com.sg/>

For Hong Kong Warranty 香港地區保養

Save the planet and register your product warranty online!  
Enjoy extra 1-month free warranty upon online registration.

「惠」環保出力，減少用紙!於網上登記產品更可獲額外多一個月保養。



<http://www.whirlpool.com.hk>

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies  
All rights reserved - <http://www.whirlpool.com.hk>, <http://www.whirlpool.com.sg>

註冊商標/惠而浦集團的TM商標  
版權所有 翻印必究 - <http://www.whirlpool.com.hk>, <http://www.whirlpool.com.sg>

EN CH

Whirlpool

Whirlpool



## Health & Safety, Use & Care, Installation Guide and Online Warranty Registration Information

產品安全指引、使用說明、安裝指南及  
網上登記保養資料

Model 產品型號 : HWEC8002GG  
HWEC8002GW



[www.whirlpool.com.hk](http://www.whirlpool.com.hk)  
[www.whirlpool.com.sg](http://www.whirlpool.com.sg)

# CONTENTS



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.



Read operator's manual

## SAFETY NOTICE AND PRODUCT INTRODUCTION

SAFETY NOTICE-----	2~4
INSTALLATION INSTRUCTIONS-----	5~6
SPECIFICATION SHEET-----	6
NAME OF PARTS-----	7
ACCESSORIES-----	7

## OPERATION INTRODUCTION

DOOR-----	7
INTRODUCTION TO CONTROL PANEL-----	8~9
PROGRAMME CHART-----	9~10
FIRST-TIME AND DAILY USES-----	10
OTHER FUNCTIONS-----	10
HINTS AND TIPS-----	11
INDICATORS-----	12

## CLEANING,MAINTENANCE AND TROUBLESHOOTING

CLEANING AND MAINTENANCE-----	12~14
NO-FAILURE CONDITION-----	14
TROUBLESHOOTING GUIDE-----	15
AFTER-SALES SERVICE-----	16

## SAFETY NOTICE(be sure to observe)

- Please read carefully before use (Precautions) and use it correctly , Any malfunction or loss caused by failure to comply with the precautions stipulated in this installation and usage manual is not covered by the warranty of our company, and our company will not bear any related responsibility.
- The product should not be used by individuals with physical, sensory or mental disabilities or those lacking experience and knowledge in its use (including children), unless they are supervised or guided by a person responsible for their safety in connection with the use of the product.
- Children should be taken good care of to ensure that they do not play with this product.
- Cleaning and user maintenance not made by children without supervision.
- Children of less than 3 years be kept away unless continuously supervised.
- In order to prevent harm to users and others or damage to property, the following explanations are made regarding the matters that must be adhered to in terms of safety:
- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments,farm houses, by clients in hotels, motels ,and other residential type environments.

### Beware of electric shock

- Except for professionals, no one is allowed to disassemble, repair or modify this machine.
- The specifications and safety details of household power supply systems (current, voltage, cables) such as fuses refer to the "Product Nameplate" standards.
- Please make sure that the power socket that matches the power plug has a grounding connection and the grounding is reliable.
- If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service agency or similar professionals.
- Please hold the power plug with your hand. Do not drag the power cord to unplug it.
- Do not use the power cord when the power plug is loosely connected to the power cord.
- Do not touch the power plug with wet hands. Please wipe off the dust and water droplets on the power plug with a dry cloth. Never touch the power plug with wet hands.
- Do not bend the power cord excessively or place it under heavy objects.
- Do not use if the power cord/socket/power plug is damaged or broken.

### Beware of explosion or fire

- Do not put flammable liquids or gases such as gasoline, petroleum or alcohol into or near the machine. Do not put clothes containing flammable liquids into the machine.
- When there is a leakage of gas or other flammable gas, do not connect or disconnect the power plug.
- Be cautious of fire, short circuit or leakage accidents.
- Do not install this machine near fire sources or heat sources.
- Please do not place any burning candles or cigarettes on this machine.
- Do not install this machine in a place prone to dampness or rain, as water on the electrical components can damage the machine and cause accidents.
- Do not install this machine in direct sunlight to prevent the plastic and rubber parts from aging.
- Do not use the water spray device when cleaning the machine.

## SAFETY NOTICE(be sure to observe)

### ⚠ ISO7010 W021:Risk of fire/flammable materials

The Symbol mean: caution, risk of fire Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

- To avoid fire caused by excessive drying, do not use this machine to dry the following items: MATS, quilts, etc. (These items will accumulate heat).
- When using detergent on clothes, make sure to give them an extra rinse before putting them in the dryer.
- Make sure all pockets are empty and then put the clothes into the dryer.
- Items that have been soiled by substances such as cooking oil, acetone, alcohol, gasoline, kerosene, stain remover, turpentine, wax and wax remover should be washed with hot water \ and an additional amount of detergent before being dried in the dryer.
- If chemicals are used to clean clothes, the drum dryer cannot be used.
- Cotton shavings are not allowed to accumulate around the drum dryer. Make sure the opening at the bottom is not blocked by the carpet.
- The hot air discharged from the dryer cannot be shared with the exhaust channels of other equipment that burn gases or other fuels.

### ⚠ Warning

- Do not use this product in a damp environment and ensure that the product's ventilation outlets are unobstructed.
- Do not damage the refrigerant circuit.
- Do not stop the machine in the middle to take out the clothes. They must be taken out only after they have cooled down to prevent burns.
- This machine must not be connected to external power sources or circuits with arbitrary switches on public facilities at will to prevent personal injury.
- Make sure the drum has completely stopped before removing the clothes from the dryer.
- When the dryer is in operation, children and pets should stay away to ensure they are not trapped or injured. Before closing the door, be sure to carefully check the rollers to ensure that they won't get trapped and injured.
- Lint must not be allowed to accumulate around the tumble dryer.
- The lint trap has to be cleaned frequently.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

### ⚠ Other explanations

- This machine is designed for household use and cannot be used for any purpose other than this design.
- Do not dry fabrics other than those permitted by this product, and follow the instructions on each clothing label.
- Any electrical work required for the installation of this machine should be carried out by a qualified electrician or a capable person.

## SAFETY NOTICE(be sure to observe)

- For appliances with ventilation openings at the bottom, the carpet must not clog the openings.
- Do not climb onto the dryer. Do not place heavy objects with water or liquid leakage, nor items with heating devices, to prevent the panel and plastic parts from deforming.
- Do not put sharp and hard materials such as coins, pins, nails, screws or stones in the bucket. Because it may cause damage to the dryer.
- After installing this machine, check whether it is pressed against its power cable or drainage hose.
- Foam rubber (latex foam), shower caps, waterproof textiles, items lined with rubber, clothes or pillows with foam rubber pads and other items should not be dried in a dryer.
- After use, the power supply should be cut off and the machine should be cleaned and maintained.
- Do not overload the machine. Please refer to the recommended load in the manual for use.
- Wet clothes should not be put in the dryer.
- Do not use the dryer if the control panel, workbench or base is damaged.
- If industrial chemicals (such as flammable, corrosive or conductive cleaning liquids) are used to clean this product, please stop using it.
- Please do not take out the clothes directly before the program is completely over to avoid scalding.
- Please install the dryer in an environment where the door can be fully opened, clean, dry and free of flammable materials for use.
- When using a dryer, to minimize vibration and noise, it should be placed on a stable and flat surface.
- If the dryer is not completely flat, the front feet need to be adjusted. Rotate counterclockwise to lower the dryer and clockwise to raise it until it stops shaking.
- Sufficient ventilation space must be provided to prevent the gas flowing back from the product from entering and igniting other substances.
- Clothes mixed with acetone, gasoline, detergent, turpentine, wax or wax remover, etc. should all be washed and dehydrated in hot water with detergent before being put into the dryer for drying.
- Make sure not to leave things such as matches and lighters in your clothes and bring them into the dryer.
- Clothes stained with oil should not be put into the dryer.

## CLEANING AND MAINTENANCE

**⚠ WARNING:** Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation; never use steam cleaning equipment -risk of electric shock.

## DISPOSAL OF PACKAGING MATERIALS

**⚠** The packaging material is recyclable and is marked with the recycle symbol (♻). The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

## DISPOSAL OF HOUSEHOLD APPLIANCES

**⚠** This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. By ensuring this product is disposed of correctly, you will help prevent negative consequences for the environment and human health.


The symbol (☒) on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

# INSTALLATION INSTRUCTIONS

## Unpack the machine

Before using this machine, all packaging must be removed, the foam on the transportation safety packaging must be cleared, and it should be kept away from the reach of children.

### Remove foams inside the drum.

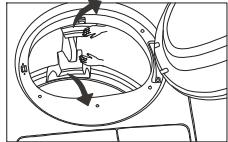

1. Open the machine door.
2. Take out two packaging foams from the drum.



**Warning** There are two packaging foams inside the drum. To prevent the belt from breaking, the foams must be removed before operation.

## Installation and Horizontal adjustment



**Warning** The temperature of the hot air generated by this machine during operation can reach 60°C. Therefore, this machine cannot be installed on the ground that cannot withstand high temperatures.

### Horizontal adjustment

When placing the dryer, you can press the diagonal position on the top cover plate with your hand to see if there is any shaking.

If the dryer is not in a horizontal position, The adjustable feet can be adjusted to level the dryer. Do not insert wooden chips or other objects under the adjusting feet for adjustment.



### Drainage modification

If you do not want the condensate water to be pumped into the water tank, you can drain it out by connecting the attached drainage pipe directly to the sewer. The operation is as follows:

Pull out the drain pipe in the direction of the arrow in Figure 1 (if it is difficult to do so, please use a pair of pointed-nose pliers). At the same position, connect the included drain pipe properly (See Figure 2), and then place the other end of the drain pipe at the inlet of the sewer.

If you have any difficulties, please have a professional install it.




Figure 1



Figure 2

# INSTALLATION INSTRUCTIONS


**⚠ Warning** : The minimum distance between the machine and the wall is as follows

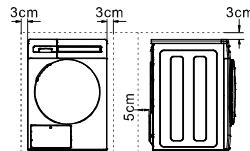

## SPECIFICATION SHEET

Dryer model	HWEC8002IG   HWEC8002IW
Dryer capacity	8kg
Voltage frequency	220-240V/50Hz
Rated power	650W
Net Weight(kg±10%)	49kg
Dimensions (Width x Depth x Height)	595x650x848mm
Ambient temperature range	5~35°C

### Dimension(mm)

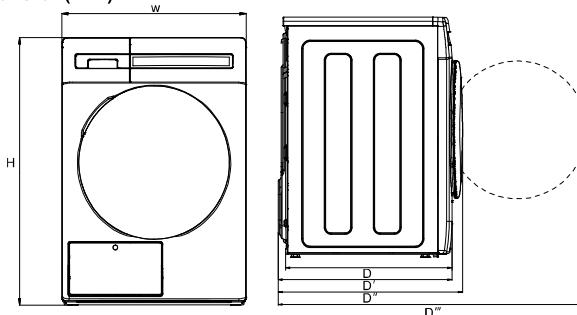

W	595	D	586
H	848	D'	613
		D''	650
		D'''	1085

## NAME OF PARTS

1.Water tank

2.Operation panel


3.Door frame filter screen

4.Machine door

5.Filter

6.Lower panel

7.Adjust the foot

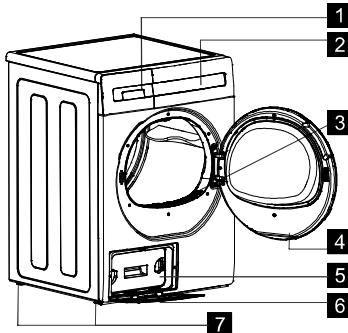

## ACCESSORIES

Instruction manual



Drainage pipe



## DOOR


Push to close the door.

The <> will light up when the door is closed properly.


If the door is not closed properly,

the <> will flash with an alert,

<dop> error code will be shown.

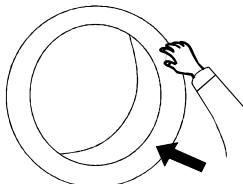

## INTRODUCTION TO CONTROL PANEL

 

### 1.Power on/off key

- This is for turning on/off the machine.
- When the program finishes, machine will switch off automatically.

### 2. Start/Pause button

- Press button once to start and press again to pause.

### 3. Program key

- Choose a suitable program according to types of clothing or fabric.
- This product is equipped with a humidity sensor function and can automatically adjust the drying time to achieve the best drying effect. This automatic control system is not applicable to the "Quick" and "Air refresh" programs.

### 4. Function key

#### • Dry level:

Before starting the machine, you can choose the drying intensity. The drying intensity available for different programs varies, and the drying degree selection for some programs is restricted. The drying intensity is divided into three levels:



#### • Time dry :

In standby or scheduled operation mode, the drying time can be selected based on the actual situation. The default drying time is 20 minutes. Each time the "Time dry" key is pressed, the drying time increases by 10 minutes.

The selectable cycle range is from 20 minutes to 210 minutes.

The timing function of some programs is restricted.



**Some thick clothes (jeans, large sweaters) are difficult to dry in some places due to the material properties.**  
If you find that they are not completely dry at the end of the program, it is recommended to use the "Time dry" function to dry them again.

## INTRODUCTION TO CONTROL PANEL

### • Anti wrinkle :

In standby or scheduled operation mode, the Anti-wrinkle function can be selected. Some programs might limit the activation of Anti-wrinkle function.

During the Anti-wrinkle stage, the indicator light will flash. Manually opening the door or pressing the Start/Pause key can prematurely ends the Anti-wrinkle state.

The Anti-wrinkle Indicator light will go out and display "END".

(Note: The default Anti-wrinkle time is 10 minutes. After selecting the Anti-wrinkle function, the Anti-wrinkle time increases to 120 minutes.)

### • Delay:

After pressing the "Delay" button, the maximum delay time you can make is 24 hours. The "Delay" button is only available in standby mode.

This function must be used after selecting the program and before pressing "▶||" to begin drying. Each press of the "Delay" button increases the delay start time by 1 hour

The delay start time can be selected within the range of 1 to 24 hours.

When "▶||" is pressed, the delay function is activated, the corresponding indicator icon will flash, and the countdown begins.

## 5. Display screen

The display screen shows the following information:

### • Display the remaining time :

After selecting the program, the display screen will show the remaining time of the program (in hours and minutes).

The display screen will automatically time according to different types of fabrics and the required degree of drying.

After the program starts, the display screen will show the remaining time and switch the display every minute.

### • Display the delay time :

If you select the delay start time, the display will show the remaining delay start times.

As long as you press the "▶||" button, this machine will start running at the selected scheduled time.

## PROGRAMME CHART

### Laundry weights:

Cotton quilt (double layer)	1500g	Women's shirt	150g
Cotton quilt (double layer)	1000g	Cotton shirt	300g
Bed sheet (double layer)	500g	Shirt	250g
Bed sheet (single layer)	350g	Cotton skirt	500g
Large tablecloth	700g	Formal dress	350g
Large tablecloth	250g	Jeans	700g
Rag	100g	Handkerchief	100g
Bath towel	700g	T-shirt	125g
Hand towel	350g		

## PROGRAMME CHART

Programme	Application	Max load
Mixed	Ideal for drying clothes in cotton, linen, synthetics, fibres and mixed fibres.	4.0kg
Eco cotton	Standard cotton programme, suitable to dry normally wet cotton laundry. Most efficient programme in terms of energy consumption for drying cotton laundry.	8.0kg
Quick	Suitable for drying small amount of cotton clothes after high-speed spin drying in washing machine.	0.5kg
Wool	Suitable for wool garments.	1.0kg
Gentle	Ideal for drying of delicate fabrics.	5.0kg
Allergy care	Effective in removing bacteria and allergens. Ideal for cotton or mixed fabrics.	4.0kg
Down	For drying down clothings.	2.0kg
Duvet	Ideal for drying large clothing items, bed sheets or quilts.	2.0kg
Shirts	Suitable for cotton, synthetic and blended fabrics.	3.0kg
Air refresh	This program uses fresh air to refresh garments by removing bad odours. Not recommended for damp clothes.	0.5kg

**Eco cotton:** is the test programme in accordance with IEC61121.

Tested at rated load capacity and dryness level Cupboard Dry.

## FIRST-TIME AND DAILY USES

### First use

- Ensure that the electrical connections comply with the installation instructions.
- Remove foam blocks, and other accessories from the roller.
- Before using the dryer for the first time, it is recommended that you place a few wet cloths inside the machine and let them dry for 30 minutes, as there may be dust inside a brand-new dryer.

### Daily use

- Open the door.
- Please put the clothes into the drum one by one.
- Close the door and check if the clothes are stuck between the door or the filter screen of the door frame.
- After pressing the power button "⊕" to start , Select the corresponding program and press the start key "▶||".

## OTHER FUNCTIONS

AUTO START 3 sec.
During shutdown state,long press 3sec on the "▶  " button to activate Auto Start (Mixed program).

CHILD LOCK FUNCTION
In the running state, user can activate the Child Lock function by long press 3sec on the "Dry level" key To deactivate,repeat the steps again. The child lock function will be automatically released under the following circumstances: •Open the door                           •Remove the filter •The water tank is full                   •The program malfunctions or ends.

## HINTS AND TIPS

### Drying hints

- Don't over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, too, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not over-dry items of this type.
- It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer.
- To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.)
- When putting clothes into the machine, all the metal objects inside (such as hair clips, safety pins, pins, etc.) should be taken out.
- Turn the double-layer fabric clothes inside out (for example: if it is a cotton-lined trench coat, the cotton layer should be the outermost one). This can dry better.
- Take out all the items from the pocket, such as lighters and matches.

Never tumble dry the following :Particularly delicate items such as net curtains ,woolen ,silk , fabrics with metal trim, nylon tights ,bulky materials such as anoraks,blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam .

### Always follow the instructions on garment labels:

<input type="checkbox"/> May be tumble dried	<input type="checkbox"/> Delicate drying(low temperature)
<input checked="" type="checkbox"/> Normal drying(high temperature)	<input checked="" type="checkbox"/> Do not tumble dry
• Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them.	
• Close press studs, zips and hooks and tie belts and apron strings. Sort laundry according to type and degree of drying required.	

### Usage Tips

#### 1. Change the program

- If the program is in standby mode, press the "Program" key to select a new program.
- If the program is in the running or paused stage, reselecting the program is not supported.

#### 2. The program ends

- After the drying process is completed, some programs will immediately execute the default anti-wrinkle function for 10 minutes, with the anti-wrinkle indicator light flashing. At this stage, opening the door or pressing the start/pause button can prematurely end the anti-wrinkle state.
- After the program ends, the display screen shows "End", the end prompt sound sounds three times, the filter screen cleaning icon and the water collection box reminder icon light up, and all other icons go out.
- In the end state, you can return to the standby state and start a new drying program by pressing the program selection button.
- After the program ends, if there is no operation within 10 minutes, it will automatically enter the shutdown state.
- After use, please clean the door frame filter screen and empty the water tank.

## INDICATORS

	Child lock	After child lock function activated, this indicator will light up, all buttons (except for power button) will be locked.
	Delay	After select delay function, this indicator will light up. During running, this indicator will flash.
	Filter screen cleaning	This indicator will light up, prompt you to clean the door frame filter screen after each program ends.
	Water Tank	This indicator will light up to remind you to empty the water tank after each program ends. This indicator will flash when the water tank is full.
	Door Close	<b>Attention!</b> After each program end, the water tank should be emptied to avoid an alarm when used next time. This indicator will light up when the door is closed properly. If the door is not closed properly, the indicator will flash with an alert, <drop> error code will be shown.
	Anti-wrinkle	This indicator will light up after select anti-wrinkle function. During the anti-wrinkle stage, the indicator will flash.
	Extra	This indicator will light up when set Extra drying level.
	Cupboard	This indicator will light up when set Cupboard drying level.
	Iron	This indicator will light up when set Iron drying level.

## CLEANING AND MAINTENANCE

- You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.
- Do not clean the dryer by directly spraying water. Clean with soapy water and dry thoroughly. Do not clean the dryer with benzene, thinner, alcohol, acetone or similar products. Otherwise, it may cause discoloration, deformation, damage, electric shock or fire.
- During the drying period, moisture may accumulate on the control panel or door. When cleaning the product, please be sure to unplug the power cord.

### Control panel

- Clean with a soft and damp cloth. Do not use abrasive substances.
- Do not spray the cleaner directly on the panel.
- The surface of the control panel may be damaged by some dust and cleaning agent products.
- Please immediately wipe off any spilled or over-sprayed detergent and keep these products away from your dryer.

## CLEANING AND MAINTENANCE

### Stainless steel products

- When cleaning stainless steel products, use a damp cloth and a mild, non-corrosive cleaner suitable for the stainless steel surface.
- Please dry the residue of the cleaner with a clean cloth.

### Cleaning the door

- Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.

 


### Outside the dryer

- The exterior of the dryer has a high gloss. Clean with a soft damp cloth. Do not use abrasive substances. Protect the surface from being scratched or damaged by sharp objects.
- Do not place any heavy or sharp items or any leaky liquids on the dryer.

### Clean the filter screen of the door frame

- Open the door, take out the door frame filter screen, and then open the door frame filter screen.
- Clean the cotton fluff, fibers and cotton by hand or with a soft cloth.

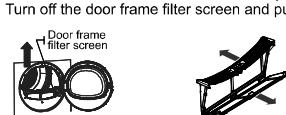

**After each drying program is completed, please clean the door frame filter screen immediately. If the filter screen is clogged, it may cause abnormal vibration during machine operation or fail to dry properly**

### Empty the water tank

The water tank needs to be emptied after each drying cycle. If the water tank is full, the program will pause. The lights  will flash and the buzzer will sound. Please empty the water tank immediately



### Humidity sensor

Please regularly wipe the lint and impurities on the surface of the humidity sensor with a dry and soft cotton cloth to ensure the normal operation of the machine.



### Clean the filter

Please make sure to clean the filter every three months.

Because the lint clogs the filter screen and the filter screen sponge of the filter, it may cause the dryer to vibrate during operation.

Abnormal or not dry properly The specific operation is as follows:

## CLEANING AND MAINTENANCE

 
 
- Press the button on the lower panel to open the lid.

- Unfasten the fixator.

- Take out the filter.

- Clean the lint and impurities on the filter screen by hand or with a soft cloth, and then rinse the filter screen sponge with clean water.

- After the filter screen sponge is dried, reinstall it into the filter tank.




3

4

### Clean the evaporator

 - Clean the accumulated lint on the evaporator behind the filter with a vacuum cleaner or a soft brush. If you wear protective gloves, you can also clean it by hand.
- It is recommended to clean at least twice a month.



**Warning** **Never try to clean it by hand.**  
**The evaporator can hurt your hands!**

## NO-FAILURE CONDITION

Malfunction	Possible Cause	Solution
Dryer does not work	Mains plug is not plugged in.	Plug in at main socket.
	Loading door is open.	Close loading door.
	The filter is not installed properly.	Install the filter properly.
	The filter screen of the door frame is not installed properly.	Install the filter screen of the door frame properly.
	Have you pressed the  button?	Press the  button again.
Drying results unsatisfactory	Wrong programme selected.	Select a different programme the next time you dry (see "Drying Programme" section).
	The filter screen of the door frame is clogged.	Clean the filter screen of the door frame.
	Filter clogged.	Clean lint filter.
	Incorrect volume of laundry.	Observe recommended loading volumes.
	The sediment on humidity sensor.	Washed humidity sensor surface.
Drying cycle ends shortly after programme starts	Drying load is too little or too dry for the selected programme.	Select Time dry function or a higher drying level (e.g. Extra instead of Iron).
Drying cycle lasts an unusually long time	Load volume is too big.	Reduce load volume.

## TROUBLESHOOTING GUIDE

Display screen alarm code	Fault description	Fault conditions	Possible causes of failure	Treatment method
dOP	Filter prompt	The filter is not installed properly	1.The filter lock is not installed properly. 2.The terminals of the microswitch wiring harness are loose or the wiring harness is faulty. 3.The microswitch device is damaged. 4.Computer board malfunction.	1.Install the filter lock properly. 2.Check whether the terminals of the wiring harness are firmly connected or replace the wiring harness. 3.Replace the microswitch. 4.Replace the computer board.
	Door lock malfunction	After startup, the door was not locked	1.The door wasn't closed properly. 2.The terminal blocks are not properly inserted or the wiring harness is faulty. 3.Door lock malfunction. 4.Computer board malfunction.	1.Check if the door is closed properly. 2.Check whether the terminals of the wiring harness are firmly connected or replace the wiring harness. 3.Replace the door lock. 4.Replace the computer board.
	Door frame filter screen Hint	The filter screen of the door frame is not installed properly	1.The filter screen of the door frame was not installed correctly. 2.The magnet of the door frame filter screen is damaged or fallen off. 3.Fault in the reed switch circuit. 4.Computer board malfunction.	1.Install the door frame filter screen properly. (Pay attention to the installation direction). 2.Check if the magnet is damaged or fallen off. 3.Check the reed switch circuit and the terminal blocks. 4.Replace the computer board.
E 1	Temperature sensor -Air outlet	The sensor is open circuit or short circuit	1.The terminal blocks are not properly inserted or the wiring harness is faulty. 2.Computer board malfunction. 3.Sensor failure.	1.Check whether the terminals of the wiring harness are firmly connected or replace the wiring harness. 2.Replace the computer board. 3.Replace the sensor.
E 3	Temperature sensor -Compressor	The sensor is open circuit or short circuit	1.The terminal blocks are not properly inserted or the wiring harness is faulty. 2.Computer board malfunction. 3.Sensor failure.	1.Check whether the terminals of the wiring harness are firmly connected or replace the wiring harness. 2.Replace the computer board. 3.Replace the sensor.
E 2	Low-temperature failure	The temperature was detected to be lower than-10 after startup	1.The terminal blocks are not properly inserted or the wiring harness is faulty. 2.The ambient temperature is too low. 3.Computer board malfunction.	1.Check whether the terminals of the wiring harness are firmly connected or replace the wiring harness. 2.Change the placement of the machine. 3.Replace the computer board.

## AFTER-SALES SERVICE

### BEFORE CALLING THE AFTER-SALES SERVICE

- 1.See if you can solve the problem by yourself with the help of the suggestions given in the "Troubleshooting Guide" section.
- 2.Switch the appliance off and back on again to see if the fault persists.

### IF AFTER THE ABOVE CHECKS THE FAULT STILL OCCURS, GET IN TOUCH WITH THE NEAREST AFTER-SALES SERVICE

When contacting our After-sales service, always specify:

- a brief description of the fault;
- the type and exact model of the appliance;
- your full address;
- your telephone number.

If any repairs are required, please contact an authorised after-sales service (to guarantee that original spare parts will be used and repairs carried out correctly).

# 索引



感謝您購買WIRLPOOL的產品！



請仔細閱讀產品說明書。

## 安全指引及產品介紹

安全指引	18~20
安装指引	21~22
技术参数	22
零部件名称	23
附件	23

## 操作介紹

門	23
控制面板	24~25
程序表	25~26
首次及日常使用	26
其它功能	26
使用提示	27
顯示圖標	28

## 清潔,保養及故障排除

清潔和保養	28~30
故障排除	30
故障代碼	31
售後服務	32

# 安全指引 (請務必遵守)

- 使用前請詳細閱讀(安全注意事項)並正確使用，由於不遵守該安裝使用說明中規定的注意事項，所引起的任何故障和損失均不在本公司的保修範圍內，本公司亦不承擔任何相關責任。
- 產品不應由存在肢體、感官或精神能力缺陷或缺少使用經驗和知識的人（包括兒童）使用，除非有負責他們安全的人對他們進行與產品使用有關的監督或指導。
- 應照看好兒童，確保他們不玩要本產品。
- 兒童不得在沒有監督的情況下清潔和維護機器。
- 除非有持續的監護，否則三歲以下兒童應遠離機器。
- 為了防止對使用人和他人造成傷害或財產損壞，現就安全方面需要務必遵守的事項，作如下說明：
- 本產品適用於家用和類似用途，如：  
在商店、辦公室和其他工作環境的員工廚房區域；農場的房子；供客戶使用的酒店、汽車旅館等居住型環境。

### ⚠ 謹防觸電

- 除專業人員外，不得對本機進行拆卸、修理或改裝。
- 家庭用電供應系統(電流、電壓、電纜)例如保險絲，其規格和安全細節參考“產品銘牌”標準。
- 請務必確保電源插頭配套電源插座有接地連接，並接地可靠。
- 如果電源軟線損壞，為了避免危險，必須由製造商、其服務機構或類似的專業人員更換。
- 請用手握住電源插頭，切勿拖拽電源線拔下插頭。
- 當電源插頭和電源線連接鬆動時，不要使用電源線。
- 請勿用濕手觸摸電源插頭。請用乾布擦去電源插頭上的灰塵和水滴。切勿用濕手觸摸電源插頭。
- 請勿過度彎曲電源線或把它放在重物上。
- 如果電源線/插座/電源插頭損壞或破碎，請勿使用。

### ⚠ 謹防發生爆炸或火災

- 請勿將汽油、石油、酒精等易燃液體或氣體放入機器內或附近。請勿將帶有易燃液體的衣物放入機器內。
- 當發生燃氣或其它可燃氣體泄漏時，請勿連接、斷開電源插頭。
- 謹防發生火災、短路或漏電事故。
- 請勿將本機安裝在靠近火源或熱源的地方。
- 請勿將任何燃燒的蠟燭或香烟放在本機上。
- 請勿將本機安裝在容易潮濕或下雨的地方，因為電器元件上的水會損壞機器和造成意外。
- 請勿將本機安裝在陽光直射的地方，以免塑料部件和橡膠部件老化。
- 切勿在清洗機器時使用噴水裝置。

## 安全指引 (請務必遵守)

### ⚠ ISO7010 W021: 有火災/易燃材料的危險

小心，有着火危險，沾有油污的衣物可能會自燃，特別是在乾衣機等熱源中。這些物質變暖，在油中引起氧化反應。如果熱量不能散發出去，這些物品就會變得足夠熱而起火。堆放或儲存受油污影響的衣物會導致熱量不容易散失，從而產生火災隱患。

如果不可避免地要將含有蔬菜或食用油或被謠言產品污染的纖織物放在乾衣機中，應首先在熱水中用額外的洗滌劑清洗它們，這將減少但不能消除危害。

- 為避免因過度乾燥而引起火災，請勿使用本機烘乾下列物品:墊子、棉被等(這些物品會積聚熱量)。
- 當在衣物上使用去污劑時，確保在放入乾衣機之前進行一次額外的漂洗。
- 確保所有口袋都是空的，然後把衣服裝進乾衣機。
- 已被烹調油、丙酮、潤滑油、煤油、除斑劑、鬆節油、蠟和除蠻劑等物質弄臟的物品，應在乾衣機乾燥前用熱水和額外數量的洗滌劑清洗。
- 如果使用化學品清潔衣物，則滾筒式乾衣機不能使用。
- 棉屑不允許堆積在滾筒式乾衣機的周圍，確保底部的開口沒有被地毯所遮擋。
- 從乾衣機排出的熱風不能與其他燃燒氣體或其他燃料的設備的排氣通道共用。

### ⚠ 警告

- 切勿在潮濕的環境使用本產品，並確保產品通風口通暢。
- 請勿損壞製冷劑回路。
- 請勿在中途暫停機器取出衣物，必須在衣物冷却後再取出，防止燙傷。
- 本機不能隨意連接到外部電源或公用設施任意開關的電路上，謹防造成人身傷害。
- 確保滾筒完全停止後再從乾衣機中取出衣物。
- 當乾衣機工作時，孩子和寵物應該遠離，以確保他們不會被困住受傷。關門前一定要仔細檢查滾筒，以確保他們不會被困住受傷。
- 不能讓棉絨堆積在乾衣機周圍。
- 濾網必須經常清理。
- 必須確保良好的通風，以防止燃燒其它燃料（包括明火）的設備所產生的氣體回流到房間。切勿將未清洗的物品放入烘乾機中烘乾。
- 衣物柔順劑或類似產品應按照衣物柔順劑的規定使用要求。
- 該設備不得安裝在可以上鎖的門、滑動門或與烘乾機相對一側帶有鉸鏈的門之後，且其門的完全開啟不得受到限制。

### ⚠ 其它說明

- 切勿烘乾本產品允許以外的纖織物，且按照每個服裝標簽上的說明操作。
- 安裝此機器所需的任何電氣工作應由有資格的電工或有能力的人進行。
- 底部有通風口的器具，地毯必須不堵塞開口。
- 請勿爬上乾衣機，不要放置有水、液體泄漏的重物、加熱裝置的物品，以免面板和塑料部件變形。
- 桶內不可放入鋒利的堅硬的物料，如：硬幣、別針、釘子、螺絲、石頭。因可能導致乾衣機的損壞。
- 安裝本機後，檢查本機是否壓在其供電電纜或排水軟管上。
- 泡沫橡膠(乳膠泡沫)、浴帽、防水紡織品、以橡膠為襯的物品、裝有泡沫橡膠墊的衣服或枕頭等物品不應在乾衣機內烘乾。
- 使用之後要切斷電源，並對機器進行清潔和保養。
- 請勿使機器過載。請參照說明書建議負載使用。
- 濕淋淋的衣服不能放在乾衣機裏。
- 如果控制面板、工作臺面或底座損壞，切勿使用乾衣機。
- 如果使用了工業化學品（如：易燃的、腐蝕的、導電的清潔液體）進行清洗本產品，請停止使用本產品。
- 程序未完全結束請不要直接取出衣物，避免造成燙傷。

## 安全指引 (請務必遵守)

- 請將乾衣機安裝在可完全打開門、乾淨的、無水的、無易燃物的環境下使用。
- 當使用乾衣機時，為了將震動和噪音降到最低，應將它放置在一個穩固、平整的表面上。
- 如果乾衣機沒有完全平整，需要調整前腳部，逆時針旋轉使乾衣機下降，順時針旋轉使乾衣機上升，調節到不晃動為止。
- 必須提供足夠的通風空間，以避免從產品倒流出的氣體流入點燃其他物質。
- 混有丙酮、汽油、去污劑、鬆節油、蠟或除蠻劑等的衣物都應在熱水中添加清潔劑洗滌脫水後才能放入乾衣機內烘乾。
- 確保不要把諸如火柴、打火機之類的東西遺忘在衣服裏而帶入乾衣機內。
- 沾有油類的衣物不能放入乾衣機。

### 清潔和保養

⚠ 警告: 在做任何的保養操作前，請確保電器已關閉並斷開電源;切勿使用蒸氣清洗設備-電擊風險。

### 處理包裝材料

⚠ 本機包裝材料為可回收材料，並帶有回收標志 (♻)。因此，必須當地政府機關針對廢物處理的相關規定，妥善處理各類包裝材料。

### 廢弃家用電器

⚠ 本機制造材料可回收或可重複使用。根據當地廢棄物處理法規進行處置。有關家用電器處理、回收、循環利用的更多信息，請聯系當地機關、生活垃圾收集服務機構或購買電器的商店。

請確保妥善處理本機，以避免對環境和人體健康造成不良影響。


產品或隨附文件標注符號 (☒) 表示本機屬於電氣電子設備，應送到專業電氣電子設備收集點回收電子電器設備的收集中心進行處理。

# 安裝指引

## 拆除包裝

在使用本機前，必須拆除所有的包裝，清除運輸安全包裝泡沫，並遠離兒童觸及的地方。

## 移除滾筒內的兩個包裝物料

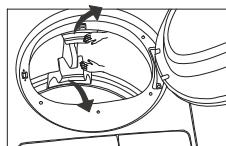

1. 打開機門。
2. 從滾筒內取出兩個包裝物料。



滾筒內裝有兩個包裝物料，運行前務必取出，避免造成皮帶斷裂。

## 安裝及水平調節



本機工作產生的熱氣溫度可以達到60°C，因此本機不能安裝在無法抗高溫的地面上。

## 水平調節

乾衣機放置時，可用手按壓頂蓋板上對角位置，看是否有晃動。

如果乾衣機未處于水平狀態，可調整調節腳使乾衣機水平，請勿在調節脚下插入木片等其它物件調整。



## 排水改裝

冷凝水如不需要抽到水箱中，可連接附送的排水管直接排到下水道。

操作如下：

按圖1箭頭方向拔出排水管（如果拔出困難，請使用尖嘴鉗），在同一個位置，將附送的排水管連接好（見圖2），然後將排水管的另一端放到下水道進口即可。

如有困難，請找專業人員安裝。

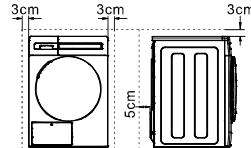


圖 1

圖 2

# 安裝指引


**⚠ 警告** 機器與牆面需要保持的最小距離如下：



## 技術參數

型號	HWEC8002GG   HWEC8002GW
乾衣機容量	8kg
電壓/頻率	220-240V/50Hz
額定功率	650W
尺寸 ( 寬x深x高 )	595x650x848mm
使用環境溫度範圍	5~35°C


## 機器尺寸 ( mm )

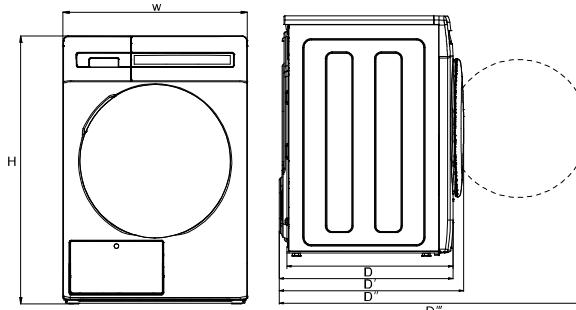

W	595	D	586
H	848	D'	613
		D''	650
		D'''	1085

## 零部件名稱

- 1.水箱
- 2.操作面板
- 3.門框過濾網
- 4.機門
- 5.過濾器
- 6.下面板
- 7.調節腳

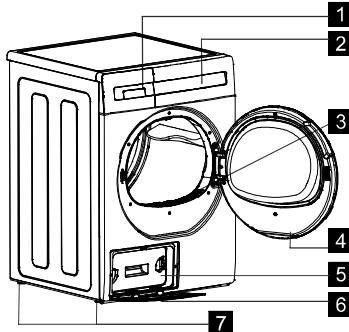


## 附件

說明書	排水管


## 門

### 推動關門

當門關好時，< >顯示圖標將長亮。  
如果門沒有關好，< >將閃爍提醒。  
< `dop` >代碼將出現在顯示屏上。

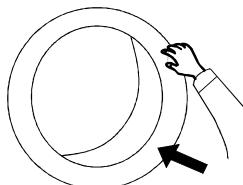

## 控制面板

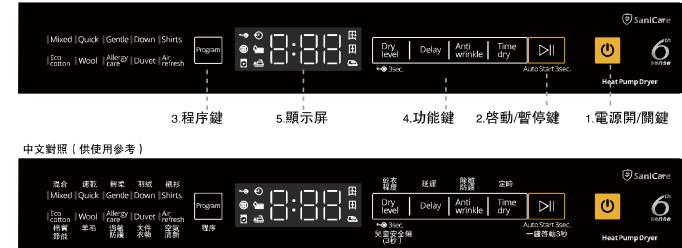

### 1. 電源開/關鍵

- 用于開啟機器電源。
- 程序運行結束後，乾衣機將自動關機。

### 2. 啓動/暫停鍵

- 選擇程序功能後，按此鍵啓動程序，再按一次暫停。

### 3. 程序鍵

- 可根據不同的衣物類型按“程序”鍵選擇不同的程序。本產品具有濕度傳感器功能，可自動調節乾燥時間，達到最佳乾燥效果。（該自動控制系統不適用於清新20'、快烘40'程序）

### 4. 功能鍵

#### ● 乾衣程度：

在啓動機器之前，您可以選擇烘乾強度。不同程序可選擇的烘乾強度不同，部分程序乾衣度選擇受限制。烘乾強度分為三種等級：



#### ● 定時乾燥：

待機狀態或預約運行狀態下，可根據實際情況選擇烘乾時間，默認烘乾時間為20分，每按一次定時鍵，烘乾時間增加10分，可選循環範圍為20分-210分。  
部分程序定時功能受限制。



一些厚衣服(牛仔褲、大毛衣)，由於材料特性，有些地方難以乾燥。如果您在程序結束時發現它們沒有完全乾燥，建議使用“定時”功能再次乾燥。

## 控制面板

### • 防皺:

待機狀態或預約運行狀態下，可選擇防皺功能，部分程序防皺功能受限制。

防皺階段，指示燈閃爍，手動開門或按啓動/暫停鍵，可提前結束防皺狀態，防皺指示燈熄滅，並顯示“End”。（注：防皺時間默認10分鐘，選中防皺功能後，防皺時間增加至120分鐘）

### • 延遲:

按下“延遲”鍵後，您可延遲的最長時間為24小時。延遲按鍵僅在待機模式可選，此功能必須在選擇程序之後和在按下“啓動/暫停”開始烘幹之前，每按一次延遲鍵增加1小時預約時間，延遲時間1-24小時範圍內可選。

當按下“啓動/暫停”時，延遲功能啓動，相應的指示圖標會閃爍，倒數計時開始。

## 5.顯示屏

顯示屏顯示以下信息：

### • 顯示剩餘時間:

選擇了程序後，顯示屏會顯示程序剩餘時間(以小時和分鐘計)。根據不同類型的衣料和要求的乾衣程度，顯示屏會自動計時。程序開始後，顯示屏將顯示剩餘時間，每1分鐘切換一次顯示。

### • 顯示預約時間:

如果您選擇了預約時間，顯示器將顯示預約剩餘時間。只要您按下“啓動/暫停”鍵後，本機將開始運行所選的預約時間。

## 程序表

### 衣物重量參考

棉被 (雙層)	1500g	女襯衫	150g
棉被 (單層)	1000g	棉襯衫	300g
床單 (雙層)	500g	襯衫	250g
床單 (單層)	350g	棉裙	500g
大桌布	700g	禮服	350g
小桌布	250g	牛仔褲	700g
抹布	100g	手帕	100g
浴巾	700g	T恤	125g
手巾	350g		

## 程序表

程序	適用對象	最大負載容量
Mixed(混合)	適用於烘乾棉、麻、合成纖維及混合纖維衣物。	4.0kg
Eco cotton(棉質節能)	標準程序，適用於烘乾正常溫度的棉質衣物。在烘乾棉質衣物的能耗方面，是效率最高的程序。	8.0kg
Quick(速乾)	適用於經洗衣機高速脫水後的少量棉質衣物的烘乾。	0.5kg
Wool(羊毛)	適用於烘乾羊毛服裝。	1.0kg
Gentle(輕柔)	適用於烘乾精緻纖維。	5.0kg
Allergy care(過敏防護)	有效去除細菌和過敏原，適用於棉質或混紡纖維。	4.0kg
Down(羽絨)	適用於烘乾羽絨服。	2.0kg
Duvet(大件衣物)	適用於烘乾大件衣物、床單或被子。	2.0kg
Shirts(襯衫)	適用於烘乾純棉、合成纖維或混紡襯衫。	3.0kg
Air refresh(空氣清新)	這個程序利用新鮮空氣去除難聞的氣味，使衣服煥然一新。 不建議用於濕潤的衣服。	0.5kg

Eco cotton是符合IEC61121標準的測試程序，測試在額定負載容量和Cupboard Dry乾衣程度下進行。

## 首次及日常使用

### 首次使用

- 確保電氣連接符合安裝說明。
- 從滾筒中去除泡沫塊等附件。
- 首次使用乾衣機前，建議您在機器內放置幾塊濕布並乾燥30分鐘，因為全新的乾衣機內可能有灰塵。

### 日常使用

- 打開門。
- 請把衣物一件件的放入桶內。
- 關上門並檢查衣物有沒有卡在門或門框過濾網之間。
- 按下電源鍵“”啓動後，選擇相應的程序並按啓動鍵“”。

## 其它功能

3秒自動啓動
關機狀態下，長按3秒“  ”鍵激活自動啓動的功能(Mixed混合程序)。

童鎖功能
在運行狀態下，長按“Dry level(烘幹程度)”鍵3秒，開啟童鎖功能。 如需取消該功能，請再次重複上述步驟。 童鎖功能將自動在下列情況下取消： <ul style="list-style-type: none"> <li>●打開門</li> <li>●拆卸過濾器</li> <li>●水箱滿了</li> <li>●程序發生故障或終止</li> </ul>

## 使用提示

### 乾衣提示

- 為了防止衣物出現褶皺和節省能源，請不要過度烘乾。
- 請勿將深色衣物與淺色絨毛物件放在一起，如毛巾，以免毛屑掉落而互相沾污。
- 乾衣前，請將衣物揚開。
- 精細的衣物如襯衫等在乾衣前也應簡單的揚開。
- 針織品（針織內衣）在乾衣過程中可能會有一點縮水，所以不要乾衣過度，建議在買這類衣物選尺碼時要考慮縮水的因素。
- 漿洗過的衣物也可以放入乾衣機。清除任何漿粉殘渣的做法是：乾衣後用濕布清理滾筒內部，然後擦乾。
- 乾衣結束後要防止靜電，可以在洗衣時加入柔順劑或者使用專門針對機器乾衣的軟化衣物裝置。
- 乾衣機乾衣後請將衣物取出。
- 如果個別衣物仍然潮濕，如一些多層折疊（領口、袖口）衣物，可以繼續烘乾，但至少30分鐘。
- 衣物放入機器內時要將裏面的金屬物件全部拿出來（像發夾、安全針、別針等等）。
- 把雙層面料的衣服翻過來（例如：如果是棉襪裏的風衣，棉質的那一層應該是最外面的）。這樣能更好乾燥。
- 從口袋中取出所有物品，如打火機和火柴。

以下類型的衣物不允許置于乾衣機內：特殊精細衣物如網狀窗簾、羊毛織品、絲綢、有金屬飾品的人造材料、尼龍緊身衣、大型物件如戴帽風衣、毛毯、鴨絨被、羽絨被、睡袋和任何含有海綿橡膠或類似物質的衣物。

#### 遵循衣物標簽上的烘乾指示：

	表示通常可用機器烘乾		表示常規烘乾(高溫)
	表示輕柔烘乾(低溫)		表示不能機器烘乾

- 扣上枕頭套和外套的紐扣，以防止小物件纏繞到裏面。
- 扣上紐扣、拉鏈、領帶、圍裙帶、挂勾等，應根據衣料和所需烘乾程度，分開烘乾。

## 使用提示

### 1.更改程序

- 若程序在待機狀態，按下“程序”鍵，可選擇新程序；
- 若程序在運行或暫停階段，不支持重新選擇程序。

### 2.程序結束

- 烘乾完成後，部分程序會馬上執行10分鐘默認防皺，防皺指示燈閃爍，在此階段開門或者按啓動/暫停鍵，可提前結束防皺狀態。
- 程序結束後，顯示屏顯示“End”，結束提示音響3聲，濾網清潔圖標和集水盒提醒圖標點亮，其他圖標全部熄滅；在結束狀態下，可以通過程序選擇按鍵返回到待機狀態重新開始新的烘乾程序。
- 程序結束後，如10分鐘內無任何操作自動進入關機狀態。  
使用完畢後請清潔門框過濾網及清空水箱。

## 顯示圖標

	童鎖	童鎖功能激活後，這個圖標長亮，所有按鍵（除電源鍵）將不能操作。
	延遲	選擇延遲功能後，這個圖標將長亮。 延遲運行狀態下，該圖標將閃爍。
	濾網清潔	每次程序結束後，這個圖標將長亮，提示清洗門框過濾網。
	水箱提醒	在每次程序運行結束後，這個圖標將長亮，提示用戶清空水箱。 當水箱滿時，溢水報警，這個圖標將閃爍，提醒您清空水箱。  注意！每次程序結束後，水箱應該清空，從而避免下次使用時出現水箱提醒圖標報警。
	關門狀態提醒	當門關好時這個圖標將長亮。 如果門沒有關好，圖標將閃爍提醒， <code>&lt;dop&gt;</code> 代碼將出現在顯示屏上。
	除皺防護	選擇除皺功能後，這個圖標將長亮。 在除皺功能運行期間，該圖標將閃爍。
	收納	當烘乾程度設置為超乾儲藏時，這個圖標將長亮。
	即穿	當烘乾程度設置為全乾即穿時，這個圖標將長亮。
	待浸	當烘乾程度設置為微乾熨燙時，這個圖標將長亮。

## 清潔和保養

- 對本機進行任何的保養和清潔之前，請您一定要斷開電源。
- 請勿用直接噴水的方式清洗乾衣機。使用肥皂水清潔並徹底擦乾，不要用苯、稀釋劑、酒精或丙酮清洗乾衣機。否則，可能引起變色、變形、損壞、觸電或火灾。
- 在乾燥期間，控制面板或門可能積聚水分。清洗產品時，請務必拔下電源線。

### 控制面板

- 用柔軟潮濕的抹布清潔。不要使用研磨性物質。
- 請勿直接在面板上噴灑清潔劑。
- 控制面板表面可能會被一些灰塵和去污劑產品損壞。
- 請立即擦去任何溢出或過度噴灑的去污劑，並使這些產品遠離您的乾衣機。

 
## 清潔和保養

### 不銹鋼制品

- 清潔不銹鋼制品時，使用濕布和適合不銹鋼表面的溫和、無腐蝕的清潔劑清潔。
- 請用乾淨的布擦乾清潔劑的殘留物。

### 清潔機門

- 定期清潔機門，以清除所有絨毛。
- 徹底清潔以確保乾燥效果。



### 乾衣機外部

- 乾衣機外部光澤度高，用柔軟的濕布清潔，不要使用研磨性物質。保護表面不被尖銳的物體劃傷或損壞。
- 請勿在乾衣機上放置任何沉重或尖銳的物品和可滲漏的任何液體。

### 門框過濾網清潔

- 打開門，把門框過濾網拿出來，然後打開門框過濾網。
- 用手或軟布清潔棉絨、纖維和棉花。關閉門框過濾網，並將門框過濾網放回。



每次烘乾程序結束後，請立即清潔門框過濾網，如過濾網堵塞，可能會發生機器運行時震動異常，或者烘不乾。

### 水箱清空

水箱需要在每個乾燥循環後被清空。如果水箱是滿的，程序將暫停，燈會閃爍，蜂鳴器會響，請立即清空水箱。



3. 放入水箱

4. 按下啓動/暫停鍵

### 濕度感應器

請定期用乾燥柔軟的棉布擦試濕度感應器表面的毛屑及雜質，確保機器運行正常。

 
 


### 清理過濾器

請確保每三個月清洗一次過濾器。  
因為毛屑堵塞過濾器的過濾網和過濾網海綿，可能造成乾衣機運行震動異常或烘不乾。具體操作如下：

## 清潔和保養

1. 按下面板按鈕打開蓋子。
2. 解開固定器。
3. 拿出過濾器。
4. 用手或軟布清潔過濾網上的毛屑和雜質，並用清水衝洗過濾網海綿。
5. 過濾網海綿晾乾後，再裝回過濾槽。




### 清潔蒸發器

- 用真空吸塵器或軟毛刷清潔過濾器後面的蒸發器上堆積的絨線。  
如果您戴上防護手套，也可以用手清潔。
- 建議每月至少清洗兩次。



 切勿嘗試徒手清潔，蒸發器會傷害您的手！



## 故障排除

故障內容	可能性的原因	解決方案
乾衣機不工作	電源插頭未插入	插入電源插座
	門未關好	關好門
	過濾器未裝好	裝好過濾器
	門框過濾網未裝好	裝好門框過濾網
	沒按 ▶/II 啓動鍵	再按一次 ▶/II 啓動鍵
乾衣效果不好	程序選擇不正確	參考說明選擇適合的程序
	門框過濾網堵塞	清理門框過濾網
	過濾器堵塞	清理過濾器
	衣物太多或太少	參考程序選表的說明
	濕度傳感器上有沉積物	用濕布清理濕度傳感器表面
烘乾周期在開始不久後結束	對於所選程序，乾燥負荷過少或過乾。	采用定時烘乾或更高的烘乾程度(例如，用超乾藏置代替微乾熨燙)
	衣物太多	減少衣物

## 故障代碼

顯示屏 報警代碼	故障描述	故障條件	可能故障原因	處理方法
DOP	過濾器提示	過濾器 未裝好	1.過濾器鎖扣未安裝好	1.安裝好過濾器鎖扣
			2.微動開關線束端子鬆動 或線束故障	2.檢查線束端子插接是否 牢固或更換線束
			3.微動開關裝置損壞	3.更換微動開關
			4.電腦板故障	4.更換電腦板
	門鎖故障	啓動後， 門未鎖上	1.門未關好	1.檢查門是否關好
			2.接線端子未插好或線束故障	2.檢查線束端子插接是否 牢固或更換線束
			3.門鎖故障	3.更換門鎖
			4.電腦板故障	4.更換電腦板
	門框過濾網 提示	門框過濾網 未裝好	1.門框過濾網未正確安裝	1.安裝好門框過濾網 (注意安裝方向)
			2.門框過濾網磁鐵損壞或脫落	2.檢查磁鐵是否损坏或脱落
			3.乾簧管線路故障	3.檢查乾簧管線路和接線 端子
			4.電腦板故障	4.更換電腦板
E 1	溫度傳感器 -出風口	傳感器開路 或短路	1.接線端子未插好或線束故障	1.檢查線束端子插接是否 牢固或更換線束
E 3	溫度傳感器 -壓縮機	傳感器開路 或短路	2.電腦板故障	2.更換電腦板
E 2	低溫故障	啓動後檢測 到溫度低於 -10°C	3.傳感器故障	3.更換傳感器
			1.接線端子未插好或線束故障	1.檢查線束端子插接是否 牢固或更換線束
			2.環境溫度過低	2.更換機器擺放位置
			3.電腦板故障	3.更換電腦板

## 售後服務

### 在致電售後服務中心前

- 1.看看你是否能在“故障排除”部分給出的建議的幫助下自己解決這個問題。
- 2.關閉設備，然後重新打開，看看故障是否仍然存在。

### 假如按上面的檢查故障仍然存在，請致電售後服務中心

當聯絡我們的客戶售後服務中心，請說明

- 相關的故障說明；
- 機器的類型和型號（請參考機身銘牌）；
- 您的完整地址；
- 您的聯絡電話。

對於任何維修，請使用我們授權的售後服務中心，以確保適當的維修和使用原廠零配件。