

User Manual

使用說明書

Model : WIO 3O33 PLE S UK

產品型號 : WIO 3O33 PLE S UK



www.whirlpool.com.hk

ENGLISH 3

繁體中文 17

USER MANUAL



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance,
please register your appliance on www.whirlpool.com.hk

INDEX

USER MANUAL	3
Product Description	4
Appliance	4
Control Panel	4
First Time Use (Salt, Rinse Aid and Detergent)	5
Programs Table	6
Programs Description	6
Options and Functions	7
Loading the Racks	8
Daily Use	9
Advice and Tips	9
Care and Maintenance	10
Troubleshooting	11
Health & Safty Guide	12-13
Installation Guide	14-16

DAILY REFERENCE GUIDE




THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.
In order to receive a more complete assistance, please register your appliance on: www.whirlpool.com.hk

Before using the appliance carefully read Safety Instructions guide.


PRODUCT DESCRIPTION

APPLIANCE

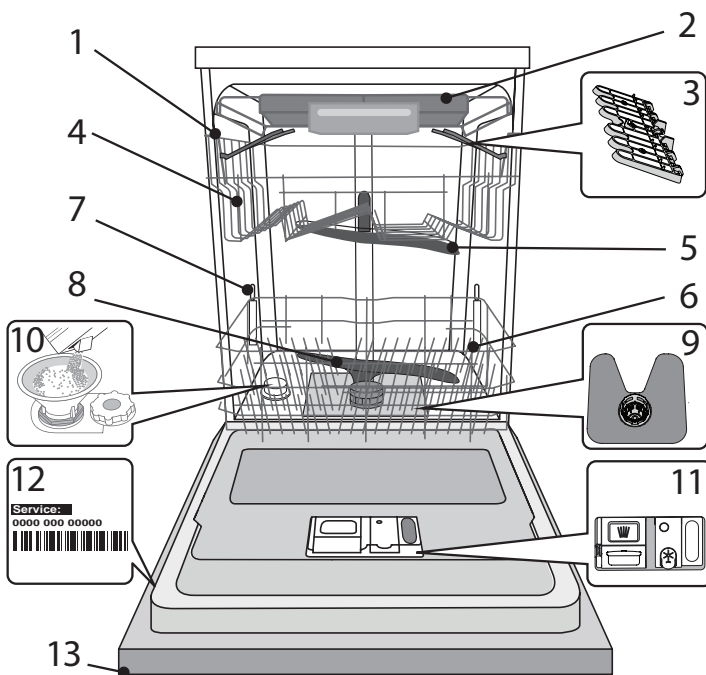

1. Upper rack
2. Cutlery rack
3. Foldable flaps
4. Upper rack height adjuster
5. Upper spray arm
6. Lower rack
7. Power Clean® support
8. Lower spray arm
9. Filter Assembly
10. Salt reservoir
11. Detergent and Rinse Aid dispensers
12. Rating plate
13. Control panel

CONTROL PANEL

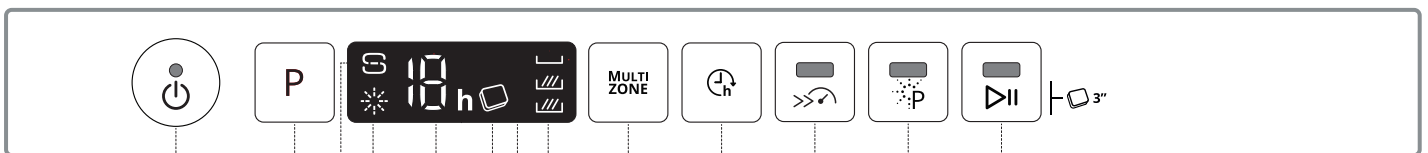

1. ON-OFF/Reset button with indicator light
2. Program selection button
3. Salt refill indicator light
4. Rinse Aid refill indicator light
5. Program number and delay time indicator
6. Tablet indicator light
7. Display
8. Multizone indicator lights
9. Multizone button
10. Delay button
11. Turbo button with indicator light
12. Power Clean® button with indicator light
13. START/Pause button with indicator light / Tab

FIRST TIME USE SALT, RINSE AID AND DETERGENT


ADVICE REGARDING THE FIRST TIME USE


After installation, remove the stoppers from the racks and the retaining elastic elements from the upper rack.

FILLING THE SALT RESERVOIR

The use of salt prevents the formation of LIMESCALE on the dishes and on the machine's functional components.

- It is mandatory that **THE SALT RESERVOIR NEVER BE EMPTY.**
- It is important to set the water hardness.

The salt reservoir is located in the lower part of the dishwasher (see *PRODUCT DESCRIPTION*) and must be filled when the **SALT REFILL indicator light**  in the control panel is lit.

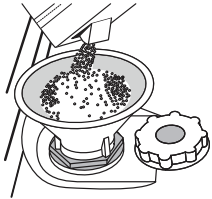

1. Remove the lower rack and unscrew the reservoir cap (anticlockwise).
2. **Only the first time you do this: fill the salt reservoir with water.**
3. Position the funnel (see figure) and fill the salt reservoir right up to its edge (approximately 1 kg); it is not unusual for a little water to leak out.
4. Remove the funnel and wipe any salt residue away from the opening.

Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash program (this could damage the water softener beyond repair).

Whenever you need to add salt, it is mandatory to complete the procedure before the beginning of the washing cycle to avoid corrosion.

SETTING THE WATER HARDNESS

To allow the water softener to work in a perfect way, it is essential that the water hardness setting is based on the actual water hardness in your house. This information can be obtained from your local water supplier.

The factory sets the default value for the water hardness.

- Switch on the appliance by pressing the **ON/OFF** button.
- Switch off the appliance by pressing the **ON/OFF** button.
- Hold down button **P** for 5 seconds, until you hear a beep.
- Switch on the appliance by pressing the **ON/OFF** button.
- The current selection level number and the salt indicator light both flash.
- Press button **P** to select the desired hardness level (see *WATER HARDNESS TABLE*).

Water Hardness Table				
Level		°dH German degrees	°fH French degrees	°Clark English degrees
1	Soft	0 - 6	0 - 10	0 - 7
2	Medium	7 - 11	11 - 20	8 - 14
3	Average	12 - 16	21 - 29	15 - 20
4	Hard	17 - 34	30 - 60	21 - 42
5	Very hard	35 - 50	61 - 90	43 - 62

- Switch off the appliance by pressing the **ON/OFF** button.

Setting is complete!

As soon as this procedure is complete, run a program without loading.


Only use salt that has been specifically designed for dishwashers.


After the salt has been poured into the machine, the SALT REFILL indicator light switches off.

If the salt container is not full, the water softener and the heating element may be damaged as a result of limescale accumulation.

Using of Salt is recommended with any type of dishwasher detergent.

FILLING THE RINSE AID DISPENSER

Rinse aid makes dish DRYING easier. The rinse aid dispenser **A** should be filled when the **RINSE AID REFILL indicator light**  in the control panel is lit.

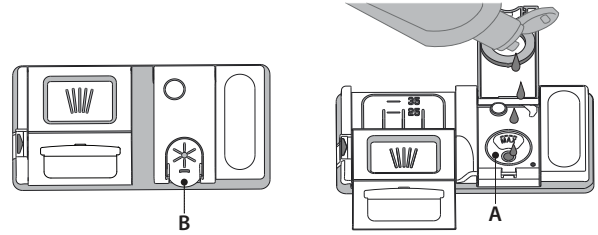

1. Open the dispenser **B** by pressing and pulling up the tab on the lid.
2. Pour in the rinse aid (max.110 ml), making sure it does not overflow from the dispenser. If this happens, clean the spill immediately with a dry cloth.
3. Press the lid down until you hear a click to close it.

NEVER pour the rinse aid directly into the appliance tub.

ADJUSTING THE DOSAGE OF RINSE AID

If you are not completely satisfied with the drying results, you can adjust the quantity of rinse aid used.

- Switch the dishwasher on using the **ON/OFF** button.
- Switch it off using the **ON/OFF** button.
- Press button **P** three times - a beep will be heard.
- Switch it on using the **ON/OFF** button.
- The current selection level number and rinse aid indicator light flash.
- Press button **P** to select the level of rinse aid quantity to be supplied.
- Switch it off using the **ON/OFF** button.

Setting is complete!


If the rinse aid level is set to ZERO (ECO), no rinse aid will be supplied. The LOW RINSE AID indicator light will not be lit if you run out of rinse aid.

A maximum of 4 levels can be set according to the dishwasher model. The factory setting is specific to the model, please follow instruction above to check this for your machine.

- If you see bluish streaks on the dishes, set a low number (1-2).
- If there are drops of water or limescale marks on the dishes, set a mid-range number (3-4).

FILLING THE DETERGENT DISPENSER

To open the detergent dispenser use the opening device C. Introduce the detergent into the dry dispenser D only. Place the amount of detergent for pre-washing directly inside the tub.

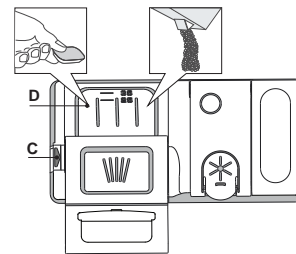

1. When measuring out the detergent refer to the mentioned earlier information to add the proper quantity. Inside the dispenser **D** there are indications to help the detergent dosing.
2. Remove detergent residues from the edges of the dispenser and close the cover until it clicks.
3. Close the lid of the detergent dispenser by pulling it up until the closing device is secured in place.

The detergent dispenser automatically opens up at the right time according to the program.

If all-in-one detergents are used, we recommend using the **TABLET** button, because it adjusts the program so that the best washing and drying results are always achieved.

Usage of detergent not designed for dishwashers may cause malfunction or damage to the appliance.

PROGRAMS TABLE

Program	Drying phase	NaturalDry	Available options *)	Duration of wash program (h:min)**)	Water consumption (litres/cycle)	Energy consumption (kWh/cycle)	
1. Eco	ECO 50°	✓	✓		3:10	9.5	0.83
2. 6 th Sense®	50-60°	✓	✓	MULTI ZONE	1:25 - 3:00	7.0 - 14.0	0.90 - 1.40
3. Intensive	65°	✓	✓	MULTI ZONE	2:50	16.0	1.60
4. Mixed	60°	✓	✓	MULTI ZONE	2:30	16.0	1.30
5. Fast Wash&Dry	50°	✓	✓	MULTI ZONE	1:25	11.5	1.10
6. Crystals	45°	✓	✓	MULTI ZONE	1:40	11.5	1.20
7. Rapid 30'	50°	-	-	MULTI ZONE	0:30	9.0	0.50
8. Silent	50°	✓	✓		3:30	15.0	1.15
9. Sanitizing	65°	✓	-		1:40	10.0	1.30
10. Prewash	-	-	-	MULTI ZONE	0:12	4.5	0.01
11. Self-Clean	65°	-	-		0:50	8.0	0.85

*) Not all options can be used simultaneously.

**) Values given for programs other than the program Eco are indicative only. The actual time may vary depending on many factors such as temperature and pressure of the incoming water, room temperature, amount of detergent, quantity and type of load, load balancing, additional selected options and sensor calibration. The sensor calibration can increase program duration up to 20 min.

PROGRAMS DESCRIPTION

Instructions on wash cycle selection.

1 ECO

Eco programme is suitable to clean normally soiled tableware, that for this use, it is the most efficient programme in terms of its combined energy and water consumption.

2 6th SENSE®

For normally soiled dishes with dried food residues. Senses the level of soiling on the dishes and adjusts the program accordingly. When the sensor is detecting the soil level an animation appears in the display and the cycle duration is updated.

3 INTENSIVE

Program recommended for heavily soiled crockery, especially suitable for pans and saucepans (not to be used for delicate items).

4 MIXED

Mixed soil. For normally soiled dishes with dried food residues.

5 FAST WASH&DRY

Normally soiled crockery. Everyday cycle, that ensures optimal cleaning and drying performance in shorter time.

6 CRYSTALS

Program for delicate items, which are more sensitive to high temperatures, for example glasses and cups.

7 RAPID 30'

Program to be used for half load of lightly-soiled dishes with no dried food residues. Does not include drying phase.

8 SILENT

Suitable for night-time operation of the appliance. Ensures optimal cleaning and drying performance with the lowest noise emission.

9 SANITIZING

Normally or heavily soiled crockery, with additional antibacterial wash. Can be used to perform maintenance of the dishwasher.

10 PREWASH

Use to refresh crockery planned to be washed later. No detergent to be used with this program.

11 SELF-CLEAN

To be carried out only when the dishwasher is EMPTY using specific detergents designed for dishwasher maintenance.

Notes:

Please note that cycle *Rapid 30'* is dedicated for lightly soiled dishes.

OPTIONS AND FUNCTIONS

OPTIONS can be selected directly by pressing the corresponding button (see *CONTROL PANEL*).

If an option is not compatible with the selected program see *PROGRAMS TABLE*, the corresponding LED flashes rapidly 3 times and beeps will sound. The option will not be enabled.

MULTI ZONE MULTIZONE

If there are not many dishes to be washed, a half loading may be used in order to save water, electricity and detergent. Select the program and then press the MULTIZONE button: the symbol of the chosen rack will appear on the display. By default the appliance washes dishes in all racks. To wash only the specific rack, press this button repeatedly:



shown on the display (only lower rack)



shown on the display (only upper rack)



shown on the display (only cutlery rack)



shown on the display (option is OFF and the appliance will wash dishes in all racks).

Remember to load the upper or lower rack only, and to reduce the amount of detergent accordingly. If upper rack is removed, please apply detergent directly to tub instead of detergent dispenser.



DELAY

The start time of the program may be delayed for a period of time between **1** and **12** hours.

1. Press the DELAY button: the corresponding «h» symbol appears on the display; each time you press the button, the time (1h, 2h, etc. up to max. 12h) from the start of the selected wash cycle will be increased.
2. Select the wash program, press the START/PAUSE button and within 4 seconds close the door: the timer will begin counting down.
3. Once this time has elapsed, the indicator light «h» switches off and the wash cycle begins.

To adjust the delay time and select a shorter period of time, press the DELAY button. To cancel it, press the button repeatedly until the selected delayed start indicator light «h» switches off.

The DELAY function cannot be set once a wash cycle has been started.



TURBO

This option can be used to reduce the duration of the main programs while maintaining the same washing and drying performance levels.

After selecting the program, press the TURBO button and the indicator light will switch on. To deselect the option, press the same button again.



POWER CLEAN®

Thanks to the additional power jets this option provides a more intensive and powerful wash in the lower rack, in the specific area. This option is recommended for washing pots and casseroles. Press this button to activate POWER CLEAN (the indicator lights up).



TABLET (Tab)

This setting allows you to optimize the performance of the program according to the type of detergent used. Press the START/PAUSE button for 3 seconds (the corresponding symbol will light up) if you use combined detergents in tablet form (rinse aid, salt and detergent in 1 dose).

If you use powder or liquid detergent, this option should be off.



OPERATION INDICATOR

A LED light projected on the floor indicates that the dishwasher is working. One of the following operating modes can be selected:

- a) Disabled function.
- b) When the cycle starts the light goes on for few seconds, stays off during the cycle and flashes at the end of the cycle.
- c) The light stays on during the cycle and flashes at the end of the cycle (default mode).

If the delayed start was set, the light goes on either for the first few seconds or the entire duration of the countdown, based on whether mode b) or c) was set.

The light goes off every time the door is opened. To select the mode you prefer, switch on the machine, hold down button **P** until one of the three letters appears on the display, press button **P** until you reach the desired letter (or mode), hold down button **P** to confirm the selection.

Note: If *NaturalDry* is active and it opens the door, then Operation Indicator will not flash at the end of cycle.

NaturalDry

NaturalDry is a convection drying system which automatically opens the door during/after drying phase to ensure exceptional drying performance every day. Door opens at the temperature that is safe to your kitchen furniture, thus door will not be opened when the option of TURBO is on.

As additional steam protection, special designed protection foil is added together with the dishwasher. To see how to mount protection foil please refer to (*INSTALLATION GUIDE*).


NaturalDry functionality could be disabled by the user as follows:

1. Go to the Dishwasher software menu pressing and holding **P** button (6 sec).
2. You are currently in Light Control Menu (please refer to OPERATION INDICATOR description), if you don't want to change anything please press and hold **P** button (until one of the two letters appears on the display).
3. You switched to NaturalDry Control Menu, you could change status of NaturalDry functionality by pressing **P** button:
 - E** – enabled **d** – disabled

To confirm the change and exit from the Control Menu please press and hold **P** button (3 sec).

LOADING THE RACKS


CUTLERY RACK

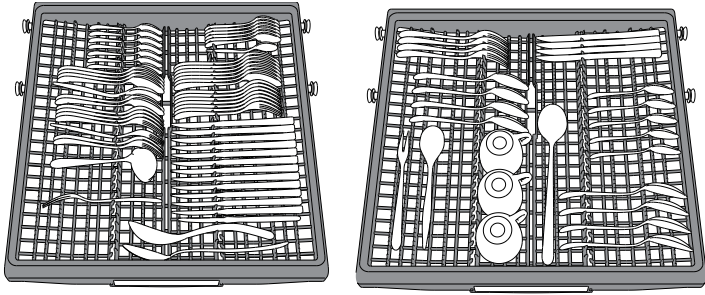

The third rack was designed to house the cutlery. Arrange the cutlery as shown in the figure. A separate arrangement of the cutlery makes collection easier after washing and improves washing and drying performance.


Knives and other utensils with sharp edges must be positioned with the blades facing downwards.

The geometry of the rack makes it possible to place such small items as coffee cups in the area in the middle.

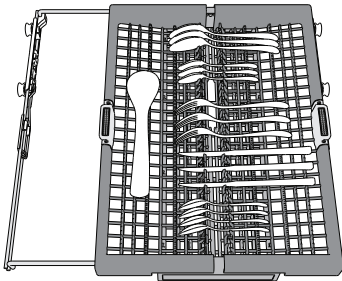

The cutlery basket is equipped with two sliding side trays to make the most of the height of the space below and enable the loading of high items into upper rack.

UPPER RACK

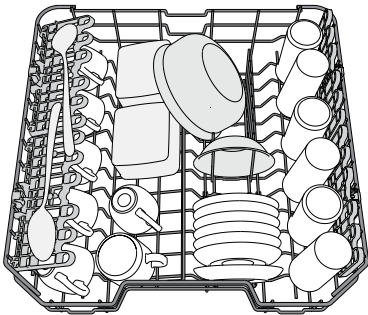

(loading example for the upper rack)

Load delicate and light dishes: glasses, cups, saucers, low salad bowls.


The upper rack has tip-up supports which can be used in a vertical position when arranging tea/ dessert saucers or in a lower position to load bowls and food containers.

ADJUSTING THE HEIGHT OF THE UPPER RACK

The height of the upper rack can be adjusted: high position to place bulky crockery in the lower basket and low position to make the most of the tip-up supports by creating more space upwards and avoid collision with the items loaded into lower rack.

The upper rack is equipped with a **Upper Rack height adjuster** (see figure), without pressing the levers, lift it up by simply holding the rack sides, as soon as the rack is stable in its upper position. To restore to the lower position, press the levers **A** at the sides of the rack and move the basket downwards.

We strongly recommend that you do not adjust the height of the rack when it is loaded. NEVER raise or lower the basket on one side only.

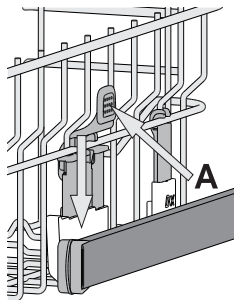


FOLDABLE FLAPS WITH ADJUSTABLE POSITION

The side foldable flaps can be fold or unfold to optimize the arrangement of crockery inside the rack. Wine glasses can be placed safely in the foldable flaps by inserting the stem of each glass into the corresponding slots.

Depending on the model:


- to unfold the flaps there is needed to slide it up and rotate or release it from the snaps and pull it down.
- to fold the flaps there is needed to rotate it and slide flaps down or pull it up and attach flaps to the snaps.

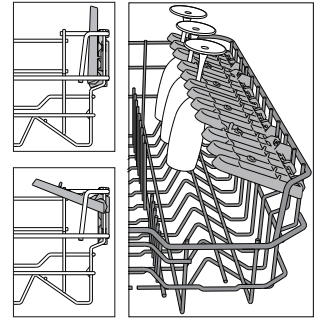

LOWER RACK

For pots, lids, plates, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides to avoid interferences with the spray arm.


The lower rack has tip-up supports which can be used in a vertical position when arranging plates or in a horizontal position (lower) to load pans and salad bowls easily.

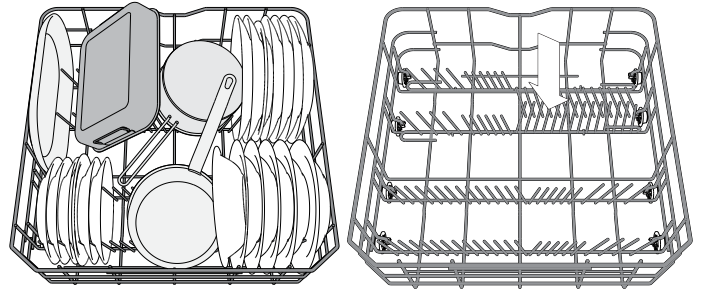

(loading example for the lower rack)

POWER CLEAN®

Power Clean® uses the special water jets in the rear of cavity to wash more intensively the high dirty items. The lower rack has a Space Zone, a special pull-out support in the rear of the rack that can be used to support frying

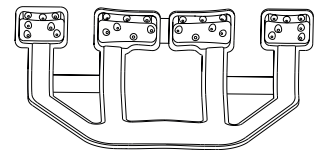


pans or baking pans in upright position, thus taking up less space.

Placing the pots/casseroles faced to the Power Clean® component please activate the **POWER CLEAN®** on the panel.

How to use Power Clean®:

1. Adjust the Power Clean® area G folding down the rear plate holders to load pots.
2. Load pots and casseroles inclined vertically in Power Clean® area. Pots have to be inclined towards the power water jets.

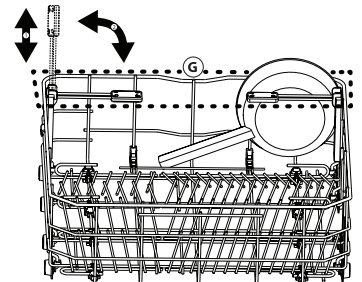

DAILY USE

1. CHECK WATER CONNECTION

Check that the dishwasher is connected to the water supply and that the tap is open.

2. SWITCH ON THE DISHWASHER

Open the door and press the **ON/OFF** button.

3. LOAD THE RACKS (see *LOADING THE RACKS*).

4. FILLING THE DETERGENT DISPENSER

5. CHOOSE THE PROGRAM AND CUSTOMISE THE CYCLE

Select the most appropriate program in accordance with the type of crockery and its soiling level (see *PROGRAMS DESCRIPTION*) by pressing the **P** button.

Select the desired options (see *OPTIONS AND FUNCTIONS*).

6. START

Start the wash cycle by pressing **START/Pause** button (led is lit) and closing the door within 4 sec. When the program starts you hear a single beep. If the door was not closed within 4sec., the alarm sound will be played. In this case, open the door, press **START/Pause** button and close the door again within 4 sec.

7. END OF WASH CYCLE

The end of the wash cycle is indicated by beeps and by the flashing of the wash cycle number on the display. Open the door and switch off the appliance by pressing the **ON/OFF** button.

Wait for a few minutes before removing the crockery - to avoid burns. Unload the racks, beginning with the lower one.

The machine will switch off automatically during certain extended periods of inactivity, in order to minimise electricity consumption. If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly.

MODIFYING A RUNNING PROGRAM

If a wrong program was selected, it is possible to change it, provided that it has only just begun: open the door, press and hold the **ON/OFF** button, the machine will switch off.

Switch the machine back on using the **ON/OFF** button and select the new wash cycle and any desired options; Start the wash cycle by pressing **START/Pause** button (led is lit) and closing the door within 4 sec.

ADDING EXTRA CROCKERY

Without switching off the machine, open the door (**START/Pause** led starts blinking) (**be ware of HOT steam!**) and place the crockery inside the dishwasher. Press the **START/Pause** button and close the door within 4 sec., the cycle will resume from the point at which it was interrupted.

ACCIDENTAL INTERRUPTIONS

If the door is opened during the wash cycle, or if there is a power cut, the cycle stops. Once the door has been closed or the electricity supply is restored, press the **START/Pause** button and close the door within 4 sec., the cycle will resume from the point at which it was interrupted.

ADVICE AND TIPS

TIPS

Before loading the baskets, remove all food residues from the crockery and empty the glasses. **You do not need to rinse beforehand under running water.**

Arrange the crockery so that it is held in place firmly and does not tip over; and arrange the containers with the openings facing downwards and the concave/convex parts placed obliquely, thus allowing the water to reach every surface and flow freely.

Warning: lids, handles, trays and frying pans do not prevent the sprayer arms from rotating.

Place any small items in the cutlery basket.

Very soiled dishes and pans should be placed in the lower basket because in this sector the water sprays are stronger and allow a higher washing performance.

After loading the appliance, make sure that the sprayer arms can rotate freely.

UNSUITABLE CROCKERY

- Wooden crockery and cutlery.
- Delicate decorated glasses, artistic handicraft and antique crockery. Their decorations are not resistant.
- Parts in synthetic material which do not withstand high temperatures.
- Copper and tin crockery.
- Crockery soiled with ash, wax, lubricating grease or ink.

The colours of glass decorations and aluminium/silver pieces can change and fade during the washing process. Some types of glass (e.g. crystal objects) can become opaque after a number of wash cycles too.

DAMAGE TO GLASS AND CROCKERY

- Only use glasses and porcelain guaranteed by the manufacturer as dishwasher safe.
- Use a delicate detergent suitable for crockery.
- Collect glasses and cutlery from the dishwasher as soon as the wash cycle is over.

TIPS ON ENERGY SAVING

- When the household dishwasher is used according to the manufacturer's instructions, **washing tableware in a dishwasher usually consumes less energy and water than hand dishwashing.**
- In order to maximize dishwasher efficiency it is recommended to **initiate the wash cycle once dishwasher is fully loaded.** Loading the household dishwasher up to the capacity indicated by the manufacturer will contribute to energy and water savings. Information on correct loading of tableware can be found in Loading chapter. In case of partial loading it is recommended to use dedicated wash options if available (Half load/ Zone Wash, Multizone), filling up only selected racks. Incorrect loading or overloading the dishwasher may increase resources usage (such as water, energy and time, as well as increase noise level), reducing cleaning and drying performance.
- Manual pre-rinsing of tableware items leads to increased water and energy consumption and is not recommended.

HYGIENE

To avoid odour and sediment which can be accumulated in the dishwasher **please run a high temperature program at least one a month.** Use a tea spoon of detergent and run it without the loading to clean your appliance.

CARE AND MAINTENANCE

CLEANING THE FILTER ASSEMBLY

Regularly clean the filter assembly so that the filters do not clog and that the waste water flows away correctly.


Using dishwasher with clogged filters or foreign objects inside filtration system or sprayarms may cause unit malfunction resulting in lose of performance, noisy work or higher resources usage.

The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water.

The dishwasher must not be used without filters or if the filter is loose.

At least once per month or after each 30 cycles, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below:

1. Turn the cylindrical filter **A** in an anti-clockwise direction and pull it out (Fig 1).
2. Remove the cup filter **B** by exerting a slight pressure on the side flaps (Fig 2).
3. Slide out the stainless-steel plate filter **C** (Fig 3).
4. In case you find foreign objects (such as broken glass, porcelain, bones, fruit seeds etc.) **please remove them carefully**.
5. Inspect the trap and remove any food residues. **NEVER REMOVE** the wash-cycle pump protection (black detail) (Fig 4).

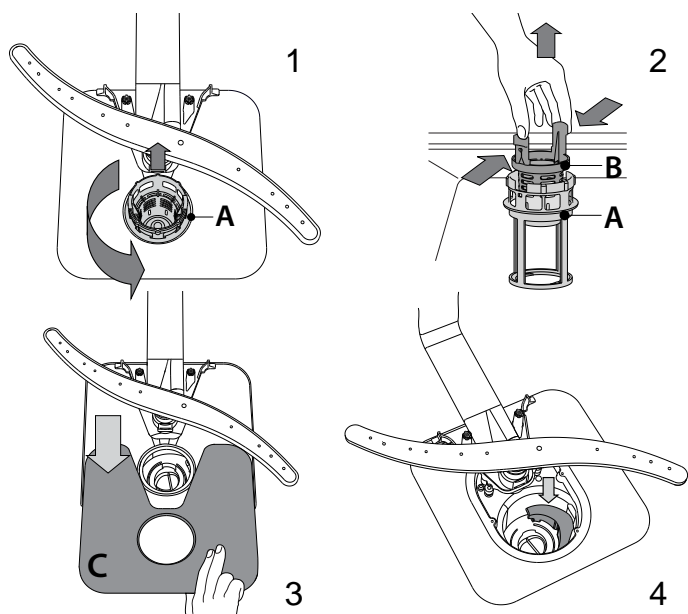


After cleaning the filters, re-place the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher.

CLEANING THE WATER INLET HOSE


If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher.

CLEANING THE SPRAY ARMS

On occasions, food residue may become encrusted onto the spray arms and block the holes used to spray the water. It is therefore recommended that you check the arms from time to time and clean them with a small non-metallic brush.

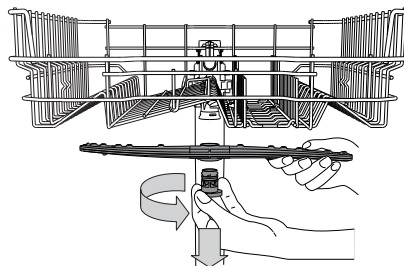

To remove the upper spray arm, turn the plastic locking ring in an anti-clockwise direction. The upper spray arm should be replaced so that the side with the greater number of holes is facing upwards.

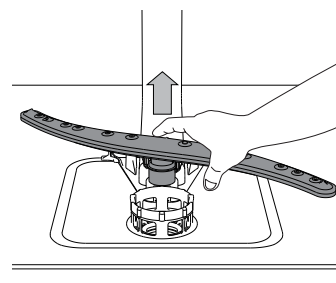

The lower spray arm may be removed by pulling it upwards.

WATER SOFTENING SYSTEM

Water softener automatically reduces water hardness, consequently preventing scale buildup on heater, contributing also to better cleaning efficiency.

This system regenerates itself with salt, therefore it is required to refill salt container when empty.



Frequency of regeneration depends on water hardness level setting - regeneration takes place once per **6** Eco cycles with water hardness level set to **3**.

Regeneration process starts in final rinse and finishes in drying phase, before cycle ends.

TROUBLESHOOTING

In case your dishwasher doesn't work properly, check if the problem can be solved by going through the following list.

For other errors or issues please contact authorized After-sales Service which contact details can be found in the warranty booklet.

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
 Salt indicator is lit	Salt reservoir is empty. (After refill the salt indicator may remain lit for several wash cycles).	Refill reservoir with salt. Adjust water hardness (for more information - see <i>FIRST TIME USE - SALT, RINSE AID AND DETERGENT</i>).
 Rinse aid indicator is lit	Rinse aid dispenser is empty. (After refill the rinse aid indicator may remain lit for several wash cycles).	Refill dispenser with rinse aid (for more information - see <i>FIRST TIME USE - SALT, RINSE AID AND DETERGENT</i>).
The dishwasher won't start or does not respond to commands.	The appliance has not been plugged in properly.	Insert the plug into the socket.
	Power outage.	For safety reasons, dishwasher will not re-start automatically when power returns. Open dishwasher door, press START/Pause button and close the door within 4 seconds.
	The dishwasher door is not closed. NaturalDry pin is not pulled in.	Vigorously push the door until you hear the "click".
	Cycle is interrupted by door opening for more than 4 seconds.	Press START/Pause and close the door within 4 seconds.
It does not respond to commands. Display shows: 9 or 12 and On/Off LED is blinking rapidly.	It does not respond to commands. Display shows: 9 or 12 and On/Off LED is blinking rapidly.	Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and restart the program. If problem persists, unplug the appliance for 1 minute, then plug it back in.
The dishwasher won't drain. Display shows: 3 and On/Off LED is blinking rapidly	The wash cycle has not finished yet.	Wait until the wash cycle finishes.
	The drain hose is bent.	Check that the drain hose is not bent (see <i>INSTALLATION INSTRUCTION</i>).
	The sink drain pipe is blocked.	Clean the sink drain pipe.
	The filter is clogged up with food residues.	Clean the filter (see <i>CLEANING THE FILTER ASSEMBLY</i>).
The dishwasher makes excessive noise.	The dishes are rattling against each.	Position the crockery correctly (see <i>LOADING THE RACKS</i>).
	An excessive amount of foam has been produced.	The detergent has not been measured out correctly or it is not suitable for use in dishwashers (see <i>FILLING THE DETERGENT DISPENSER</i>). Restart the current cycle by switching OFF the dishwasher, then switch it on again, select a new program, press START/Pause and close the door within 4 seconds. Please do not add any detergent.
The dishes are not clean.	The crockery has not been arranged properly.	Arrange the crockery correctly (see <i>LOADING THE RACKS</i>).
	The spray arms cannot rotate freely, being hindered by the dishes.	Arrange the crockery correctly (see <i>LOADING THE RACKS</i>).
	The wash cycle is too gentle.	Select an appropriate wash cycle (see <i>PROGRAMS TABLE</i>).
	An excessive amount of foam has been produced.	The detergent has not been measured out correctly or it is not suitable for use in dishwashers (see <i>FILLING THE DETERGENT DISPENSER</i>).
	The cap on the rinse aid compartment has not been shut correctly.	Make sure the cap of the rinse aid dispenser is closed.
	The filter is soiled or clogged.	Clean the filter assembly (see <i>CARE AND MAINTENANCE</i>).
	There is no salt.	Fill the salt reservoir (see <i>FILLING THE SALT RESERVOIR</i>).
The dishwasher does not fill the water. Display shows: H , 6 and On/Off LED is blinking rapidly	No water in the water supply or the tap is closed.	Make sure there is water in the water supply or the tap running.
	The inlet hose is bent.	Make sure the inlet hose is not bent (see <i>INSTALLATION</i>) reprogram the dishwasher and reboot.
	The sieve in the water inlet hose is clogged; it is necessary to clean it.	After having carried out the verification and cleaning, turn off and turn on the dishwasher and restart a new program.
Dishwasher finishes the cycle prematurely. Display shows: 15 and On/Off LED is blinking rapidly	Drain hose positioned too low or siphoning into home sewage system.	Check if end of drain hose is placed at correct height (see <i>INSTALLATION</i>). Check for siphoning into home sewage system, install air admittance valve if necessary.
	Air in water supply.	Check water supply for leaks or other issues letting air inside.


MAINTENANCE AND TROUBLESHOOTING GUIDE

For more information, see the *Use and Care Guide*.

The *Use and Care Guide* can be obtained by:

- After-Sales Service, phone number see in warranty booklet.
- Download from website: www.whirlpool.com.hk

When you contact the After-Sales Service, you must provide the codes shown on the rating plate attached to the left or right side inside the door of the dishwasher. The phone number is listed on the website: www.whirlpool.com.hk

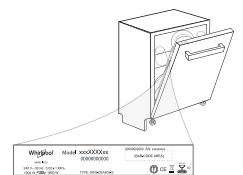

HEALTH & SAFETY GUIDE

IMPORTANT TO BE READ AND OBSERVED

Before using the appliance, read these safety instructions. Keep them nearby for future reference. These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the appliance or incorrect setting of controls.

⚠ Very young children (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

PERMITTED USE

⚠ CAUTION: the appliance is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system.

⚠ This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments.

⚠ The maximum number of place settings is shown in the product sheet.

⚠ The door should not be left in the open position - risk of tripping. The open appliance door can only support the weight of the loaded rack when pulled out. Do not rest objects on the door or sit or stand on it.

⚠ WARNING: Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open. Check that the detergent receptacle is empty after completion of the wash cycle.

⚠ WARNING: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position - risk of cuts.

⚠ This appliance is not for professional use. Do not use the appliance outdoors. Do not store explosive or flammable substances (e.g. gasoline or aerosol cans) inside or near the appliance - risk of fire. The appliance must be used only to wash domestic dishes in accordance with the instructions in this manual. The water in the appliance is not potable. Use only detergent and rinse additives designed for an automatic dishwasher. When adding a water softener (salt), run one cycle

immediately with the machine empty, to avoid corrosion damage to internal parts. Store the detergent, rinse aid and salt out of reach of children. Shut off the water supply and unplug or disconnect the power before servicing and maintenance. Disconnect the appliance in the event of any malfunction.

INSTALLATION

⚠ The appliance must be handled and installed by two or more persons - risk of injury. Use protective gloves to unpack and install - risk of cuts. Connect the dishwasher to the water mains using only new hose sets. The old hose sets should not be reused. All hoses must be securely clamped to prevent them coming loose during operation. All local waterboard regulations must be complied with. Water supply pressure 0.05 - 1.0 MPa. The appliance must be placed against the wall or built into furniture to limit the access to its rearside. For dishwashers having ventilation openings in the base, the openings must not be obstructed by a carpet.


⚠ Installation, including water supply (if any) and electrical connections, and repairs must be carried out by a qualified technician. Do not repair or replace any part of the appliance unless specifically stated in the user manual. Keep children away from the installation site. After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service. Once installed, packaging waste (plastic, styrofoam parts etc.) must be stored out of reach of children - risk of suffocation. The appliance must be disconnected from the power supply before any installation operation - risk of electrical shock. During installation, make sure the appliance does not damage the power cable - risk of fire or electrical shock. Only activate the appliance when the installation has been completed.


If installing the dishwasher at the end of a row of units making the side panel accessible, the hinge area must be covered to avoid risk of injury. The inlet water temperature depends on the dishwasher model. If the installed inlet hose is marked "25° C Max", the maximum allowed water temperature is 25°C. For all other models the maximum allowed water temperature is 60°C.


Do not cut hoses and, in the case of appliances fitted with a waterstop system, do not immerse the plastic casing containing the inlet hose in water. If hoses are not long enough, contact your local dealer. Make sure the inlet and drain hoses are kink-free and are not crushed. Before using the appliance for the first time, check the water inlet and drain hose for leaks. Make sure that the four feet are stable and resting on the floor, adjusting them as required, and check that the dishwasher is perfectly levelled using a spirit level.

ELECTRICAL WARNINGS

The rating plate is on the edge of the dishwasher door (visible when the door is open).


 It must be possible to disconnect the appliance from the power supply by unplugging it if plug is accessible, or by a multi-pole switch installed upstream of the socket and the appliance must be earthed, in conformity with national electrical safety standards.

 Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the appliance when you are wet or barefoot. Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.


 If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard - risk of electrical shock.

If the fitted plug is not suitable for your socket outlet, contact a qualified technician. Do not pull the power supply cable. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.

CLEANING AND MAINTENANCE


 **WARNING: Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation - risk of electrical shock. Never use steam cleaning equipment.**

DISPOSAL OF PACKAGING MATERIALS

The packaging material is 100% recyclable and is marked with the recycle symbol . The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

DISPOSAL OF HOUSEHOLD APPLIANCES







This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent negative consequences for the environment and human health.

The  symbol on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.



ENERGY SAVING TIPS




ECO: it is the standard cleaning cycle, it is suitable to clean normally soiled tableware and that it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.


INSTALLATION GUIDE

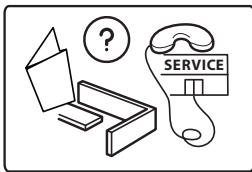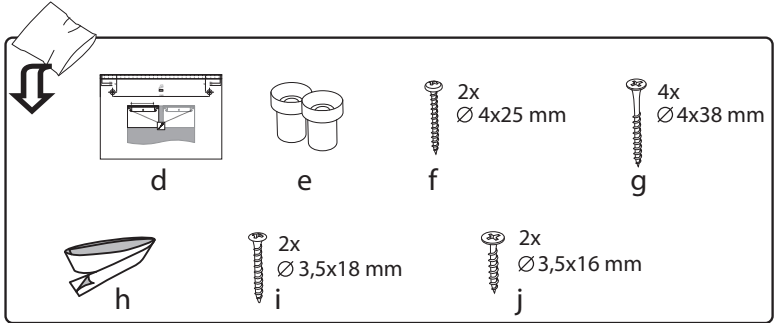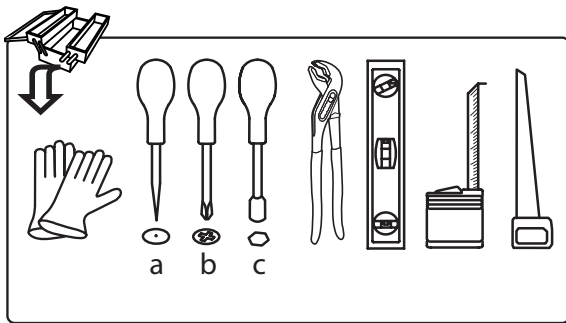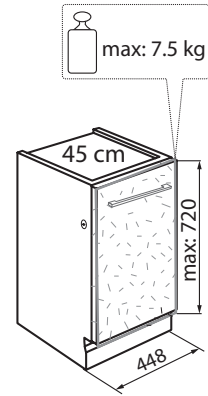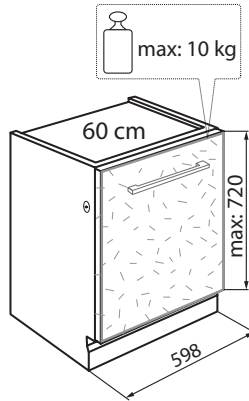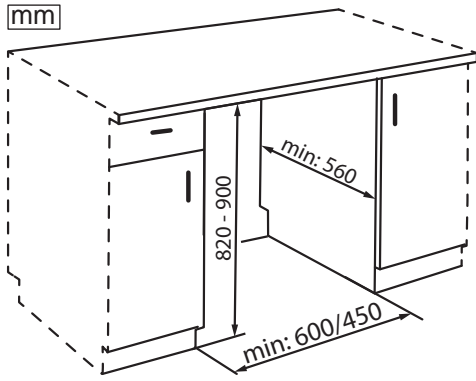


60 cm	45 cm	
41/42 dB	41 / 42 dB	43 / 44 dB
k 585 mm	k 435 mm	k 435 mm
	l 327 mm	

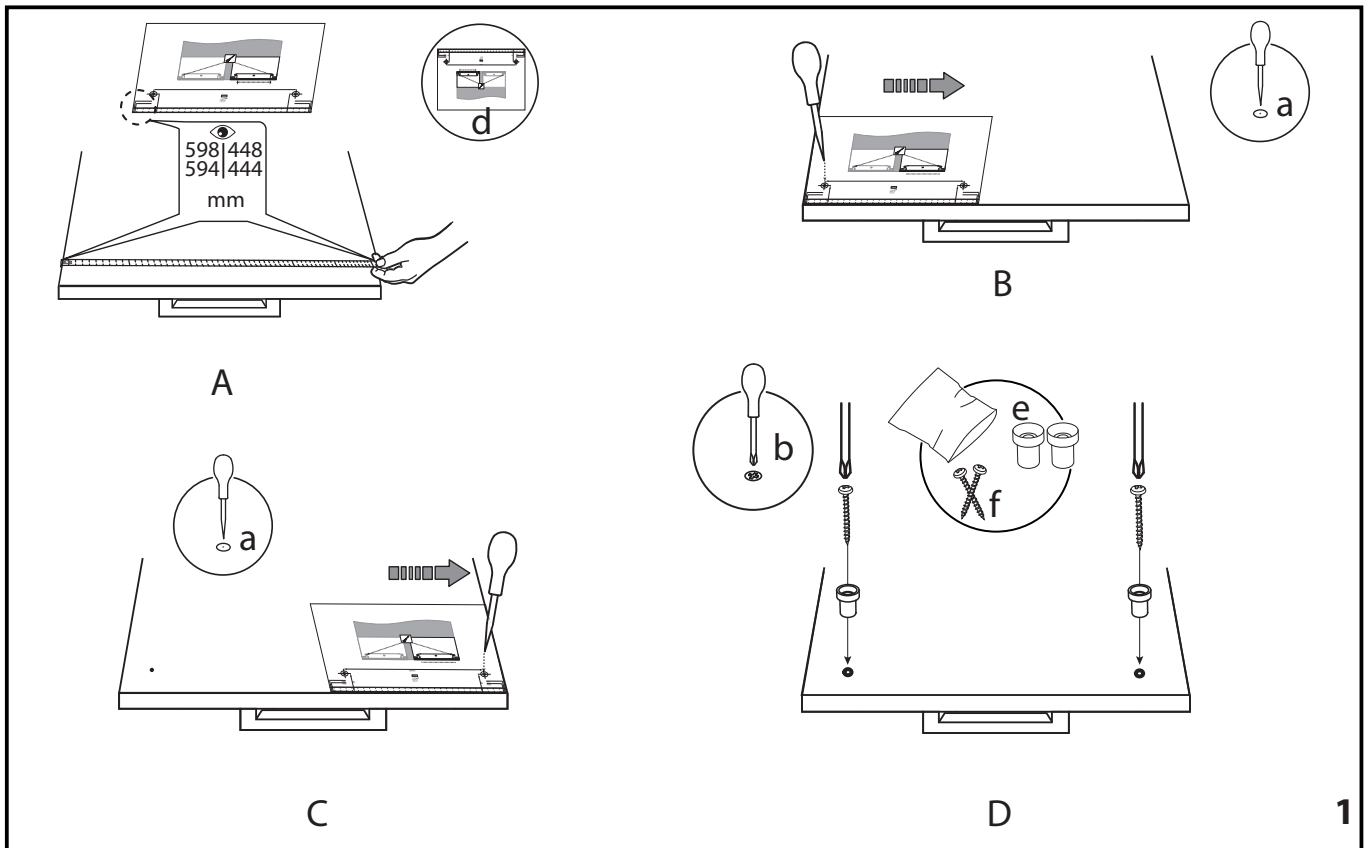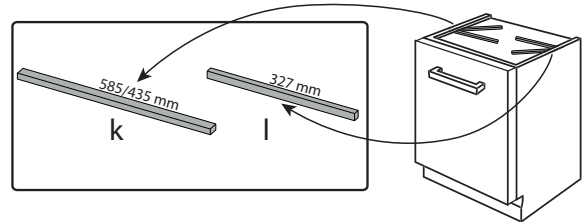

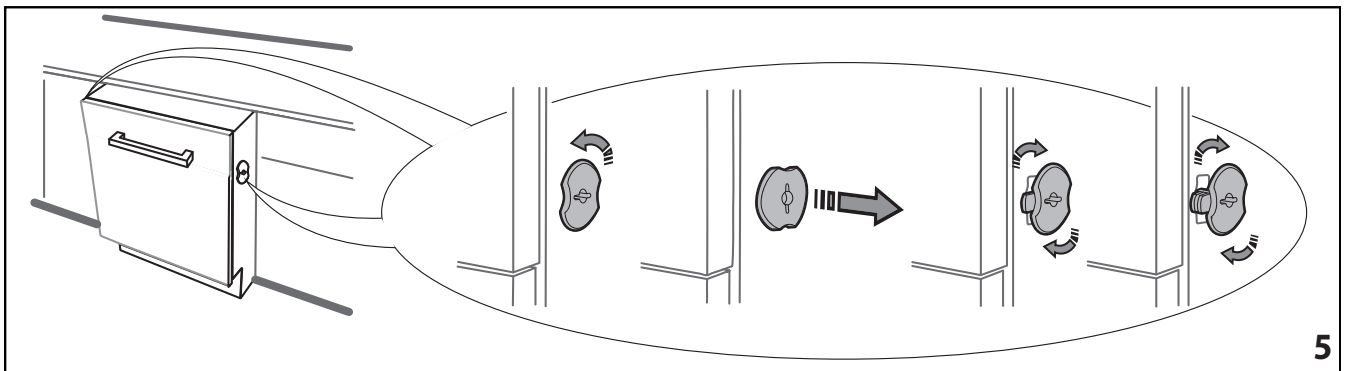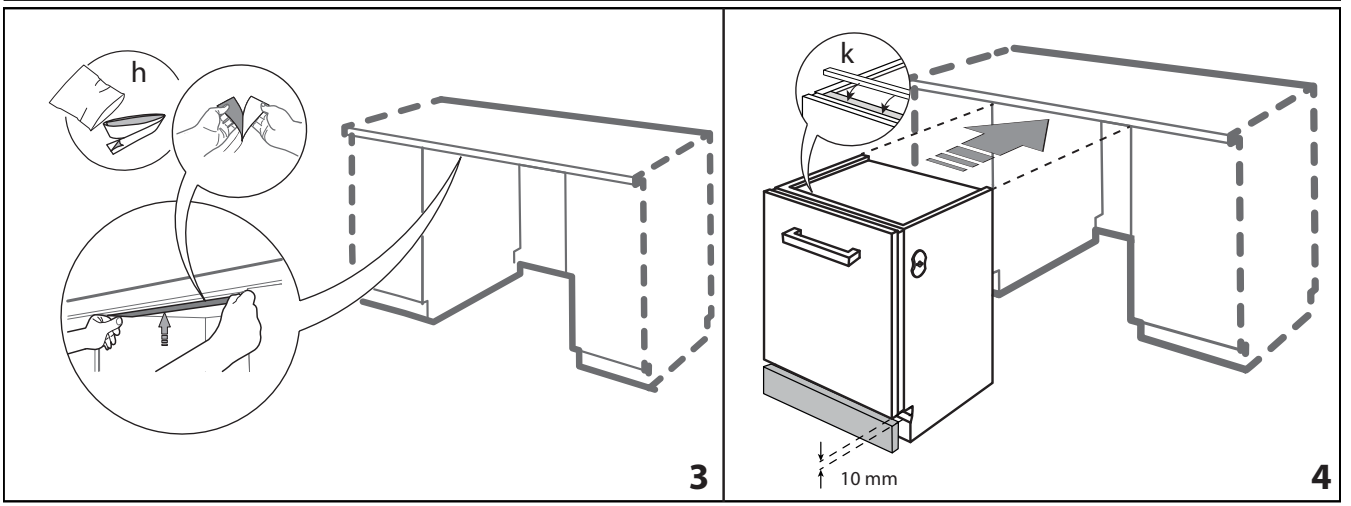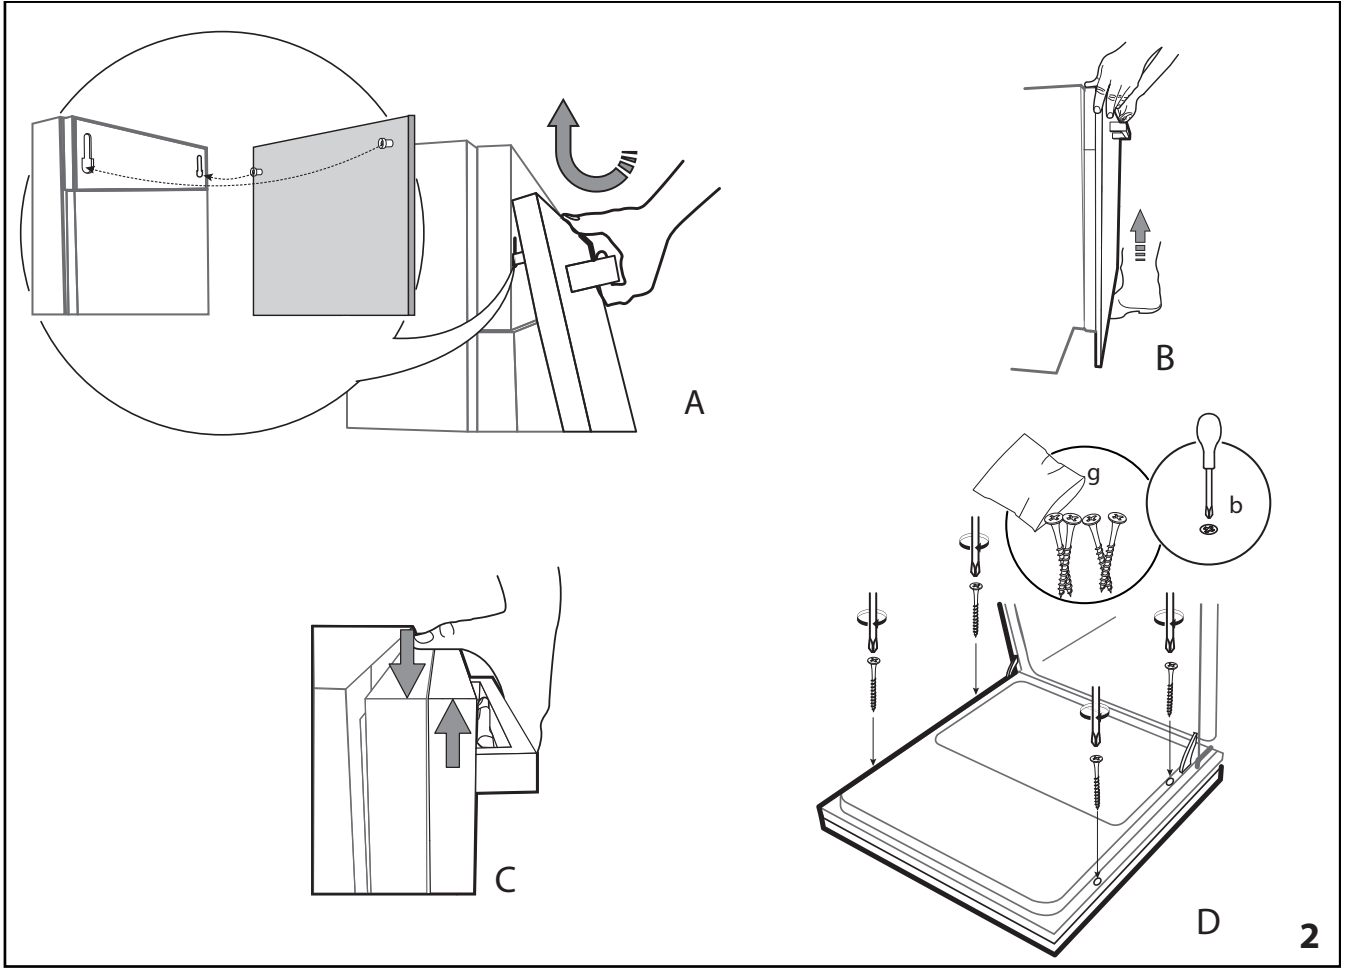


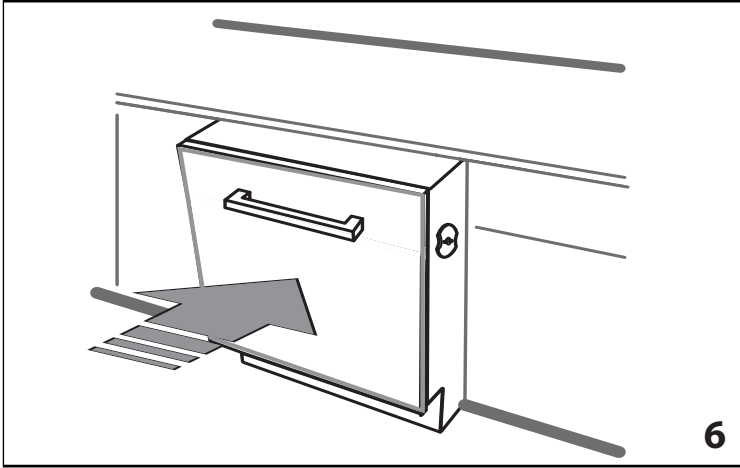


6

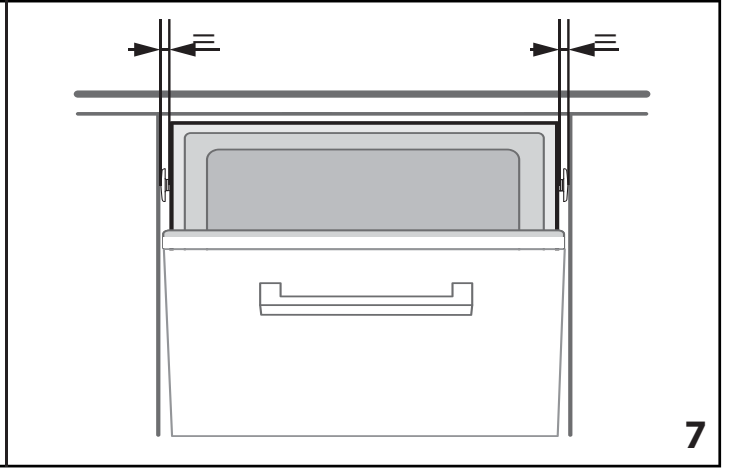


7

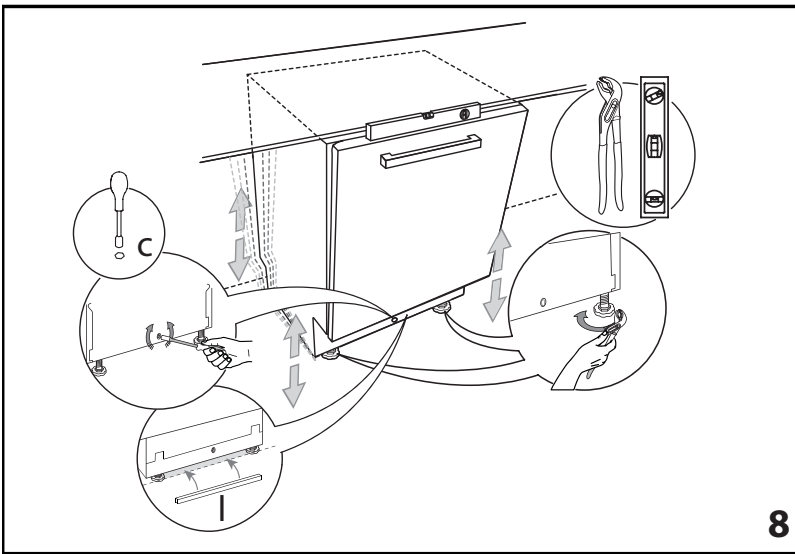

8

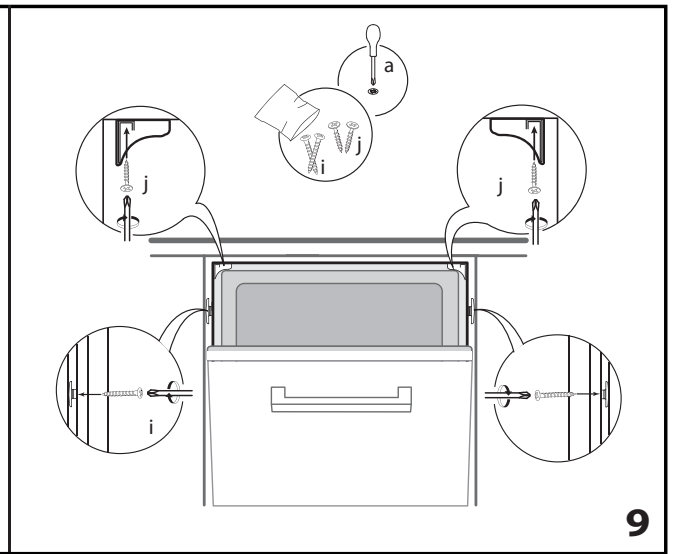

9

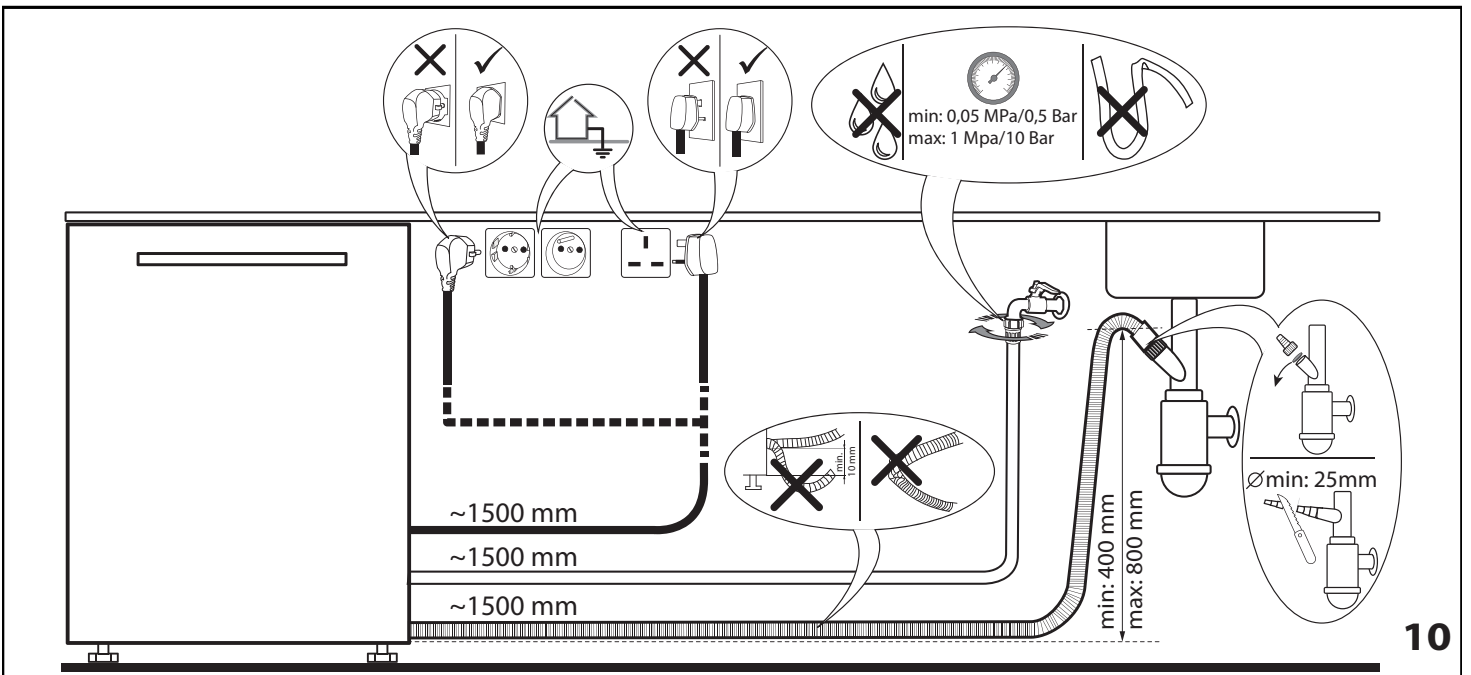

10

使用說明書

索引

使用說明書	17
產品介紹	18
產品結構	18
控制面板	18
首次使用 (洗碗碟機專用軟水劑、吹乾劑、清潔劑)	19
程序表	20
程序	20
選項及功能	21
裝置層架	22
日常使用	23
建議及提示	23
保養及維修	24
故障排除	25
健康及安全指引	26-27
安裝指引	28-30

使用說明書




感謝您購買惠而浦產品
為了獲得更完善的服務，
請於www.whirlpool.com.hk註冊您的產品

使用洗碗碟機前請先細閱產品安全指引


產品介紹

產品結構

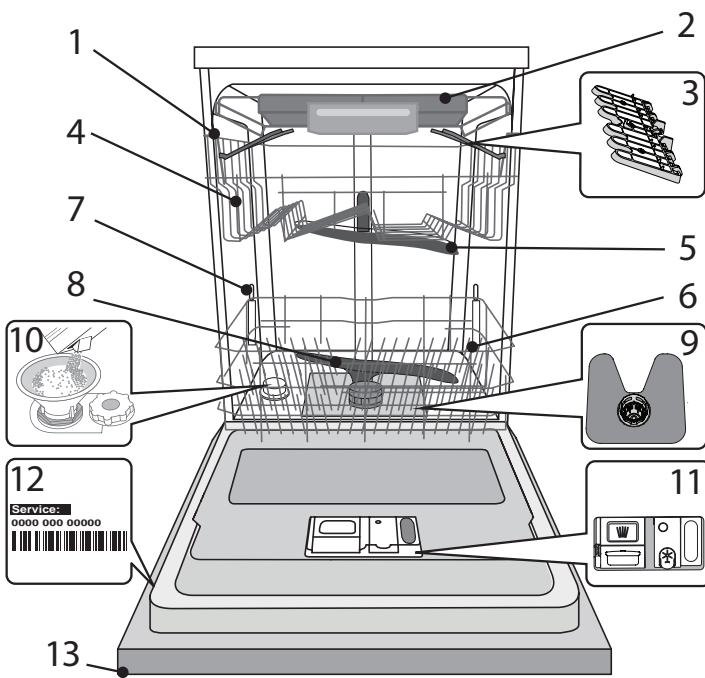

1. 上層餐具層架
2. 餐具層架
3. 可摺疊盛載器
4. 上層餐具層架高度調節器
5. 上層噴灑臂
6. 下層餐具層架
7. Power Clean® 裝置
8. 下層噴灑臂
9. 過濾器組件
10. 洗碗碟機專用軟水劑儲存器
11. 洗碗碟機專用清潔劑及吹乾劑儲存器
12. 銘牌
13. 控制面板

控制面板

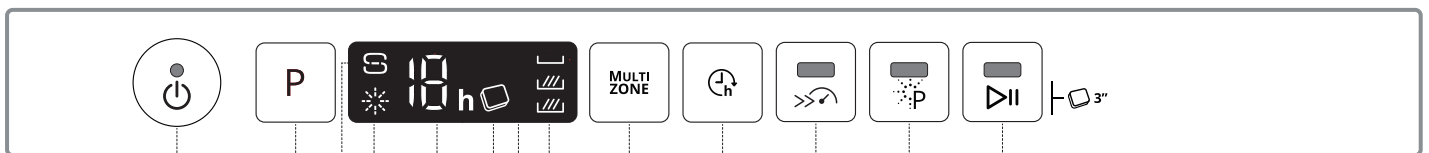

1. 電源「開/關/重設」鍵及指示燈
2. 「程序」鍵及指示燈
3. 「洗碗碟機專用軟水劑注入提示」指示燈
4. 「洗碗碟機專用吹乾劑注入提示」指示燈
5. 「程序號碼」及「延遲時間顯示」指示燈
6. 「洗碗碟機專用清潔片」指示燈
7. 顯示屏
8. 「多區域清洗選擇」指示燈
9. 「多區域清洗選擇」鍵
10. 「預校開機時間」鍵
11. 「快速」鍵及指示燈
12. Power Clean® 鍵及指示燈
13. 「啟動/暫停」鍵及指示燈 / 「洗碗碟機專用清潔片」鍵

首次使用

洗碗碟機專用軟水劑、吹乾劑、清潔劑

首次使用的建議


安裝機件完畢後，首先將層架上的栓塞及上層層架的彈性緩衝物件移除。

注入專用軟水劑

使用洗碗碟機專用軟水劑可防止餐具及機件上形成水垢。

- 注意：專用軟水劑儲存器不可空著。
- 注意：必須設定水的硬度。

專用軟水劑儲存器位於洗碗碟機內底部（請參閱「產品介紹」篇章）。必須於控制面板上的「專用軟水劑注入提示」指示燈亮時將儲存器注滿。

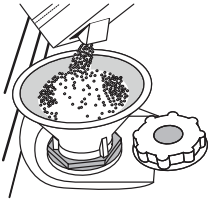

1. 拉出下層層架，扭開儲存器的蓋子(逆時針方向)。
2. 僅供首次使用時：請將軟水劑容器注滿水。
3. 放置漏斗(見左圖)並倒入專用軟水劑(約1公斤)；若過程中有少量水洩漏，實屬正常。
4. 移除漏斗，並擦去開口處的專用軟水劑殘留物。

確認儲存器的蓋子已擰緊，以確保在清洗過程中沒有清潔劑進入儲存器內(這可能會損壞軟水劑而無法修復)。每當您需要添加專用軟水劑時，我們建議在清洗程序開始前進行添加。

設定水的硬度

為了使軟水劑能完善地運作，我們必須確保水的硬度設置是依照家居水喉水的硬度而定。有關信息可從本地供水商獲得。一般的出廠設置為平均(3)水硬度。

- 按下電源「開/關 / 重設」鍵，以啟動洗碗碟機。
- 按下電源「開/關 / 重設」鍵以關閉洗碗碟機。
- 按住「啟動/暫停」鍵5秒，直至聽到「呖」一聲。
- 按下電源「開/關 / 重設」鍵，以啟動洗碗碟機。
- 當前水硬度的所屬級別和「洗碗碟機專用軟水劑注入提示」指示燈均會閃爍。
- 按下「程序」鍵P以選擇所需的水硬度水平(請參閱「軟水/硬水程度表」)。

軟水/硬水程度表

程度	°dH	°fH
1 軟	0 - 6	0 - 10
2 中度	7 - 11	11 - 20
3 平均	12 - 17	21 - 30
4 硬	17 - 34	31 - 60
5 最硬	35 - 50	61 - 90

- 按下電源「開/關 / 重設」鍵，以關閉洗碗碟機。

設置完成！


完成上述步驟後，立即於不加載碗碟的情況下運行一次程序。只能使用專為洗碗機設計的專用軟水劑。

倒入專用軟水劑後，「洗碗碟機專用軟水劑注入提示」指示燈將熄滅。

若沒有加入專用軟水劑，軟水劑和加熱配件可能因此而損壞。使用清潔劑是建議加入軟水劑一起使用。

注入吹乾劑

吹乾劑可使碗碟更容易乾透，必須於控制面板上的「洗碗碟機吹乾劑注入提示」指示燈亮時將吹乾劑注入吹乾劑盒A內。

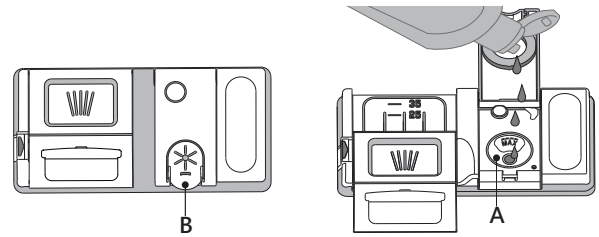

1. 按下及拉起吹乾劑盒蓋子(B)
 2. 小心地倒入吹乾劑(最多110ml)直至填滿盒子，避免液體溢出。若吹乾劑滲漏，請立即用乾布抹乾。
 3. 按下蓋子，直至聽到「喀噠」一聲，以確認關閉蓋子。
- 切勿將吹乾劑直接倒入洗碗碟機內桶。

調整吹乾劑的劑量

若乾透程度未如理想，可以調整吹乾劑的使用量以加強效果。

- 按下電源「開/關 / 重設」鍵，以啟動洗碗碟機。
- 按下電源「開/關 / 重設」鍵，以關閉洗碗碟機。
- 按「P」鍵3次，會聽到「呖」一聲。
- 按下電源「開/關 / 重設」鍵，以啟動洗碗碟機。
- 當前所選吹乾劑級別及「洗碗碟機專用吹乾劑注入提示」指示燈均會閃爍。
- 按下「程序」鍵P以選擇所需吹乾劑的劑量級別。
- 按下電源「開/關 / 重設」鍵，以關閉洗碗碟機。

設置完成！


若吹乾劑級別設置為0(ECO)，系統將不會使用吹乾劑。若吹乾劑已用畢，「低用量洗碗碟機專用吹乾劑注入提示」指示燈將不會亮起。

根據洗碗碟機型號，最多可設置4個級別。一般的出廠設置為中級，請按照說明為您的機器進行檢查。

- 如果你看到餐具上有藍色條紋，請設置較小的數字(1-2)。
- 如果餐具上有水滴或水垢，請設置一個較大的數字(3-4)。

注入清潔劑

按一下(C)鍵打開清潔劑盒。請確保清潔劑只放入乾爽的裝置D內，然後把用於預洗的清潔劑份量直接倒入內桶。

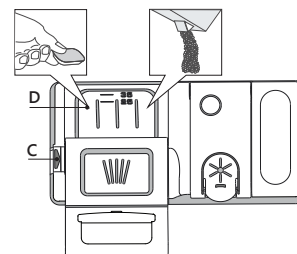

1. 測量清潔劑時，請參閱早前提及的資訊以添加適當份量。裝置D內有刻度標示以幫助施加適當清潔劑份量。
2. 移除清潔劑盒框邊多餘的清潔劑殘留物。關閉蓋子直至聽到「喀噠」一聲。
3. 拉起清潔劑盒的蓋子，直至關閉裝置到位，清潔劑盒的蓋子關上。

根據程序，清潔劑盒會在合適的時間自動打開。如果使用多合一清潔劑，我們建議使用「洗碗碟機專用清潔片」按鈕，因為程序會調整至獲得最佳的洗滌和烘乾的效果。使用非洗碗碟機專用清潔劑可能會導致機器故障或損毀。

程序表

程序	烘乾階段	自然風乾	可用選項*	預設清洗程序時間 (小時:分鐘)**	耗水量 (公升/循環)	能源消耗 (千瓦小時/循環)	
1. 省電洗	ECO 50°	✓	✓		3:10	9.5	0.83
2. 第六感智能感應清洗®	50-60°	✓	✓	MULTI ZONE	1:25 - 3:00	7.0 - 14.0	0.90 - 1.40
3. 密集洗	65°	✓	✓	MULTI ZONE	2:50	16.0	1.60
4. 混合洗	60°	✓	✓	MULTI ZONE	2:30	16.0	1.30
5. 快洗快乾	50°	✓	✓	MULTI ZONE	1:25	11.5	1.10
6. 玻璃清洗	45°	✓	✓	MULTI ZONE	1:40	11.5	1.20
7. 30分鐘快洗	50°	-	-	MULTI ZONE	0:30	9.0	0.50
8. 寧靜洗	50°	✓	✓		3:30	15.0	1.15
9. 高溫除菌	65°	✓	-		1:40	10.0	1.30
10. 預洗	-	-	-	MULTI ZONE	0:12	4.5	0.01
10. 自動清洗	65°	-	-		0:50	8.0	0.85

*) 並非所有選項都可以同時使用。

**) 顯示器或本說明書中顯示的清洗程序時間是根據標準條件計算的估計值。實際時間可能因許多因素而異，例如進水的溫度和壓力、室溫、清潔劑的數量、負載量和類型、負載平衡、其他選擇的選項和傳感器的校準。傳感器校準可將清洗程序時間延長至20分鐘。

程序

清洗程序的詳細說明。

1 省電洗

適用於一般骯髒的餐具，此為標準清洗程序，在能源消耗和耗水量方面，綜合消耗的結果來看，效率為最高。

2 第六感智能感應清洗®

適用於一般骯髒，並其表面附有已乾透的食物殘渣的餐具。系統會根據餐具上的污染程度相應地調整程序，調整時顯示屏會出現動畫，系統會自動更新清洗程序的時間。

3 密集洗

建議用於嚴重骯髒的餐具，特別適用於平底鍋和燉鍋（不適用於精緻易碎的物品）。

4 混合洗

混合污漬。適用於一般骯髒並附有乾透的食物殘渣的餐具。

5 快洗快乾

適用於一般骯髒的碗碟，適用於日常操作的清洗程序，可確保在更短的時間內實現最佳的清潔和乾燥性能。

6 玻璃清洗

適用於對高溫有較高敏感度的精緻物品（例如玻璃和杯子）。

7 30分鐘快洗

程序用於清洗半負載的輕度骯髒，並其表面沒有乾透的食物殘渣的餐具。此程序不包含烘乾階段。

8 寧靜洗

適合用於夜間操作。能確保於低噪音運作下展現最高的清洗及烘乾效能。

9 高溫除菌

適用於一般或嚴重骯髒的餐具，附有除菌效能。可用於保養洗碗碟機之用。

10 預洗(冷水)

適用於待洗的餐具。此程序不需使用任何清潔劑。

11 自動清洗

僅當洗碗碟機為空機時使用。這是專門為保養洗碗碟機而設計的清洗程序。

備註：

30分鐘快洗專門用於輕度骯髒的碗碟。

選項及功能

透過按下相應按鈕，可直接揀選所需選項(請參閱「控制面板」篇章)。

如果某個選項與所選程序不兼容(請參閱「程序表」)，相應的LED指示燈將快速閃爍3次，並發出「呖」一聲。屆時該選項將不會成功被啟用。

MULTI ZONE 「多區域清洗選擇」

如所需清洗的餐具數量不多，可以使用多區域清洗選擇設定，以節省水、電和清潔劑。選擇程序並按下「多區域清洗選擇」按鈕；按鈕上方的指示燈將會亮起，目標層架的符號將呈現於顯示屏上。在一般情況下，程式會預設成清洗所有層架。如欲清洗特定層架，需重覆按此按鈕：



顯示屏上顯示 (只清洗下層層架)



顯示屏上顯示 (只清洗上層層架)



顯示屏上顯示 (只清洗餐具層架)



顯示屏上顯示(選項為OFF，設備將清洗所有層架中的餐具)。

請謹記：僅裝載上層層架或下層層架時，請相應地減少清潔劑的量。

若上層層架已經移除，請直接將洗碗碟機專用清潔劑加入桶內，而非加入清潔劑盒。



「預校開機時間」

可選擇延遲1至24小時才啟動清洗程序。

1. 按下「預校開機時間」按鈕；符號(h)會相應地顯示；每按一下按鈕，時間將由所選清洗程序的時間前疊加(1h, 2h, 至最多12h)。
2. 揀選清洗程序，按下「啟動/暫停」鍵，於4秒內關上洗碗碟機機門，計時器開始倒數；
3. 時間結束後，(h)指示燈熄滅，清洗程序自動開始。

若需調整預校開機時間並選擇較短的時間段，請直接按下「預校開機時間」按鈕。若想取消預校開機時間，重覆按下「預校開機時間」按鈕直至所選的預校時間指示燈(h)熄滅。

一旦清洗程序啟動，將無法再設置「預校開機時間」選項。



TURBO快速

此功能可用作縮短主要清洗程序所需的時間，同時不影響清洗程序的清洗及烘乾效能。

於完成揀選清洗程序後，按下「快速」按鈕，相應指示燈會亮起。若要取消選項，可再次按下「快速」按鈕。



POWER CLEAN®

配備額外的強力噴灑臂，為下層層架提供更密集，更強勁的清洗效果。此選項建議用於清洗煲和鍋。按此按鍵啟動POWER CLEAN® (指示燈將會亮起)。



「洗碗碟機專用清潔片」

此設置允許您根據所用清潔劑的類型來優化程序的表現。按下「高溫清洗」按鈕3秒鐘，如果您使用片劑形式的多合一洗碗碟機專用清潔片(軟水劑、吹乾劑和清潔劑)，相應的符號將亮起。

如果使用洗碗碟機專用清潔粉末或清潔液，則應關閉此選項。



操作提示燈

地板上投射的LED燈顯示洗碗機正在運行中。可從下列各項中選擇一個操作模式：

- a) 關閉此功能
- b) 當清洗循環開始時，指示燈會亮幾秒鐘；在清洗循環期間，指示燈會保持熄滅狀態，當清洗循環結束時，指示燈會閃爍。
- c) 指示燈在清洗循環期間保持點亮，並在循環結束時閃爍(默認模式)。

如果設置了「預校開機時間」，則會根據用戶對於「操作提示燈」的設置(模式b或c)，指示燈在前幾秒鐘亮起；或於整個計時過程中保持點亮。

每次打開機門，燈都會熄滅。若要揀選指定操作模式，請先啟動機器，按住按鍵P，直到三個字母中其中一個字母顯示於顯示屏上，或按一下按鍵P直到所需的字母(或模式)出現，然後按住按鍵P確認選擇。

注意：若「自然風乾」啟動了而機門呈打開狀態，操作指示燈於清洗循環結束後將不會閃爍。

自然風乾

自然風乾是一個對流風乾系統，透過於烘乾程序進行過程中/完成後，洗碗碟機自動打開機門從而達至非凡的風乾效果。機門會於洗碗碟機達至安全合適的溫度時自動打開。機門不會於進行「快速」程序時打開。


洗碗碟機會加入特別設計的阻擋器作為額外蒸氣保護(視乎洗碗碟機型號而定)。有關增加阻擋器，請參閱「安裝指引」。用家可透過以下步驟關閉自然風乾設定：

1. 按住按鍵P(6秒鐘)，即可進入洗碗碟機軟件設置。
2. 您目前處於燈光設置中(請參閱「操作提示燈」說明)，如果您不想更改任何內容，請按住按鍵P(直到看見兩個字母其中一個出現於顯示屏上)。
3. 若想切換到「自然風乾」設置，可以通過按住按鍵P更改「自然風乾」的設定：
E – 啟用 d – 停用

要確認更改並退出控制設置，請按住按鍵P(3秒)。


裝置層架

餐具層架

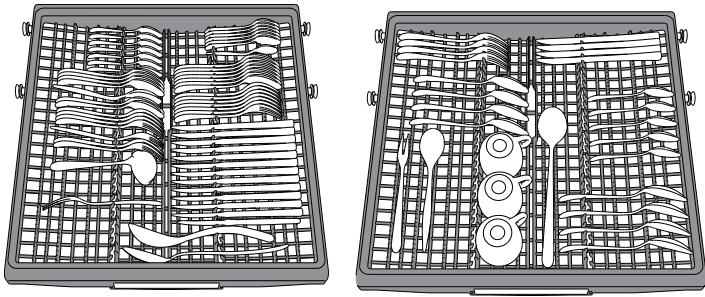


第三層架的設計是用於放置餐具。如圖所示排列餐具。餐具層架設計使餐具能獨立擺放，使清洗後收集變得更容易，同時亦改善清洗和烘乾性能。

餐刀和其他具有鋒利邊緣的餐具必須定位擺放，刀片朝下。層架的幾何形狀使小物品(如咖啡杯)能安放在層架中央。

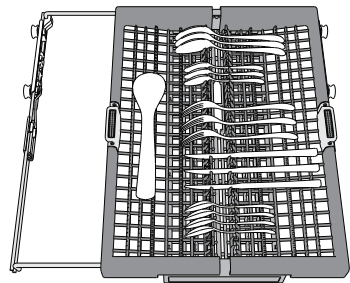

餐具層架由兩個可拉趟的盤組成，可騰出更多空間於上層層架放置較大型的碗碟及餐具。

上層層架

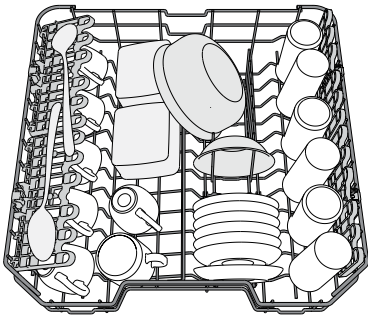


(上層層架的加載示範)

擺放精緻和輕巧的器具：玻璃、杯子、碟子、沙律碗。上層層架設有翻倒支撐設計，支撐部分垂直時可支撐擺放茶杯/醬料碟；支撐部分放下時可擺放碗及其他食物盒。

調整上層層架高度

上層餐具層架的高度可以調節：調高後，以便在下層層架和低位置放置較大型的器具；調低後，可為上層騰出更多空間，避免上下層器具互相碰撞而打翻。

上層層架備配有高度調節器(見圖)，不需按下手柄，只需握住層架兩側即可將其抬起並固定位置。要恢復到較低位置，請按下上層層架兩側的桿A並向下移動籃子。

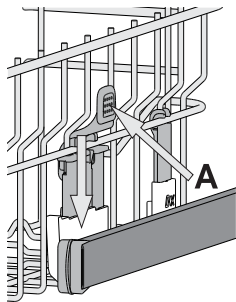


我們強烈建議於層架載滿時不要調節層架高度。切勿僅升高/降低單側層架。

可調節位置的可摺疊盛載器

側面可摺疊的盛載器可以設定在三個不同的高度，以優化機架內的餐具放置。

將酒杯腳卡在可摺疊的盛載器上，令酒杯可以安放於洗碗碟機內。視乎洗碗碟機型號而定：


- 若想收起盛載器，需要將盛載器向上滑動並旋轉以從按扣上釋放，然後將其拉下。
- 若想展開盛載器，需要將盛載器向下滑動並旋轉以從按扣上釋放，然後將其拉下。

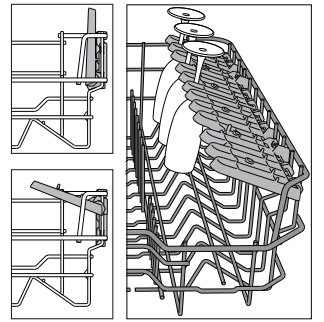

下層層架

用於煲、蓋、碟子、沙拉碗、餐具等。大型碟子和蓋子應放在兩側，以避免阻擋噴灑臂。

下層層架具有翻倒支撐設計，既可垂直擺放碟子，亦可將平底鍋和沙律碗平放於下層層架上。

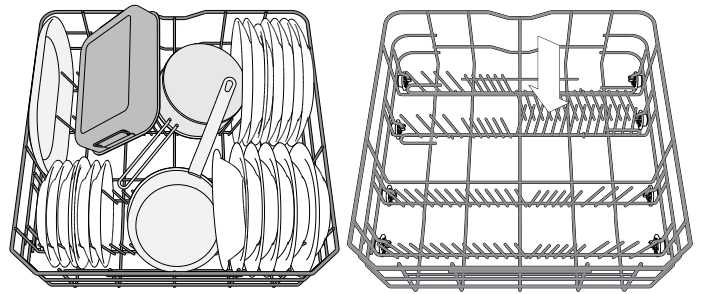



(下層層架的加載示範)

POWER CLEAN®

Power Clean® 配備特別的噴灑系統，於後方以高強度的水柱清洗高航髒程度的碗碟。下層層架設有一個特別的空間，可從層架後方拉出翻倒支撐設計，用來支撐平底鍋或烤盤，令其可以豎直放置，從而節省佔用空間。將平底鍋或烤盤面向Power Clean® 組件後，請於操控面板上揀選 **POWER CLEAN®** 選項。

如何使用Power Clean®:

1. 調整Power Clean® 空間 G 向下折疊翻倒支撐設計，以放置平底鍋。
2. 在 Power Clean® 區域內垂直擺放平底鍋或烤盤。平底鍋或烤盤必須傾斜向噴灑系統。

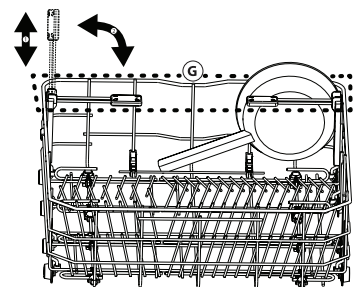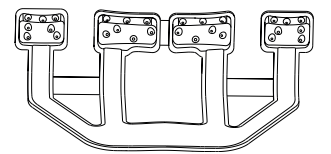

日常使用

1. 檢查水喉連接

檢查洗碗碟機是否連接到供水系統並且水龍頭是否已經打開。

2. 開啟洗碗碟機

打開機門並按下電源「開/關」鍵。

3. 裝置層架 (請參閱「裝置層架」篇章)。

4. 注入清潔劑盒

5. 選擇程序並自訂功能選項

按下「程序」(P) 按鈕，根據餐具類型及其污染程度選擇最合適的程序 (參見程序說明)。

選擇所需的選項 (請參閱「選項和功能」篇章)。

6. 開始

按「啟動/暫停」鍵開始清洗程序(LED燈將會亮起)，於4秒內關上洗碗碟機機門。程序啟動時，您會聽到「呖」聲。若未能於4秒內關上洗碗碟機機門，警報聲將會響起。此時，請再次打開洗碗碟機機門，再次按「啟動/暫停」鍵並於4秒內關上機門。

7. 結束清洗程序

清洗程序結束時會發出「呖」聲，顯示屏上清洗程序的號碼會閃爍顯示。打開門，按「開/關」鍵，以關閉設備。

請等待數分鐘才取出餐具 - 以免燙傷。並請從下層層架開始卸載。

若洗碗碟機靜止一段時間，設備將會自動關閉，以減少電力消耗。如果餐具只是輕微弄髒，或者在放入洗碗碟機之前已經用水沖洗過，那麼可適當地減少清潔劑的使用量。

修改運行中的程序

如果選擇了錯誤的程序，可於程序剛啟動時作出修改：打開機門，按住電源「開/關」鍵以關閉洗碗碟機。

按下電源「開/關」鍵重新啟動機器，再次選擇新的清洗程序和所需的功能選項，按「啟動/暫停」鍵(LED燈亮起)，於4秒內關上機門並開始清洗程序。

添加額外餐具

不需關閉機器，打開門(「啟動/暫停」鍵指示燈將會閃爍)(注意：小心熱蒸氣!) 將餐具放入洗碗碟機內，按「啟動/暫停」鍵並於4秒內關上機門，程序將從中斷點開始重啟。

運行中的程序中斷

如果在清洗程序期間打開門或者斷電，清洗程序會暫停。當機門關閉或電源恢復後，按「啟動/暫停」鍵並於4秒內關上機門，程序將再次從中斷點開始重啟。

建議及提示

小貼士

在裝入餐具層架前，先清空玻璃餐具內所有物件並從餐具中去除所有的食物殘渣。**不需要預先沖洗餐具。**

適當放置餐具使其牢牢固定於層架上，不會翻倒。將容器開口朝向下放置，凹/凸部分傾斜放置，從而令水能觸及每個表面並自由流動。

警告：確保蓋子、手柄、托盤和煎鍋不會阻止噴灑臂旋轉。

將所有小物品放在餐具籃中。

非常骯髒的餐具和平底鍋應放置於下層層架裡，因為在這個區域噴水更強，洗滌效能更高。

完成放置餐具及層架後，必須確保噴灑臂可以自由旋轉。

不合適的餐具

- 木製餐具。
- 配有精緻但耐用性較低的裝飾的玻璃，藝術工藝品和古董。
- 合成材料中不能承受高溫的物件。
- 銅和錫餐具。
- 被灰、蠟、潤滑劑或油墨弄髒的餐具。

在清洗過程中，玻璃裝飾和鉛/銀碎片的顏色會發生變化和褪色。某些類型的玻璃(例如水晶)也可能在多次清洗程序後變得不透明。

對玻璃餐具和其他餐具的損害

- 只能使用製造商保證的適用於洗碗碟機的玻璃和餐具。
- 使用適合精緻餐具的清潔劑。
- 清洗程序結束後，立即從洗碗碟機中取出玻璃餐具和其他餐具。

節約能源小貼士

- 根據製造商的說明使用家用洗碗碟機時，在洗碗碟機中洗滌餐具通常比手洗餐具消耗更少的能源和水。
- 為了最大程度地提高洗碗碟機的效率，建議在洗碗碟機滿載後才運行清洗程序。根據製造商指示的容量放置餐具及碗碟，將有助節省能源和水。有關正確放置餐具的信息，請參閱「裝置層架」篇章。如只放置一半碗碟，可行情況下建議使用特定的功能選項(半負載/區域清洗、多區域清洗選擇)，並只放置於特定的層架。洗碗碟機的不正確負載或超載，可能會增加資源的使用量(例如水，能源和時間，並增加噪音水平)，從而降低潔淨和乾燥性能。
- 不建議手動預洗餐具，因為這樣會導致用水和能源消耗增加。

衛生

為避免氣味和沈澱物積聚於洗碗碟機內，請至少每月運行一次高溫程序。使用茶匙份量的清潔劑，並在沒有裝載的情況下運行高溫程序來清潔您的設備。

保養及維修

清潔過濾器組件

定期清潔過濾器組件，使過濾器不會堵塞，並使污水正確排出。


如果洗碗碟機的過濾器堵塞，或者過濾系統或噴灑臂內有異物，可能會導致設備故障，導致洗碗碟機清潔性能下降、運作時產生噪音或耗用大量能源。

過濾器組件由三層過濾器組成，這些過濾器可於水循環的過程中從水中去除食物殘渣。

請勿在沒有過濾網或過濾網鬆脫的情況下使用洗碗碟機。

每個月一次或經過30個循環後，需要檢查過濾器組件，並在必要時使用非金屬刷子並按照以下說明在流水下徹底清洗過濾器：

1. 沿逆時針方向轉動圓柱形過濾器A並將其拉出（圖1）。
2. 通過在側翼上施加輕微壓力來移除杯式過濾器B（圖2）。
3. 滑動不鏽鋼板式過濾器C（圖3）。
4. 若發現任何外來物（例如碎玻璃、瓷、骨頭、水果種子等）請小心移除。
5. 檢查疏水閥並清除任何殘留物。切勿拆除洗滌循環泵保護器（黑色細節）（圖4）。

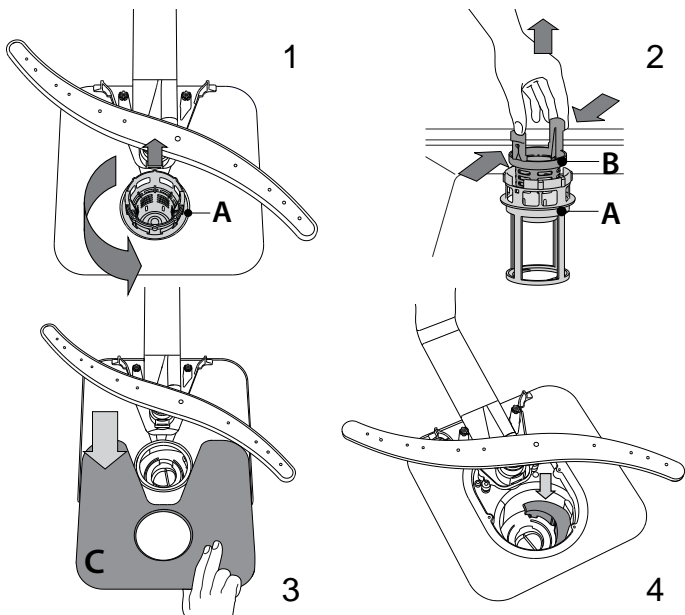


為確保洗碗碟機的運行暢順及有效，清潔過濾器後，必須重新將過濾器組件固定到正確位置。

清潔進水口軟管


如果水管是新的或長時間未使用，請在進行必要的連接之前讓水運行以確保其清澈且無雜質。如果不採取這種預防措施，進水口可能會堵塞並損壞洗碗碟機。

清潔噴灑臂

食物殘渣有時可能會殘留在噴灑臂的外殼上，並堵塞噴水孔。因此，我們建議您時常檢查噴灑臂，並用細小的非金屬刷子清潔它們。

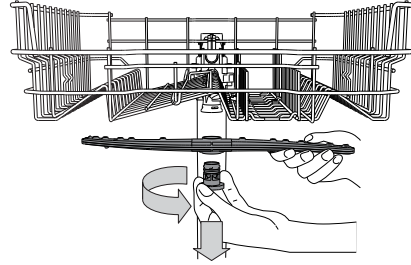

如要卸下上層噴灑臂，請按逆時針方向轉動。裝上層噴灑臂時，孔數較多的一側朝上。

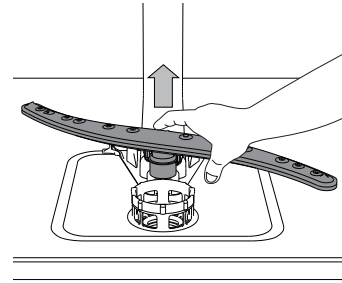

可以通過向上拉動下層噴灑臂來移除下層噴灑臂。

軟水系統

軟水器會自動降低水的硬度，從而防止水垢積聚在加熱器上，也有助於提高清潔效率。

軟水系統需要通過軟水劑才能運作，因此在軟水器空置時，需要重新注滿軟水劑盒。

軟水頻率取決於水硬度等級設置-每6個Eco循環進行一次再生，水硬度等級設置為3。

再生過程始於最尾段的沖洗階段，並在循環結束之前在乾燥階段結束。

故障排除

此洗碗碟機可能因為某些原因而不能正常運作。
聯絡售後服務中心之前，建議先自行進行檢查，看問題是否可以使用以下列表的簡易方法解決。

問題	可能原因	解決方法
☒ 「專用軟水劑注入提示」指示燈亮起	軟水劑儲存器是空的。(重新注滿軟水劑後，指示燈可能仍然會維持點亮數個洗滌週期)。	注入軟水劑。有關調整水的硬度(更多資訊請參閱「首次使用 - 洗碗碟機專用軟水劑、吹乾劑、清潔劑」篇章。)
☼ 「吹乾劑注入提示」指示燈亮起	吹乾劑盒是空的。(重新注滿吹乾劑後，指示燈可能仍然會維持點亮數個洗滌週期)。	於吹乾劑盒注入吹乾劑。(更多資訊請參閱「首次使用 - 洗碗碟機專用軟水劑、吹乾劑、清潔劑」篇章。)
洗碗碟機無法啟動或不能依據指令運作。	設備的電源插頭未正確連接。	將電源插頭插入插座。
	電源故障。	出於安全原因，當電源恢復時，洗碗碟機將不會自動重新啟動。打開洗碗碟機機門，按「啟動/暫停」按鈕，然後在4秒鐘內關閉機門。
	洗碗碟機的機門沒有完全關閉。自然風乾系統的門針沒有到位。	大力推門直至聽到「喀噠」聲。
	開門超過4秒。	按下「啟動/暫停」並在4秒鐘內關閉機門。
洗碗碟機對操作指令無反應。 顯示屏顯示：9或12，開/關鍵的LED燈快速閃爍。	洗碗碟機對操作指令無反應。	按下「開/關」按鈕關閉設備，大約一分鐘後將其重新打開，然後重新啟動程序。如果問題仍然存在，請拔下設備的電源插頭1分鐘，然後再將其重新插入。
	清洗程序尚未完成。	等待清洗程序結束。
	排水喉扭曲。	檢查排水喉確保沒有扭曲(請參閱「安裝指引」篇章)。
	水槽的排水喉阻塞。	清潔水槽的排水喉。
洗碗碟機無法排水。 顯示屏：3 「開/關」按鈕的LED燈快速閃爍	過濾器被食物殘渣堵塞。	清潔過濾器(請參閱「清潔過濾器組件」篇章)。
	洗碗碟機操作時噪音過大。	碗碟及餐具間發出「叮叮噹噹」的聲音。 過多的泡沫形成。
餐具沒有完全潔淨。	碗碟及餐具間發出「叮叮噹噹」的聲音。	正確擺放餐具(請參閱「裝置層架」篇章)。
	噴灑臂受到餐具的阻礙，不能自由旋轉。	使用錯誤份量的清潔劑，或清潔劑不適合用於該洗碗碟機(請參閱「注入清潔劑」篇章)。關閉洗碗機，重新啟動當前循環，然後再次打開，選擇新程序，按「啟動/暫停」，然後在4秒鐘內關上機門。請不要添加任何清潔劑。
	清潔程序太溫和。	正確安置餐具(請參閱「裝置層架」篇章)。
	過多的泡沫形成。	正確安置餐具(請參閱「裝置層架」篇章)。
	清潔劑儲存器的蓋子未正確關閉。	選擇合適的清洗程序(請參閱「程序表」篇章)。
	過濾器骯髒或堵塞。	使用錯誤份量的清潔劑，或清潔劑不適合用於該洗碗碟機(請參閱「注入清潔劑」篇章)。
	無加入洗碗碟機專用軟水劑。	確保清潔劑儲存器的蓋子已關閉。
洗碗機未注滿水。 顯示屏顯示：H,6 「開/關」按鈕的LED燈快速閃爍	供水無水或水龍頭關閉。	清潔過濾器組件(請參閱「保養及維修」篇章)。
	進水軟管彎曲了。	加入洗碗碟機專用軟水劑(請參閱「注入專用軟水劑」篇章)。
	進水軟管中的篩網被堵塞；需要清理	確保供水或水龍頭是運行中有水。
洗碗碟機提前完成洗滌循環。 顯示屏顯示：15， 「開/關」按鈕的LED燈快速閃爍	排水軟管位置過低或家庭污水處理系統出現虹吸作用。	確保進水軟管沒有彎曲(請參閱「安裝指引」篇章)。並重新啟動洗碗碟機。
	供水有氣泡。	進行驗證和清潔後，關閉並打開洗碗機，然後重新啟動新程序。
洗碗碟機提前完成洗滌循環。 顯示屏顯示：15， 「開/關」按鈕的LED燈快速閃爍	排水軟管位置過低或家庭污水處理系統出現虹吸作用。	檢查排水軟管的末端是否放置在正確的高度(請參閱「安裝指引」篇章)。檢查家庭污水處理系統是否出現虹吸作用，必要時安裝進氣閥。
	供水有氣泡。	檢查供水是否有洩漏或其他問題，以免空氣進入。


維修和故障排除指引

如要獲得更多資訊，請參閱「使用說明及安裝指南」。
「使用說明及安裝指南」可以透過以下方式獲取：

- 請致電保用證上顯示的號碼，聯絡售後服務中心。
- 於網站內可下載：www.whirlpool.com.hk

致電售後服務中心

當您致電售後服務中心前，您必須提供安裝在洗碗碟機門內左側或右側的銘牌上顯示的代碼，詳情請參照下列網址：www.whirlpool.com.hk

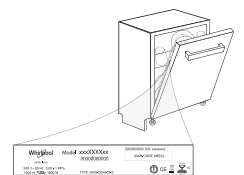

健康與安全指引

重要事項：請閱讀並遵循

使用洗碗碟機前請先細閱產品安全指引。請妥善保存此產品安全指引及使用說明作將來參考。本手冊和洗碗碟機本身提供重要的安全警告，請按需要隨時讀取及查察。不當的使用及不當的操作可能會導致的風險，製造商將不負任何責任。

⚠️ 除非得到持續監視，否則幼兒(0-3歲)和兒童(3-8歲)應遠離洗碗碟機。洗碗碟機可由8歲以上之兒童及身體、感官或精神障礙或經驗知識不足的人士操作，前提是此等人士已接受洗碗碟機的安全指導及指引，且瞭解使用洗碗碟機的相關危險。兒童不可胡亂玩弄洗碗碟機。未經指導，兒童不可進行洗碗碟機的清潔及保養工作。

允許使用

注意：此洗碗碟機不能透過外部控制器或遙控裝置進行操作。

⚠️ 此洗碗碟機設計只適用於家居或下列之類似環境：如一般商店、辦公室及其它工作環境的職員專用廚房；農莊；供入住酒店、汽車旅館及其它住宅式旅店之顧客使用；提供簡單住宿及早餐服務之旅舍。

⚠️ 此洗碗碟機最多可放置的標準餐具數目已經列明於產品說明書上。

⚠️ 洗碗碟機門不應保持常開狀態，以防有傾倒風險。洗碗碟機門只能承托拉出已負載的餐具層架時的重量。不要擺放任何物件、坐或站立於洗碗碟機門上。

⚠️ 警告：洗碗碟機清潔劑帶有強烈鹼性。若吞下，可造成嚴重危險。應避免清潔劑接觸皮膚及眼睛，並令兒童遠離已打開機門的洗碗碟機。清洗程序完結後，應清空清潔劑儲存器。

⚠️ 警告：刀及其它帶有鋒利邊緣的器皿及餐具必須刀尖朝下水平放置於餐具層架，避免割傷風險。

⚠️ 此洗碗碟機並非用作專業用途。請勿於室外使用此產品。洗碗碟機內及洗碗碟機旁邊切勿擺放具爆炸性或易燃的物件(例如燃油或壓縮噴霧罐)，避免起火風險。

此洗碗碟機只適用於按照此產品說明書指引下清洗家居碗碟。洗碗碟機內的水不能飲用。

請只使用專為洗碗碟機而設的洗碗碟機專用清潔劑及吹乾劑。

當加入洗碗碟機專用軟水劑後，立即於無負載的情況下運行一次清洗程序，可避免因腐蝕而損壞內部機件。請把洗碗碟機專用清潔劑、吹乾劑及軟水劑存放於兒童不能觸及的地方。

於檢查及維修洗碗碟機前，請先關閉供水水喉，並切斷電源。當遇到機件故障，亦應立即切斷洗碗碟機的供水及供電。

安裝

⚠️ 此洗碗碟機建議由兩個或更多的人進行安裝處理，避免受傷風險。使用防護手套來執行所有拆封和安裝操作，避免割傷風險。

必須使用新水喉管將洗碗碟機連接至主水管。不能重用舊的水喉管。洗碗碟機運行過程中必須確保所有水喉安全裝上，防止鬆脫。必須遵循本地水公司的法規連接水喉管。供水壓力介乎0.05至1.0 MPa之間。

洗碗碟機必須靠牆放置或內置於廚櫃內，以確保機件背部不會被觸碰。於底部備有通風口的洗碗碟機，必須確保地毯沒有阻擋或覆蓋通風口。

⚠️ 安裝，包括供水(如有)及電線接駁，必須由合資格的技術人員按照製造商的說明和本地標準安全法規進行維修。除非在用戶手冊特別聲明，切勿維修或更換任何洗碗碟機的部件。兒童應遠離洗碗碟機安裝地點。拆開洗碗碟機後，確認它沒有在運輸過程中損壞。在出現問題時，請聯絡經銷商或售後服務中心。

當完成安裝後，包裝材料(如塑膠、發泡膠件等)，應置於幼童無法取得的地方，避免意外的風險。此洗碗碟機進行安裝前，必先斷開它的電源連接避免觸電危險。進行安裝時，確保洗碗碟機電源線沒有損壞，避免火災或觸電危險。只有當安裝步驟完成後才可啟動洗碗碟機。

若洗碗碟機被安裝在廚櫃末端，令側面板外露，必須遮蓋鉸鏈位置，避免受傷風險。

進水溫度視乎洗碗碟機型號而定。入水喉上標注「最高25°C」，則表示最高進水溫度是25°C，其他沒有標示的型號，最高進水溫度是60°C。

請勿修剪水喉。若洗碗碟機備有防溢系統，請勿把入水喉的塑膠包裝浸入水中。

若喉管不夠長，請聯絡本地經銷商。請確保入水喉及出水喉沒有出現打結及被擠壓的情況。於首次使用洗碗碟機前，請檢查入水喉及出水喉有沒有漏水。

確保洗碗碟機的四隻腳穩固坐落在地面上，如有需要，可作調整，並檢查洗碗碟機是否完全處於水平位置(利用水平尺量度)。

電氣警告

銘牌位於洗碗碟機機門的邊緣(當洗碗碟機機門打開時就能看見)。

⚠ 插座必須能夠拔掉，以切斷電源，或安裝設有開關鍵的插座及按照本地的電器安全標準法連接地線。

⚠ 請勿使用接駁電線或萬能插座，安裝後電線部份不可被使用者易於接觸。手濕或赤腳時請勿使用本產品。若本產品的電源線或插頭有損壞，不能正常運作，或受損，請勿操作。

⚠ 如果電源線損壞，必須根據相同產品更換電源線。電源線只能由製造商指定的技術人員更換以避免觸電的危險。


若洗碗碟機所配置的插頭與插座不相配，請聯絡合資格技術人員。切勿拉扯電源線。

請不要將電源線及插頭浸於水中。應保持電源線遠離高溫的表面。

清潔和保養

⚠ 警告：執行任何維修或清潔操作之前，請先關閉及拔下電源插頭，避免觸電風險。切勿使用蒸氣清洗本產品。


處理包裝物料

包裝材料完全可回收，並設有可回收標誌 ：包裝的各個部分必須根據當前本地廢品處理法規進行處理。

廢棄家用電器

必須根據當前本地廢品處理法規進行處理。有關處理、修復和回收本產品的詳細資訊，請聯繫售後服務中心、家庭廢品處理服務中心或您購買本產品的商店。







本洗碗碟機依照有關廢棄電器和電子設備(WEEE)的歐盟標準 2012/19/EU 標示。確保以正確的方式廢棄本產品，可避免因不當的廢棄處理方式而對環境和人體健康造成潛在的負面影響。

這符號  表示此機器不能作為家庭廢品處理。應將它交給回收電器和電子設備的適用收集點。



節約能源貼士




省電洗：這是標準清洗程序，適用於清洗一般骯髒的餐具，這亦是在能源消耗和耗水量方面，綜合消耗的結果來看，效率最高的清洗程序。


安裝指引

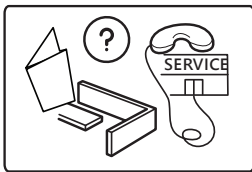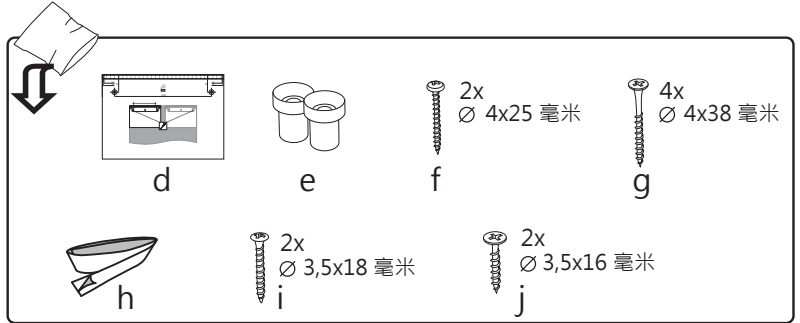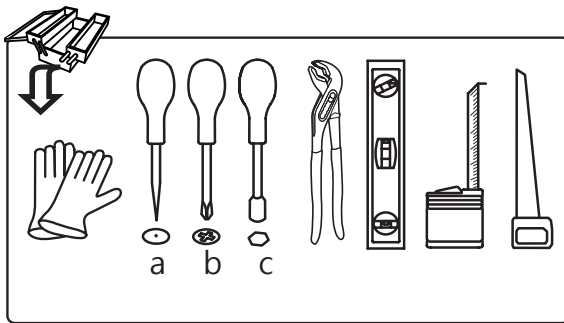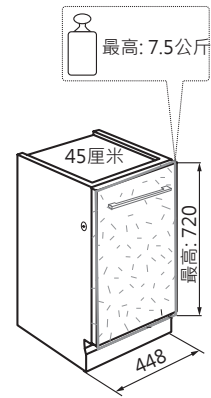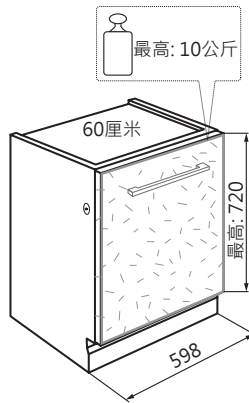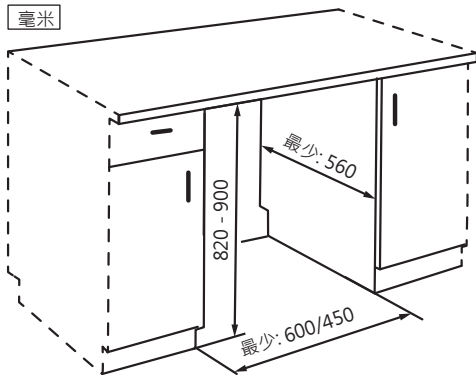


60 厘米	45 厘米	
41/42 dB	41 / 42 dB	43 / 44 dB
k 585 毫米	k 435 毫米	k 435 毫米
	l 327 毫米	

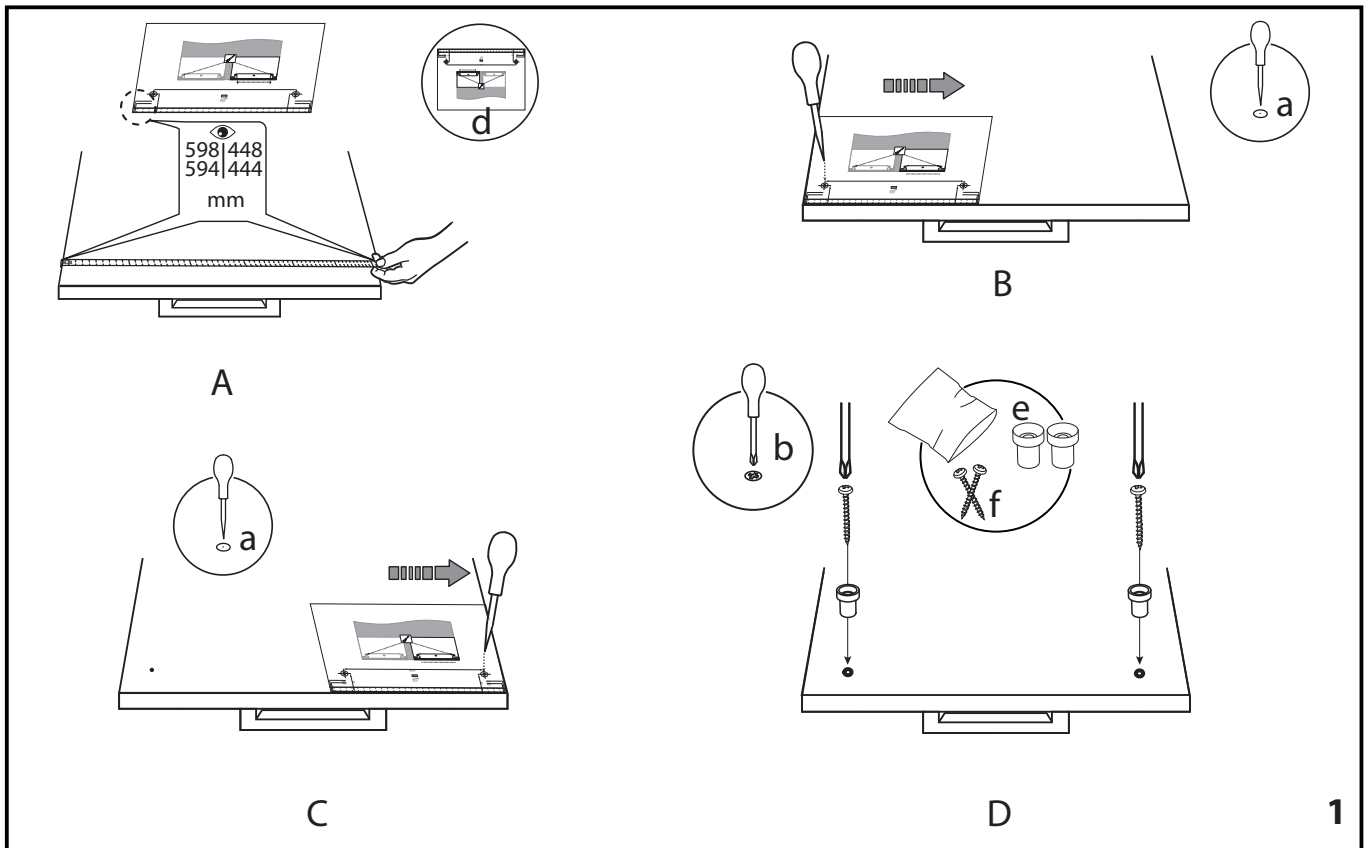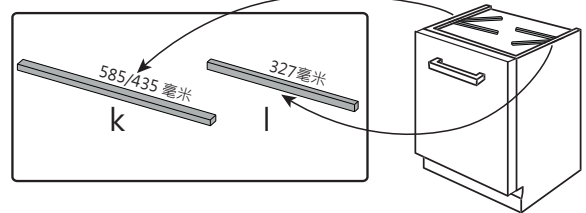

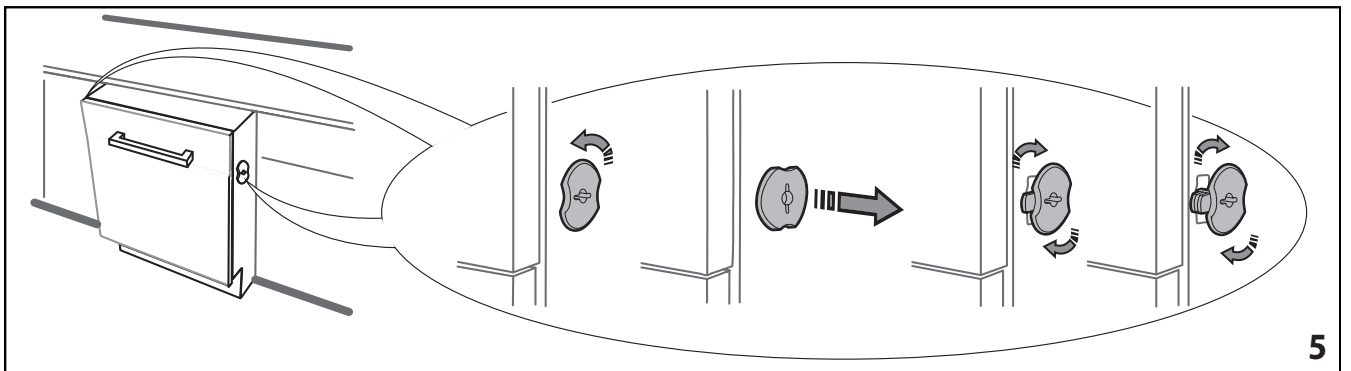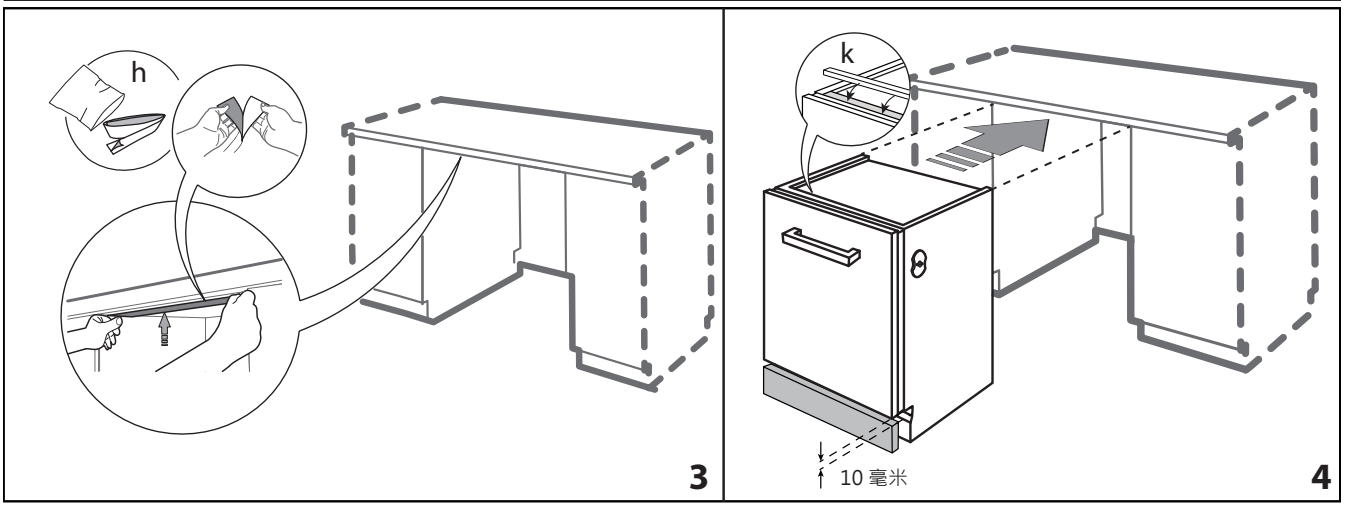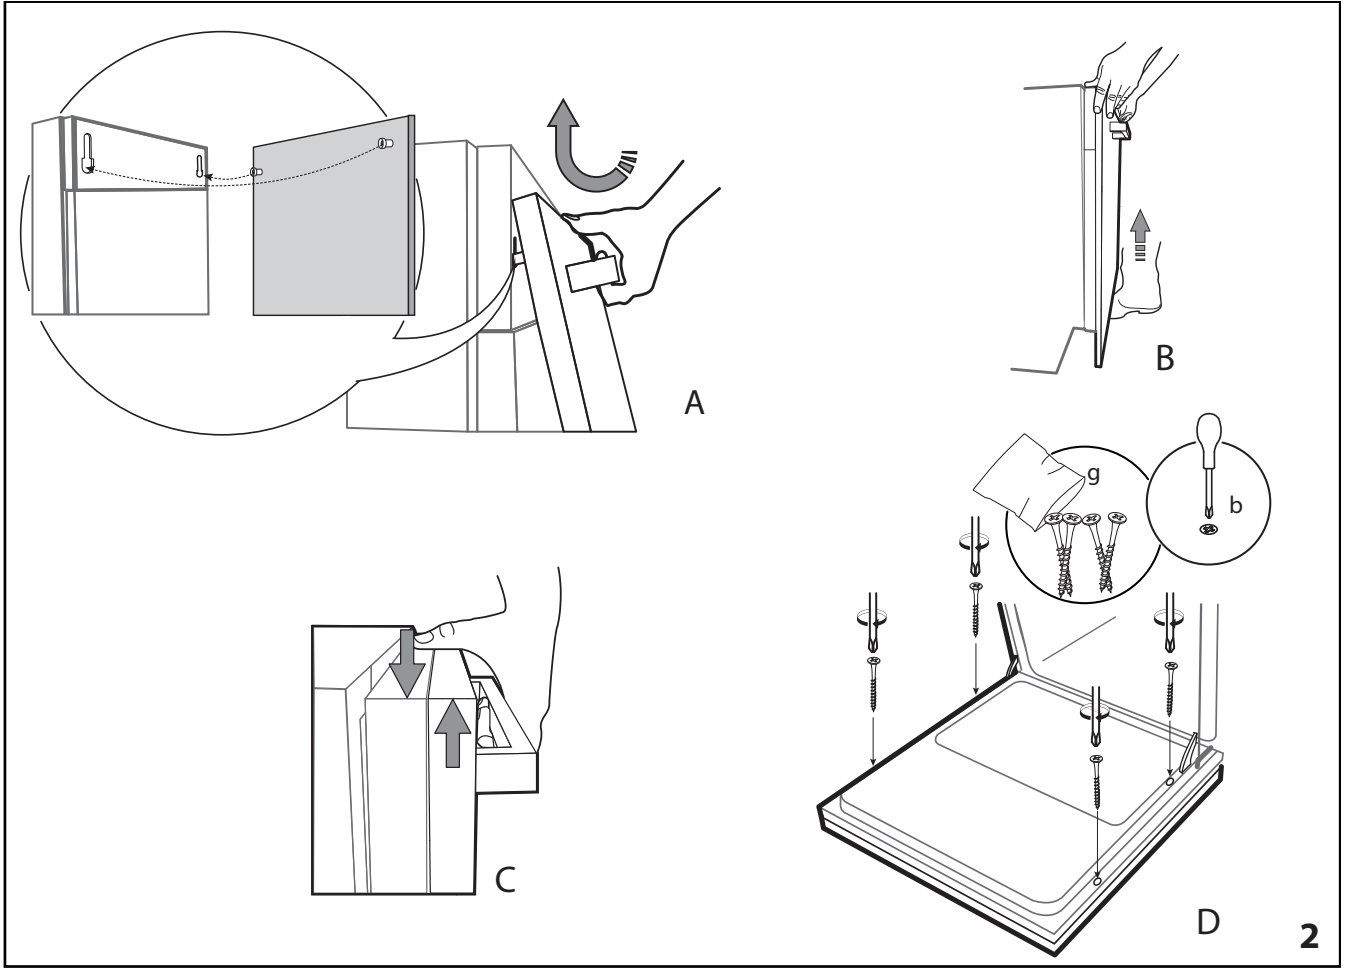


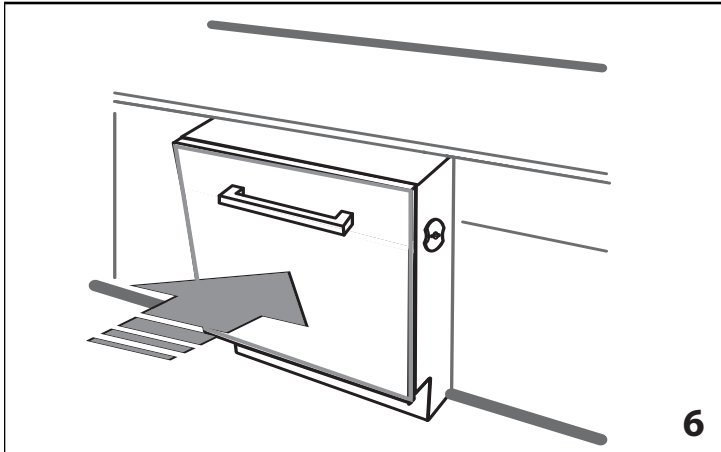


6

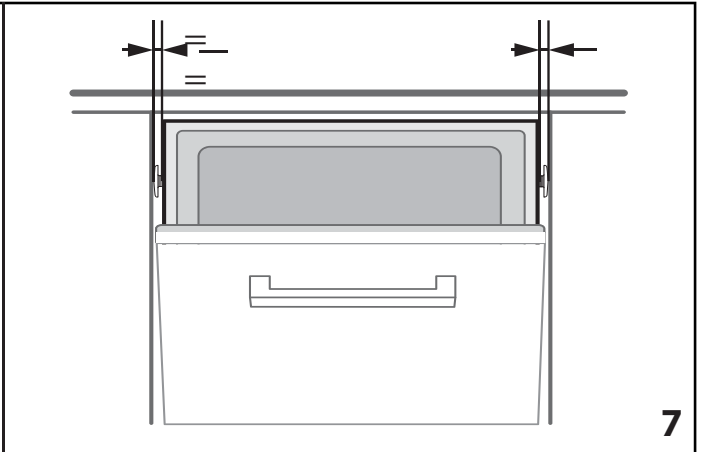


7

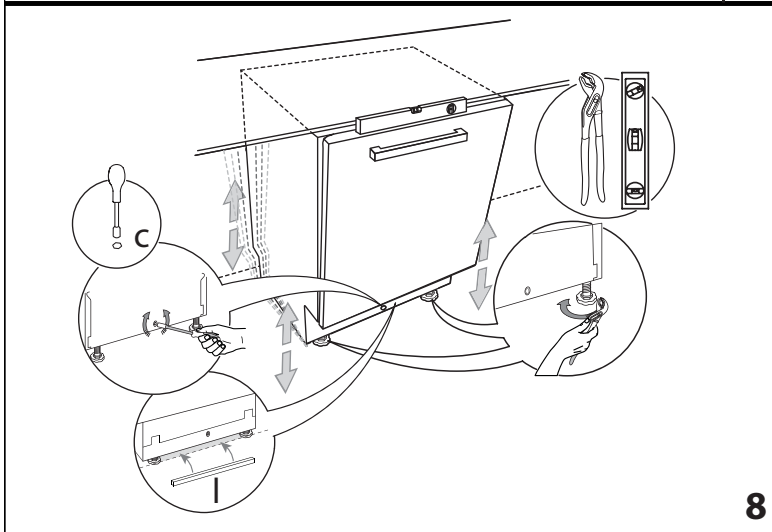

8

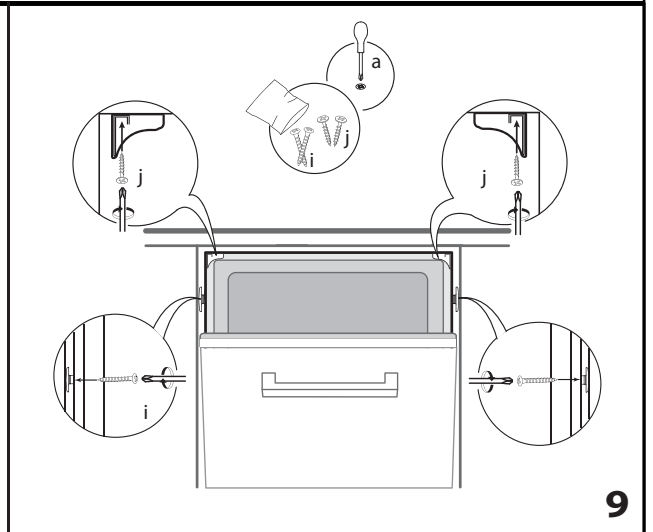

9

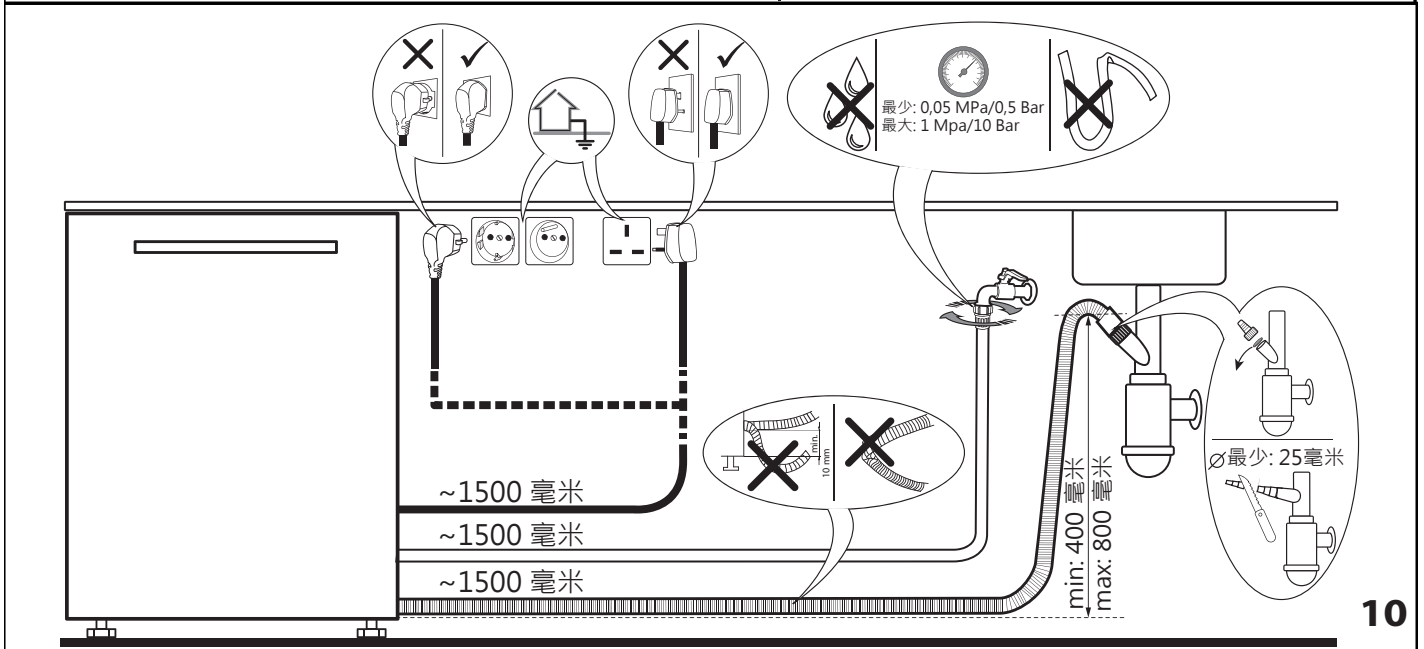

10

此頁為空白頁
This is a blank page.

Register your product online

網上登記新產品保養

Save the planet and register your product warranty online!
Enjoy extra 1-month free warranty upon online registration.

「惠」環保出力，減少用紙！於網上登記產品更可獲額外多一個月保養。



<https://rebrand.ly/WPwarranty>

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies
All rights reserved - <http://www.whirlpool.com.hk>



Whirlpool® 註冊商標/惠而浦集團的TM商標
版權所有 翻印必究 - <http://www.whirlpool.com.hk>



Whirlpool