 


Whirlpool



Health & Safety, Use & Care and Installation guide

Model: AP2401

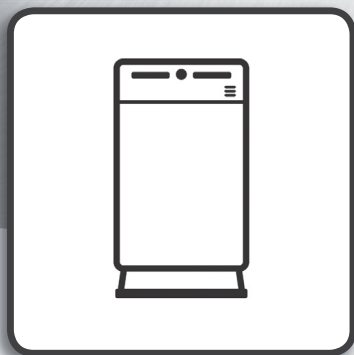

www.whirlpool.com.hk



Thank you for purchasing Whirlpool products. For better and safer use, please read this manual carefully and keep it for future reference.

Table of Contents

Safety Precautions	2
Precautions for use.....	3
Part Names	5
Preparation before using the product	6
Notice for Use.....	7
Control Panel.....	8
Instructions for Use.....	9
Maintenance	10
Specifications	11
Packing List	12
Troubleshooting Guide	12

Safety Precautions

In order to avoid possible injury or property damage to yourself or others, it is important to pay attention to the following precautions:


- Ignoring or misinterpreting these symbols may result in the following two situations:

 Warning	This symbol indicates "Serious injury or death".	 Caution	This symbol indicates "May cause personal injury or other object damage".
---	--	---	---


- The contents to be complied with are classified as follows:

	This symbol indicates a prohibited issue.		This symbol indicates a mandatory issue.
---	---	---	--

Warning




- **Do not disassemble or modify the air purifier.**
(Unauthorized disassembly or modification of the appliance may result in an accident or fire). Please contact the designated repair station for maintenance service.




- **Do not pull on the power cord while moving or storing.**
(This may cause a short circuit or internal damage to the power cord may occur and result in a fire or electric shock.)


- **Do not touch the power plug with wet hands.**
(This could result in electric shock.)
- **Do not damage the power cord and socket.**
 - Do not cut, modify, over-twist, pull, twist, and tangle the power cord. Do not place heavy objects on the power cord or squeeze the power cord.
- **(Using a damaged power cord may result in electric shock or fire.)**
 - To repair the power cord or plug, contact the designated service station.
- **Do not use the power supply, universal socket or connecting device of exceeded rated values. Use only 220V AC power supply.**
(Using the universal socket or connecting device of exceeded rated value may cause overheat of the power supply and result in a fire.)
- **In order to better protect the product and prolong service life, do not plug the power plug in too frequently.**



- **Please clean the power plug periodically.**
 - If there is dust on the power plug, moisture may compromise the insulation of the plug and result in a fire.
 - Unplug the power plug and wipe it with a dry cloth.




- **Please insert the plug fully into the power outlets.**
 - If the plug is not fully inserted properly, it may cause an electric shock or even a fire.
 - Do not use a damaged plug or a socket with loose outlets.



Prohibitions

- **Children are not allowed to operate the product directly.**
(This may cause an electric shock and injury.)

- **Do not use chlorine and acid detergents.**
(The toxic gases emitted from the detergent are harmful to health.)
- **Do not put fingers or metal objects into the air inlet, outlet and other crevices.**
(Contact with the inside of the product may result in an electric shock or injury.)



- **This product is not suitable for a physically, perceptually or mentally handicapped person or a child to operate.**
Unless the person is in custody of someone and guided by someone while operating this product.

Precautions for use

Warning



Do not get wet!

Do not wet the main body of the product.

- This may cause a short circuit and result in a fire or electric shock.



When moving

- Turn off the product
- Hold the handle



Prohibitions!

Do not place the running product upside down.

- This may cause damage to internal parts and result in an electric shock or fire.

Caution



Prohibitions!

Do not use solvents such as benzene, thinners, etc. to clean the air purifier. Keep the product from contacting with insecticidal sprays.

The air purifier may be broken and damaged or a short circuit may occur to result in an electric shock or fire.



Do not get wet!

Do not use this air purifier in a place subject to high temperatures or humidity or other places where the main body of the product may get wet, such as a bathroom.

Current leakage may occur to the air purifier and result in an electric shock or fire.



Keep it away from the flame!

Do not let volatile substances or combustible objects, such as tobacco or incense, get into the product.

This may cause a fire.



Prohibitions!

Do not use this air purifier in an indoor place where a fumigating pesticide is used.

Chemical residues may accumulate in the product and be released from the air outlet as a hazard to the health.

- After using a pesticide, the room should be thoroughly ventilated before using the air purifier.



When unplugging the power plug, hold the plug instead of the power cord.

Pulling the power cord directly may cause a short circuit or damage to the power cord, or result in an electric shock or fire.



Prohibitions!

Do not use this air purifier in places where greasy particles are present.

For example, breakage or damage may occur to the air purifier that is placed in a kitchen.

- The air purifier shall not be used as a ventilator.

Caution

In any of the following cases, turn off the power of the product immediately.

- If a switch does not work.
- If the circuit breaker is activated or the fuse is burnt.
- If the power cord or plug is hot.
- If you smell a burning smell, hear abnormal sound or feel vibration.
- If there are any other anomalies or malfunctions.



If you use the product together with a heater a room, the room should keep ventilated.

Otherwise carbon monoxide poisoning will occur.

If the product's power cord is damaged, you should contact the product manufacturer, service center or qualified technicians to replace the power cord in case any danger may occur.

Precautions for use

 
Caution


 
 
- This product is only for indoor instead of outdoor use.
- This product should be placed on a dry horizontal surface to use.
- Do not block the air inlet and outlet while the product is used.
- This product is not a substitute for a ventilation fan, vacuum cleaner or kitchen hood.
- If the room air quality is poor (e.g., there is a smell of smoke, newly decoration, etc.), it is strongly recommended to open the window while using this product so that better effects can be obtained.
- The distance between obstacles from all sides of the product being used should be more than 30CM respectively.
- Do not remove the front cover of the product being used in case the power supply would be cut off and unnecessary damage may occur to the product.
- If you need to dismount the front cover for maintaining the screen filter, turn off the product and unplug the power cord first.

- Do not place the product in the following places:
 - Close to walls, curtains or other soft objects. (This may block the air inlet and outlet and affect the air circulation.)
 - Places with direct sunlight. (Long-term sunshine may cause deformation and discoloration and affect the service life of the product.)
 - Near TV sets, microwave ovens and other objects that produce the magnetic field. (This may cause product malfunctions and noise problems.)
 - The air outlet is placed toward the furniture or other items. (Inclined to be stained.)



Part Names

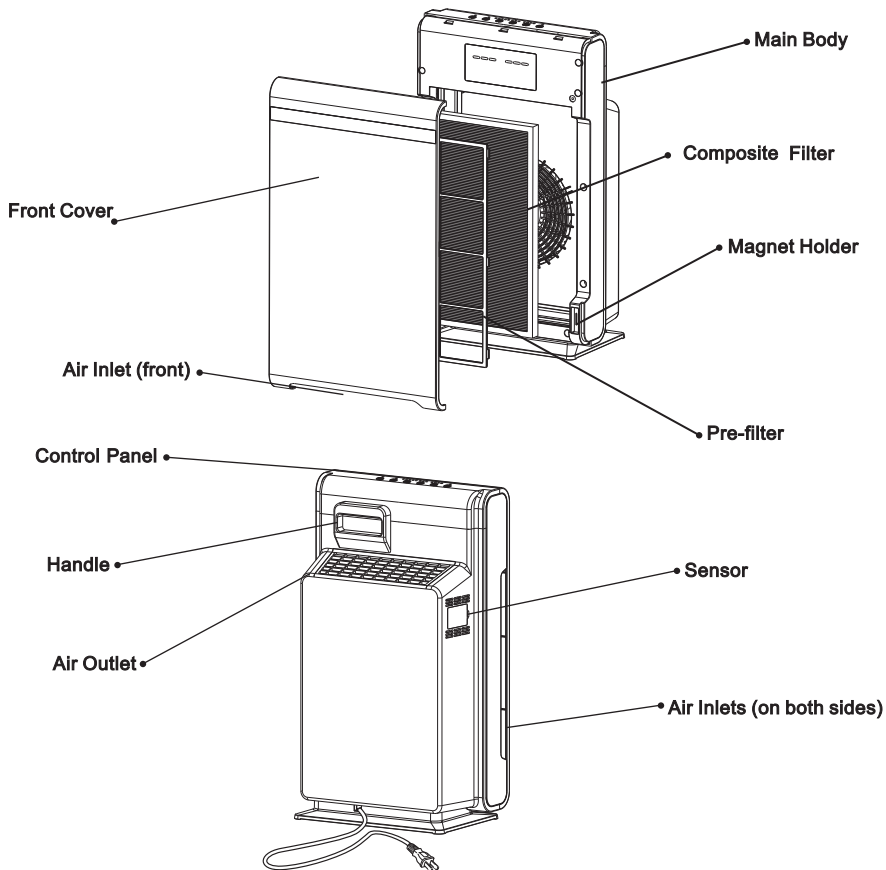


Filters	
Packed in the product	Additional giftbox packed
 Composite Filter (1 piece)  Pre-filter (1 piece)	 Active Carbon and Formaldehyde Filter (1 piece)
The above accessories have been placed in the product. Remove them from the product before using the product. Be sure to remove plastic packaging bags.	The above accessory is additional packed in a giftbox. Be sure to remove plastic packaging bags before installation.

Preparation before using the product


1. Open the Front Cover

 - ① Grip and pull the lower part of the Front Cover forward.
- ② Push up.

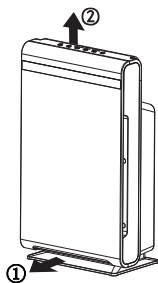


2. Remove the Pre-filter and Composite Filter

 
- ① Remove the Pre-filter.
- ② Remove the Composite Filter.

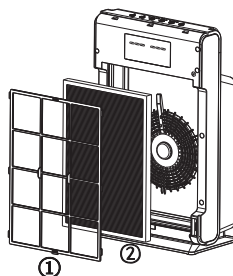

 3. Take the Filters out of the packaging bag.

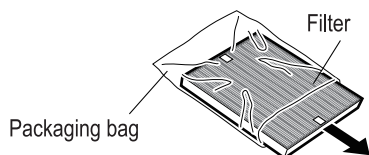


 4. Put the Composite Filter or Active Carbon and Formaldehyde Filter back into the machine with the tag at the front.

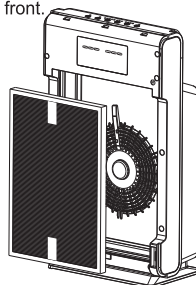


5. Install the Pre-filter

 Snap the boss on the perimeter of the Pre-filter into the slot of the main body.

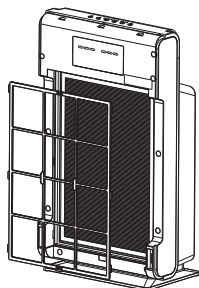

6. Install the Front Cover.

 - ① Snap the Front Cover into the (three) slots of the Main Body.
- ② Snap the lower part of the Front Cover into the Magnet Holder.

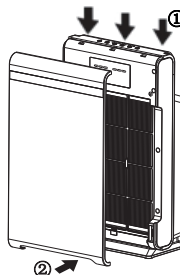

Notice for Use

Automatic operation mode

In this mode, the product will automatically select a reasonable operating state according to the pollution degree of indoor air.

Air Quality Indicator

Cigarette smoke, pesticides, cosmetics, cooking smells and rapid changes in temperature and humidity will affect the indicating state.

Air pollution level	Clean ←————→ Polluted		
Indicating color	Blue	Yellow	Red
Air volume	Weak	Medium	High

Child Lock

 
When pressing the Child Lock button for 3 seconds, the corresponding indicators will be lit and the product will enter the Child Lock State, after which there will be no response to any button operations. When the Child Lock button is pressed again, the corresponding indicator will turn off and the Child Lock state will stop. The product will enter the Normal Operation state.

Filter Reset

When the filter needs to be replaced, the reset filter indicator will illuminate and blink, and the wind speed will only operate in mid-range. After replacing the filter, the user only needs to press and hold the filter button for 5 seconds, and the reset filter indicator will go out and the product resumes normal operation. If the user operates the product normally, the filter indicator does not light and blink. After changing the filter, press and hold the reset filter button for 3 seconds, release the button after hearing the prompt tone, and the filter timer re-counts.

Control Panel

Panel indication and operation instructions

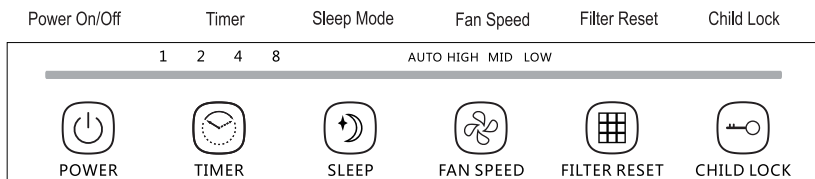


Power-on

Plug the machine's power plug into a power socket.

- When the machine is powered up for the first time, the product will enter the idle mode after emitting a beep. None of the indicators will be lit at this moment.

 Operating



Press the power button

- Press the power button in the idle state, and all the function indicators of the product will light up.
- When the Air Quality Indicator color is cycled according to the detected air quality while the Auto Operation Mode Indicator is lit, the product will enter the Auto Operation Mode.
- After approximately 5 minutes, the Air Quality Indicator color will change to the color corresponding to the detected air quality.

Mode Switching

- Operation mode can be switched between Auto, High, Mid and Low modes, while functions are enabled and the corresponding indicators are lit.
- Running in the Auto Mode can achieve indoor air purification under general circumstances.

Shutdown

Press the power button

- The product will stop running and enter the idle state. All the indicators will turn off.

Instructions for Use

Operation mode



 
Auto Operation

When turned on, the machine will enter the Auto Mode. You can also switch the machine to this mode by pressing the Operation Mode button.




Manual Operation

When you need the product to run for a long time, you can manually switch to the desired operation mode by pressing the Operation Mode button.

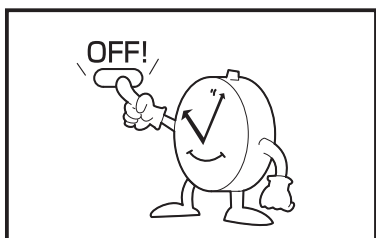

Timer

 - Press the Timer button, and then you can set the operation time of the machine.
- When the preset time expires, the product will automatically shut down.

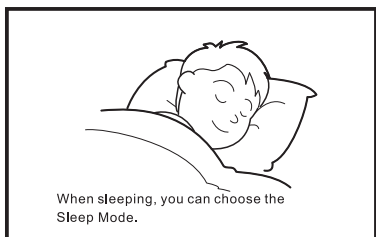

When sleeping, you can choose the Sleep Mode.

Sleep Mode

- Sleep Mode button for sleep: If the air purifier is powered up but not turned on, it can enter to Sleep Mode when you press the Sleep Mode button.
- The machine will operate mutely at a low speed, all the indicators on the front cover will turn off, and the Sleep Mode indicator will be lit. This mode is timed at 8 hours by default.



Maintenance



Warning

The power plug must be unplugged

 
Be sure to disconnect the product from the power socket before cleaning the product

- Do not use the detergent shown on the right.
- When using a chemical wipe, please pay attention to the precautions for using a chemical wipe.
- Do not operate this product while the filter is dismounted. (If dust gets into the product, it may cause malfunctions and the purification effect will be unable to be achieved.)




Main body

- Please use a vacuum cleaner to clean the dust in the air inlet and outlet first.
- Finally, use a soft, dry cloth to wipe the surface of the entire main body.

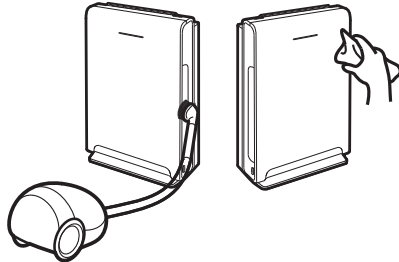


Pre-filter

 - Clean surface dust with a vacuum cleaner.
- Can be soaked with clean water and then cleaned and dried before being used.

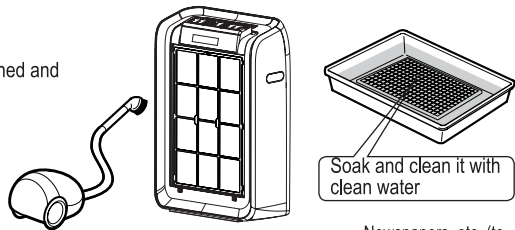

Composite Filter/Active Carbon and Formaldehyde Filter

 - Clean surface dust with a vacuum cleaner.
- The back does not need to be maintained.
- Cannot be washed

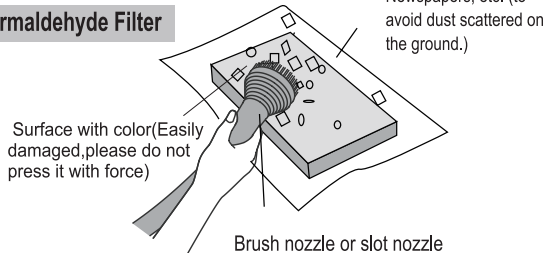

Filter Replacement

Filter replacement criteria (accessories will be sold separately)

Accessory Name	Replacement Cycle	Remarks
Pre-filter	Replacement Not Required	Packed inside the product
Composite Filter	About Once a Year	
Active Carbon and Formaldehyde Filter	About Once a Year	Packed in additional giftbox

※ Depending on the site of use and the actual situation (such as families with high smoking), the filter replacement cycle may be shortened. Generally, when the effect is not good, please replace it promptly.

- See Page 6 of the manual for the filter replacement method.
- After the replacement is completed, reset the filter.
- Dispose the used filter as a non-combustible waste.

When the product will be unused for a long time

- ① Unplug the power plug.
- ② Maintain the main body.
- ③ Put the product into the packaging bag. Put the bag into the packaging carton. Place the carton in a dry place.

Specifications

Model No.	AP2401
Rated voltage / frequency	220V-240V~50Hz
Rated input power	70W
Product Weight	7.5kg
Noise	Sound power level noise limit 61dB(A)
Product Size	351mm (width) x 202mm (depth) x 610mm (height)

Packing List

No	Name	Quantity	Remarks
1	Main Body	1	
2	Manual	1	
3	Warranty Card	1	
4	Pre-filter	1	Packaged inside the product
5	Composite Filter	1	Packaged inside the product
6	Active Carbon and Formaldehyde Filter (in giftbox)	1	Packed in additional giftbox

Troubleshooting Guide

When the machine does not work properly, confirm the following issues first. If the machine still cannot work properly, unplug the power plug and take it to the repair station for repair service.

Phenomenon	Checking Method/Solution
The product does not operate.	Is the Power Plug plugged in?
Air Outlet volume is low.	Are the filters clean? (See page 9) If the phenomenon still cannot be eliminated after the filters are cleaned, please replace the filters.
The machine has an uncomfortable smell.	Are the front cover and filters of the machine clean? (See page 9) If the phenomenon still cannot be eliminated after the filters are cleaned, please replace the filters. (This product cannot eliminate carbon monoxide-a harmful substance from cigarettes)
The air is barely purified.	Is the Composite filter clean? (See page 9) If the phenomenon still cannot be eliminated after the filters are cleaned, please replace the filters.
The purification indicator is blinking.	When the machine does not work properly, please unplug the power plug and contact the repair station for repair service. *Within ten minutes after the product is turned on for the first time, if the indicator blinks red, it indicates that the sensor is warmed up rather than a breakdown having occurred.

感謝您選購Whirlpool產品, 為了更好及更安全地使用, 操作前請仔細閱讀本說明書, 並請妥善保存此說明書以備日後參考之用。

目 錄

安全注意事項	-----	2
使用注意事項	-----	3
部件名稱	-----	5
使用前準備	-----	6
使用須知	-----	7
操作面板	-----	8
使用方法	-----	9
維護保養	-----	10
規 格	-----	11
裝箱清單	-----	12
故障排除指南	-----	12

安全注意事項

為了避免對您自己或其他人造成可能的傷害或財物損害, 請務必注意以下注意事項:









■ 無視或錯誤理解這些標誌, 會產生下面兩種情況:

 警告	本標誌所表示的內容為“可能造成人員重傷或死亡”。	 注意	本標誌所表示的內容為“可能造成人員傷害或其他物品傷害”。
---	--------------------------	---	------------------------------

■ 務必遵守的內容分類, 用標誌區分說明如下:

 此標誌表示禁止事項。	 此標誌表示強制事項。
--	--

警告

<p> 切勿擅自拆開或改裝本空氣淨化機。 (擅自拆開或改裝電器可能會導致事故或火災事故。)請與指定維修店聯繫, 以便安排維修。</p> <p> 移動或存放時切勿拉扯電源線。 (否則可能導致短路或電源線內部損壞, 發生火災或觸電事故。)</p> <p>切勿用濕手接觸電源插頭。 (否則可能會導致觸電。)</p> <p>切勿損壞電源線和插座。</p> <ul style="list-style-type: none"> 切勿割劃、改裝、過度扭曲、拉扯、扭轉和擰絞電線, 切勿在電源線上放置重物或擠壓。 <p>(使用已破壞的電源線可能會導致觸電或火災事故。)</p> <ul style="list-style-type: none"> 要修理電源線或插頭時, 請與指定維修店聯繫。 <p>切勿使用超出額定值的電源、萬能插座或連接設備, 只可使用220V交流電源。 (使用超出額定值的萬能插座或連接設備, 可能會導致電源過熱, 引起火災事故。)</p> <p>為了更好的保護產品, 延長使用壽命, 請勿快速頻繁的插拔電源插頭。</p>	<p> 請定期清潔電源插頭。</p> <ul style="list-style-type: none"> 如果電源插頭上有灰塵, 濕氣可能會破壞插頭的絕緣部分, 從而導致火災事故。 拔下電源插頭, 用乾布擦淨。電器如長期不使用, 應拔下電源插頭。 <p> 請將插頭完全插入電源插座。</p> <ul style="list-style-type: none"> 如果插頭沒有完全插牢, 可能會因為過熱導致觸電, 甚至引起火災事故。 切勿使用已壞的插頭或鬆動的電源插座。 <p> 禁止兒童直接操作使用產品。 (可能導致觸電、受傷。)</p> <p> 禁止使用氯類以及酸性的洗滌劑。 (洗滌劑中散發的有毒氣體損害健康。)</p> <p> 禁止將手指或金屬物放入進風口、出風口等縫隙處。 (接觸產品內部可能導致觸電或受傷。)</p> <p> 此機不適合傷殘人士, 知覺障礙人士, 智力障礙人士或兒童自行操作。如有安全負責人在場監督及提供指導下協助操作此機, 則屬例外。</p>
--	--

使用注意事項

警告



切勿弄濕機身。

禁止弄濕！

- 否則可能導致短路而發生火災或觸電事故。



移動時

- 停止運轉
- 手持把手



機體請勿放倒運轉。

禁止！

- 否則可能導致內部部件損壞，引發觸電或火災事故。

注意



切勿使用苯或稀釋劑等溶劑清潔空氣淨化機，還要避免接觸殺蟲噴霧劑。

禁止！

空氣淨化機可能會破裂而導致損傷，甚至發生短路，以致造成觸電或火災事故。



不可在高溫、高濕或會弄濕機體的場所使用本空氣淨化機，例如浴室。

禁止弄濕！

空氣淨化機可能會漏電而造成觸電或發生火災事故。



不可在存有油膩微粒的場所使用本空氣淨化機。

禁止！

例如廚房內的場所空氣淨化機可能會破裂而造成損傷。

- 本空氣淨化機不應用作通風抽氣設備。



拔出電源插頭時，應手持插頭而不是電線。

如果直接拉扯電線，則可能會發生短路，或損傷電線導致觸電或火災事故。

注意

當有以下的任何情況出現時，請立即關掉機器的電源。

 
- 如果某一開關無法操作。
- 如果斷路器起作用或保險絲燒毀。
- 如果電源線或插頭異常發熱。
- 如果您發覺有燒焦的異味或異常的聲音或振動。
- 如果有其他任何異常現象或故障。

如果機器的電源線損壞，必須委託該機器的廠商、維修服務中心或合資格的技術人員替您更換，以防發生危險。


使用注意事項

注意

- 本產品只能在室內使用，嚴禁戶外使用。
- 本產品需放置在乾燥的水平面上使用。
- 使用時不要堵住進風及出風口。
- 本產品不能替換氣扇、吸塵器或廚房中的抽油煙機。
- 如果房間空氣品質較差（如油煙味及新裝修後的異味等），強烈建議使用本產品的同時打開窗戶以獲得更好的效果。
- 產品使用時，與四周障礙物的距離應大於30厘米。
- 產品在運作時，請勿直接拆下前蓋，以免強行斷電，對機器造成不必要的傷害。
- 因維護過濾網等原因，需要拆下前蓋時，請先關閉機器，拔下電源。
- 切勿放置於以下場所：
 - 緊靠牆壁或者窗簾等柔軟物體。（可能會阻擋進出風口，而影響空氣迴圈。）
 - 陽光直射的場所。（長期的日照，可能會造成變形、變色，而影響產品壽命。）
 - 電視、微波爐等產生磁場的物體附近。（可能會引起產品功能紊亂及噪音問題。）
 - 出風口正對傢俱或其他物品。（易出現污跡。）

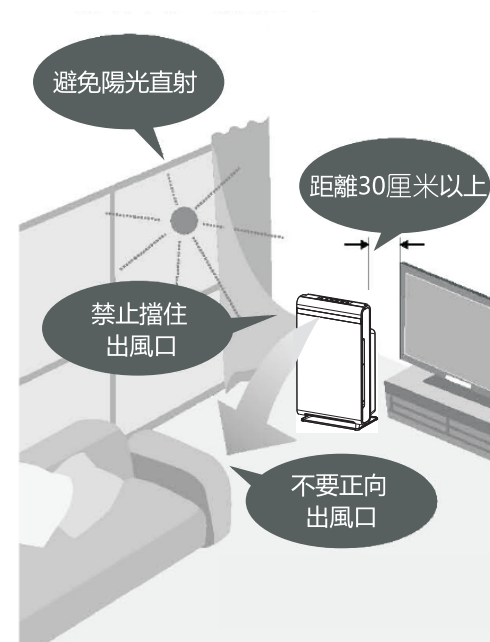


部件名稱

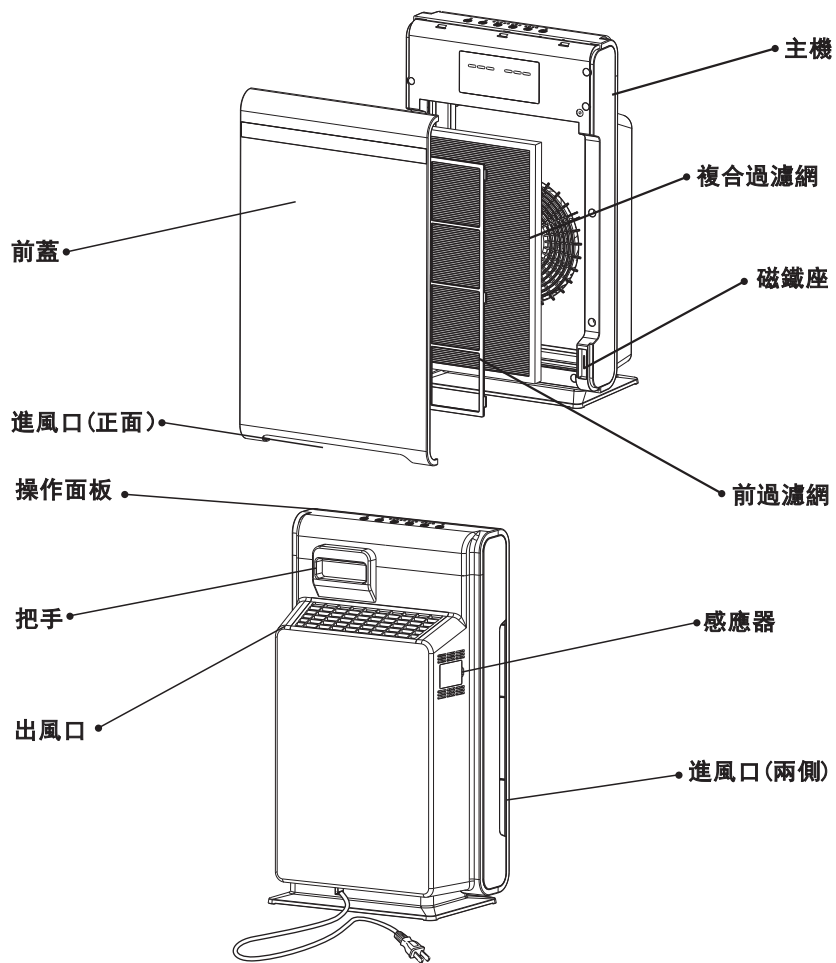 


過濾網

 隨機附送




複合過濾網(1個)

 

前過濾網(1個)

以上附件已放入機器內。使用前請從機器內取出，請務必將包裝袋除去。

 額外的彩盒包裝內




活性炭及甲醛過濾網(1個)

以上附件裝在額外的彩盒包裝內。請務必在安裝前將包裝袋除去。


使用前準備

1. 打開前蓋

 - ① 兩手握住前蓋下方向前拉；
- ② 向上推。

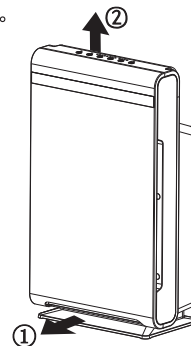


 3. 將過濾網從包裝袋內取出。

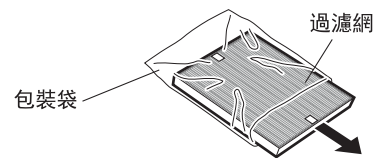


5. 裝上前過濾網。

 - 將前過濾網周邊的扣位，對應安裝到產品主機的卡槽中。

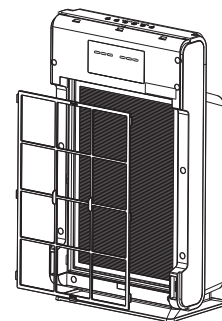


2. 取出前過濾網、複合過濾網

 - ① 取出前過濾網；
- ② 取出複合過濾網。

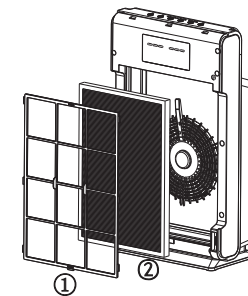


 4. 將複合過濾網或活性炭及甲醛過濾網放入機器。(標籤必須面向用家)

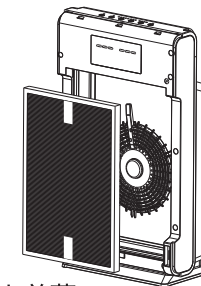

6. 裝上前蓋。

 - ① 將前蓋扣到本體上的卡槽內(3處)；
- ② 將前蓋下部推入磁鐵座內。

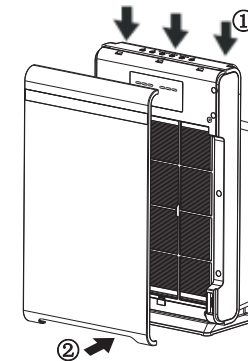

使用須知

自動運轉模式

此模式下，機器會根據室內空氣的污染程度，自動選擇適合的工作狀態。

空氣質量指示燈

香煙煙霧、殺蟲劑、化妝品、烹飪氣味及溫濕度的急劇變化等都會影響指示狀態。

空氣污濁程度	乾淨 ←————→ 污濁		
標示顏色	藍色	黃色	紅色
風量	弱	中	強

兒童鎖

長按3秒兒童鎖功能鍵，相應指示燈點亮，產品進入兒童鎖狀態，此時所有功能無法操作，再按兒童鎖鍵，相應指示燈熄滅，兒童鎖狀態解除，產品進入正常操作。

重置過濾網

當過濾網需要更換時，重置過濾網指示燈會點亮，並閃爍，風速只在中檔運行。更換過濾網後用戶只需要長按過濾網按鍵5秒，重置過濾網指示燈會熄滅，同時產品恢復正常運作。

如用戶在產品正常運作下，過濾網指示燈沒有點亮及閃爍，用戶自己更換過濾網後，請長按重置過濾網按鍵3秒，聽到提示音後鬆開按鍵，過濾網重新計時。

操作面板

 


通電

將機器的電源插頭插入電源插座

- 機器首次通電，會有一聲“嗶”響提示，隨即進入待機狀態，此時所有指示燈均熄滅。

運行



輕觸電源按鍵

- 待機狀態輕觸電源按鍵，機器所有功能指示燈全部亮起。
- 空氣質量指示燈顯示顏色依次循環，進行空氣質量的檢測，此時自動運行模式指示燈亮起，產品進入“自動”運行模式。
- 約5分鐘後，空氣質量指示燈顏色轉換到檢測後的空氣質量顯示。

模式切換

- 運轉模式可以在自動、高、中、低切換，啟動功能，相應指示燈亮起。
- 以自動模式運行即可滿足一般情況下的室內空氣淨化。

停機

輕觸電源開關按鍵

- 機器停止運行，進入待機狀態，所有指示燈熄滅。

使用方法

運轉模式



 
自動

開機時，機器進入自動運行模式。
也可通過按壓運轉模式按鍵切換到該模式。



手動(高、中、低)


需要長時間運行時，通過按壓運轉模式按鍵手動切換，選擇需要的模式。

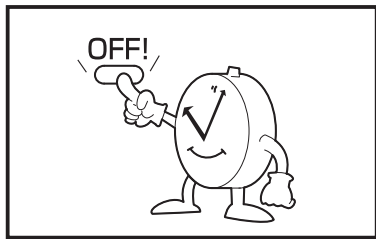

定時設置

- 按壓定時鍵，可以設定機器運行時間。
- 設定時間到，機器自動關閉。
- 連續運作時，定時指示燈全熄滅。

 1小時 → 2小時 → 4小時 → 8小時 → 連續運作

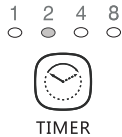

睡眠模式

- 睡眠模式功能：若空氣淨化機通電但處於未開機的狀態，可直接按“睡眠模式”鍵進入此模式。
- 機器低速靜音運行，前蓋上所有指示燈熄滅，睡眠模式指示燈亮。該模式默認定時8小時。



睡覺時，選擇睡眠模式

維護保養



 
清潔電器前，請確保斷開電源插頭

- 禁止使用右邊所示的洗滌劑。
- 使用化學抹布時，請留意化學抹布的使用注意事項。
- 複合過濾網在拆下狀態時請勿運行本機（如果灰塵吸入機內，可能會造成故障，失去淨化效果。）




主機

- 請先使用吸塵機吸走進風口及出風口的灰塵。
- 最後使用柔軟的乾布擦拭整個主機的表面。

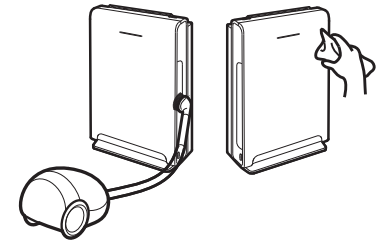


前過濾網

 - 使用吸塵機吸走表面灰塵。
- 可用清水浸泡清洗，晾乾後使用。

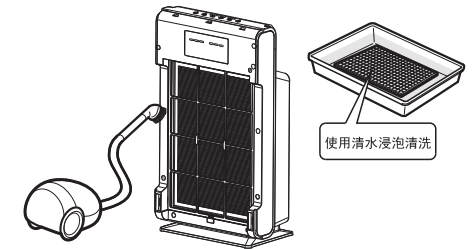

複合過濾網/活性炭及甲醛過濾網

 - 使用吸塵機吸走表面灰塵。
- 背面無需保養。
- 請勿水洗。

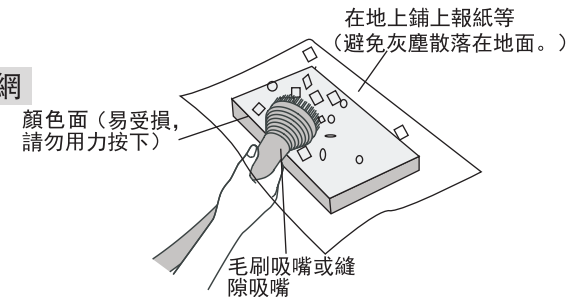

維護保養

更換過濾網

更換過濾網的標準(另行出售配件)

部件名稱	更換週期	備註
前過濾網	不需更換	裝在主機內
複合過濾網	約一年一次	
活性炭及甲醛過濾網	約一年一次	額外的彩盒包裝內

※根據使用場所和實際情況(例如吸煙較多的家庭),過濾網更換週期可能會縮短。當過濾網效果不佳時,請及時更換。

- 更換過濾網的方法參見說明書第6頁。
- 更換後,請重置過濾網。
- 請將用過的過濾網作為非可燃垃圾處理。

長期不使用時

- ① 拔下電源插頭。
- ② 對機體做維護保養。
- ③ 套上包裝袋,放入包裝箱內,置於乾燥處保管。

規格

產品型號	AP2401		
額定電壓頻率	220-240V~50Hz		
額定輸入功率	70W	產品重量	7.5KG
噪音	聲功率級噪聲限值為61dB(A)		
產品尺寸	寬351mmX深202mmX高610mm		

裝箱清單

序號	名稱	數量	備註
1	主機	一台	
2	說明書	一份	
3	保養卡	一份	
4	前過濾網	一個	裝在主機內
5	複合過濾網	一個	裝在主機內
6	活性炭及甲醛過濾網(彩盒包裝內)	一個	額外的彩盒包裝內

故障排除指南

機器發生故障時,請先確認以下事項,如仍未能恢復使用,請拔下電源插頭並送到維修店處理。

現象	檢查/解決辦法
無法運行	電源插頭是否插好?
出風量小	過濾網是否乾淨?(見第9頁) 清潔後如仍未能恢復,請更換過濾網。
機器有異味讓人覺得不適	機器、前蓋及過濾網是否乾淨?(見第9頁) 清潔後如仍未能恢復,請更換過濾網。 (本機不能消除香煙的有害物質—一氧化碳)
難以淨化空氣	複合過濾網是否乾淨?(見第9頁) 清潔後如仍未能恢復,請更換過濾網。
潔淨顯示燈閃爍	機器發生故障,請拔下電源插頭,聯絡維修店進行維修。 *產品首次開機十分鐘內,紅燈閃爍表示傳感器預熱,非故障。

