 


Whirlpool

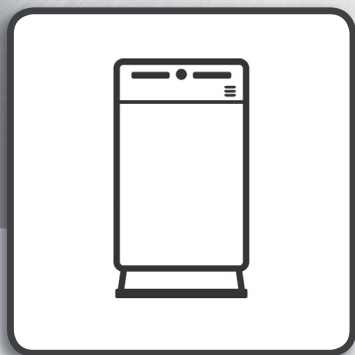

## Health & Safety, Use & Care and Installation guide

Model: AP3602



[www.whirlpool.com.hk](http://www.whirlpool.com.hk)



**Thank you for purchasing Whirlpool products. For better and safer use, please read this manual carefully and keep it for future reference.**

### **Table of Contents**

Safety Precautions .....	2
Precautions for use.....	3
Part Names .....	5
Preparation before using the product .....	6
Notice for Use.....	7
Control Panel.....	8
Instructions for Use.....	9
Maintenance.....	11
Specifications .....	12
Troubleshooting Guide .....	13
Packing List .....	14

## Safety Precautions

In order to avoid possible injury or property damage to yourself or others, it is important to pay attention to the following precautions:


- Ignoring or misinterpreting these symbols may result in the following two situations:

 <b>Warning</b>	This symbol indicates "Serious injury or death".	 <b>Caution</b>	This symbol indicates "May cause personal injury or other object damage".
---	--	---	---

- The contents to be complied with are classified as follows:


	This symbol indicates a prohibited issue.		This symbol indicates a mandatory issue.
---	---	---	--

## Warning




- **Do not disassemble or modify the air purifier.**  
(Unauthorized disassembly or modification of the appliance may result in an accident or fire). Please contact the designated repair station for maintenance service.

---




- **Do not pull on the power cord while moving or storing.**  
(This may cause a short circuit or internal damage to the power cord may occur and result in a fire or electric shock.)

- **Do not touch the power plug with wet hands.**  
(This could result in electric shock.)
- **Do not damage the power cord and socket.**
  - Do not cut, modify, over-twist, pull, twist, and tangle the power cord. Do not place heavy objects on the power cord or squeeze the power cord.
- **(Using a damaged power cord may result in electric shock or fire.)**
  - To repair the power cord or plug, contact the designated service station.
- **Do not use the power supply, universal socket or connecting device of exceeded rated values. Use only 220V AC power supply.**  
(Using the universal socket or connecting device of exceeded rated value may cause overheat of the power supply and result in a fire.)
- **In order to better protect the product and prolong service life, do not plug the power plug in too frequently.**




- **Please clean the power plug periodically.**
  - If there is dust on the power plug, moisture may compromise the insulation of the plug and result in a fire.
  - Unplug the power plug and wipe it with a dry cloth.  
If the appliance is not used for a long period of time, unplug the power plug.

---



- **Please insert the plug fully into the power outlets.**
  - If the plug is not fully inserted properly, it may cause an electric shock or even a fire.
  - Do not use a damaged plug or a socket with loose outlets.

---




Prohibitions

- **Children are not allowed to operate the product directly.**  
(This may cause an electric shock and injury.)

- **Do not use chlorine and acid detergents.**  
(The toxic gases emitted from the detergent are harmful to health.)
- **Do not put fingers or metal objects into the air inlet, outlet and other crevices.**  
(Contact with the inside of the product may result in an electric shock or injury.)

---



- **This product is not suitable for a physically, perceptually or mentally handicapped person or a child to operate. Unless the person is in custody of someone and guided by someone while operating this product.**

## Precautions for use

### Warning



Do not get wet!

**Do not wet the main body of the product.**

- This may cause a short circuit and result in a fire or electric shock.



**When moving**

- Turn off the product
- Hold the handle



Prohibitions!

**Do not place the running product upside down.**

- This may cause damage to internal parts and result in an electric shock or fire.

### Caution



Prohibitions!

**Do not use solvents such as benzene, thinners, etc. to clean the air purifier. Keep the product from contacting with insecticidal sprays.**

The air purifier may be broken and damaged or a short circuit may occur to result in an electric shock or fire.



Do not get wet!

**Do not use this air purifier in a place subject to high temperatures or humidity or other places where the main body of the product may get wet, such as a bathroom.**

Current leakage may occur to the air purifier and result in an electric shock or fire.



Keep it away from the flame!

**Do not let volatile substances or combustible objects, such as tobacco or incense, get into the product.**

This may cause a fire.



Prohibitions!

**Do not use this air purifier in an indoor place where a fumigating pesticide is used.**

Chemical residues may accumulate in the product and be released from the air outlet as a hazard to the health.

- After using a pesticide, the room should be thoroughly ventilated before using the air purifier.



**When unplugging the power plug, hold the plug instead of the power cord.**

Pulling the power cord directly may cause a short circuit or damage to the power cord, or result in an electric shock or fire.



Prohibitions!

**Do not use this air purifier in places where greasy particles are present.**

For example, breakage or damage may occur to the air purifier that is placed in a kitchen.

- The air purifier shall not be used as a ventilator.

### Caution

In any of the following cases, turn off the power of the product immediately.

- If a switch does not work.
- If the circuit breaker is activated or the fuse is burnt.
- If the power cord or plug is hot.
- If you smell a burning smell, hear abnormal sound or feel vibration.
- If there are any other anomalies or malfunctions.



**If you use the product together with a heater a room, the room should keep ventilated.**

Otherwise carbon monoxide poisoning will occur.

If the product's power cord is damaged, you should contact the product manufacturer, service center or qualified technicians to replace the power cord in case any danger may occur.

 
## Precautions for use



### Caution

- This product is only for indoor instead of outdoor use.
- This product should be placed on a dry horizontal surface to use.
- Do not block the air inlet and outlet while the product is used.
- This product is not a substitute for a ventilation fan, vacuum cleaner or kitchen hood.
- If the room air quality is poor (e.g., there is a smell of smoke, newly decoration, etc.), it is strongly recommended to open the window while using this product so that better effects can be obtained.
- The distance between obstacles from all sides of the product being used should be more than 30CM respectively.
- Do not remove the front cover of the product being used in case the power supply would be cut off and unnecessary damage may occur to the product.
- If you need to dismount the front cover for maintaining the screen filter, turn off the product and unplug the power cord first.
  
- Do not place the product in the following places:
  - Close to walls, curtains or other soft objects. (This may block the air inlet and outlet and affect the air circulation.)
  - Places with direct sunlight. (Long-term sunshine may cause deformation and discoloration and affect the service life of the product.)
  - Near TV sets, microwave ovens and other objects that produce the magnetic field. (This may cause product malfunctions and noise problems.)
  - The air outlet is placed toward the furniture or other items. (Inclined to be stained.)

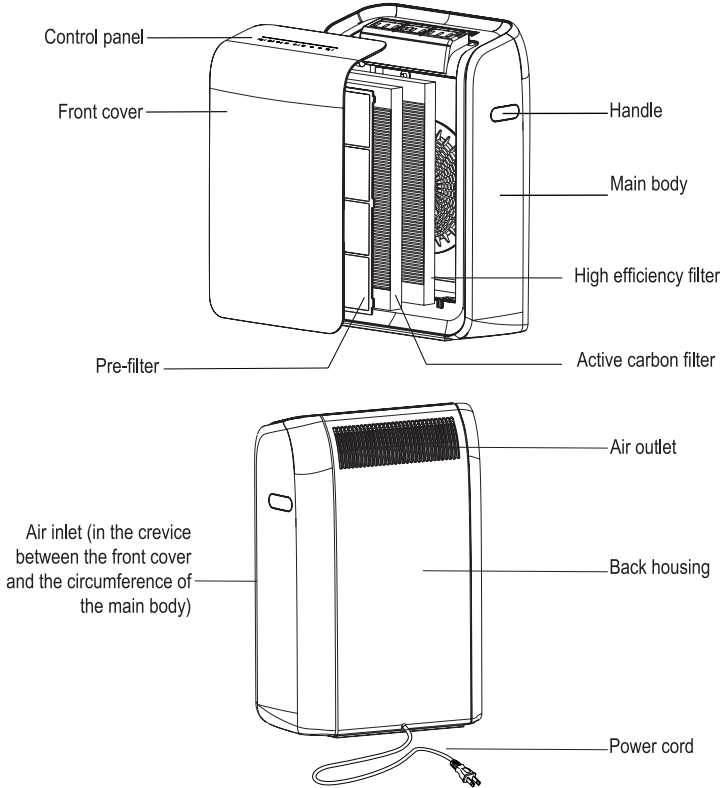

## Part Names



Filters	
Packed inside the product	Additional giftbox packed
 <p>Active carbon filter      High efficiency filter</p> <p>The above accessories have been placed in the product. Remove them from the product before using the product. Be sure to remove plastic packaging bags.</p>	 <p>Photocatalyst filter      Active carbon filter</p> <p>The above accessories are additional packed in a giftbox.  <b>Note:</b> Due to the difference on filter thickness, these two filters <b>MUST</b> be used in the same time to operate properly. Blue Tag is printed on the filters for easy identification. Please place the blue tag of the filter facing the users. Be sure to remove plastic packaging bags before installation.</p>

 
## Preparation before using the product

1. Unpack the product.


After opening the carton, you can see foam for protecting the main body.

As shown in the figure, remove the left and right foam for protecting the main body respectively.

(In order to ensure transport safety, the main body and the front cover are packaged separately)

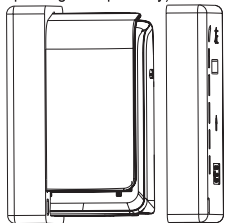


 3. Take the filters out of the packaging bag.

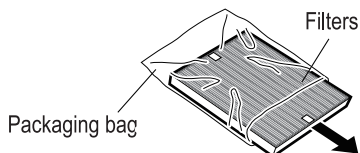

5. Install the Pre-filter.

 
Snap the boss on the perimeter of the Pre-filter into the slot of the main body.

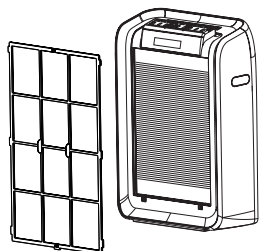


2. Remove the Pre-filter, Active carbon filter, and high efficiency filter in sequence.

① Remove the Pre-filter.

 ② Remove the Active carbon filter and high efficiency filter.

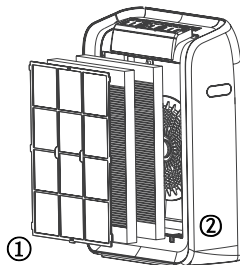

 
4. Re-install the High efficiency filter and Active carbon filter back into the product or Install the photocatalyst filter and Active Carbon filter into the product with the tag facing the users .

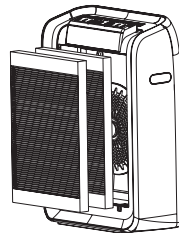

6. Install the front cover.

① Snap the upper claw of the front cover into the upper slot at the upper part of the main body.

 ② Hold the lower end of the front cover and press down slightly to snap the lower claw of the front cover into the lower slot of the main body.

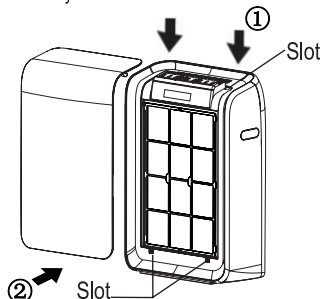

## Notice for Use

### Auto operation mode

In this mode, the product will automatically select a reasonable operating state according to the pollution degree of indoor air.

### Air Quality Indicator

Cigarette smoke, pesticides, cosmetics, cooking smells and rapid changes in temperature and humidity will affect the indicating state.

Air pollution level	Clean ←————→ Polluted			
Indicating color	Green	Blue	Yellow	Red
Air volume	Weak	Medium	Standard	High

### Safety Lock Function

If the product is running, when the user opens the front cover of the air purifier, the safety switch will turn off the power supply of the product spontaneously to ensure user safety. Although the product has a protection device, when the user needs to dismount the front cover for maintaining the filter or other purposes, please turn off the power switch of the product and unplug the power plug first.

### Filter Reset

When the filter needs to be replaced, the reset filter light is on and blinking, the color of the indicator light is red, and the wind speed limit is limited to "2", please replace the filter. After the filter is replaced, the user only needs to press the Filter Reset button for 4 seconds, and the reset filter indicator turns off. Reset the filter while the product resumes normal operation and recalculates the filter timer. If the reset filter indicator does not light and needs to be changed in advance, after the replacement, press and hold "On / Off" + "Reset Filter" for more than 4 seconds to reset the filter timer.

 
### Child Lock

Press "Filter Reset" and "Sleep" button for more than 3 seconds, there is a beep and the display shows "L" for 3 seconds. Child Lock function is activated. There will be no response when you press any button. Press "Filter Reset" and "Sleep" button at the same time again to unlock this function.



## Control Panel

### Panel indication and operation instructions

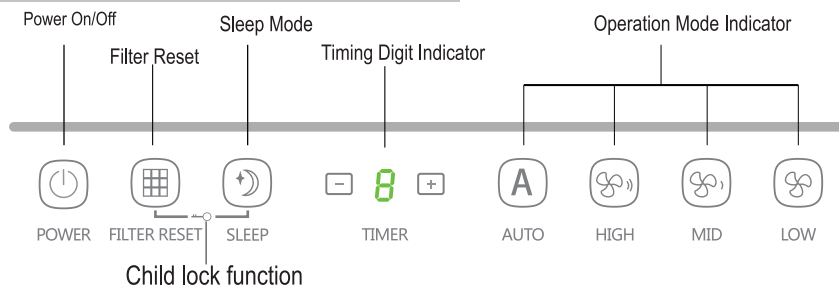

### Power-on

Plug the machine's power plug into a power socket.

- When the machine is powered up for the first time, the product will enter the idle mode after emitting a beep. None of the indicators will be lit at this moment.

### Operating

Press the power button

- Press the power button in the idle state, and all the function indicators of the product will light up.
- When the Air Quality Indicator color is cycled according to the detected air quality while the Auto Operation Mode Indicator is lit, the product will enter the Auto Operation Mode.
- After approximately 30 seconds, the Air Quality Indicator color will change to the color corresponding to the detected air quality.

### Mode Switching

- Operation Mode can be switched between Auto, High, Mid and Low modes, while functions are enabled and the corresponding indicators are lit.
- Running in the Auto Mode can achieve indoor air purification under general circumstances.

### Shutdown

Press the power button

- The product will stop running and enter the idle state. All the indicators will turn off.

 
## Instructions for Use

### Intelligent Operation Mode



#### Auto Mode

When powered on, the product enters the Auto mode. In this mode, the product will automatically select the appropriate wind speed according to the indoor air quality.

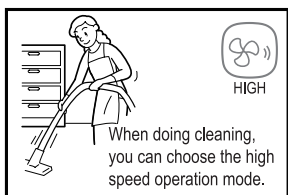

#### High Speed Mode

When someone is cleaning your home or smoking in your home, you can choose the High Speed mode. In this mode, the product has the strongest purification ability and can purify the indoor air quickly.



 
#### Medium Speed Mode

In this mode, the machine speed will be kept at "3", to purify air rapidly, but also reduce the power loss.



#### Low Speed Mode

In this mode, the wind speed will not be affected by the air quality indicator light, it will run at low speed, more comfortable and energy-saving to meet the needs of different customers.

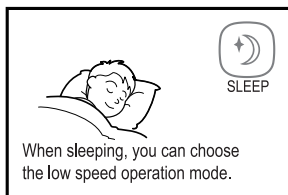


#### Sleep Mode

When you need a silent environment for sleeping, you can choose the Sleep Mode. In this mode, the machine will maintain low speed operation and turn off indicators (except Sleep Mode indicator) to avoid interfering with your sleep at night.

## Instructions for Use
 
### Intelligent Operation Mode

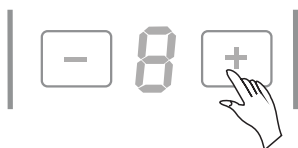

#### Timer

- Press the Timer button, and then you can set the operation time of the product.
- When the preset time is expired, the product automatically shuts down.
- The maximum timer time is 9 hours. The minimum timer time is 0 hours. When the timer is set to 0, the timing function of the product is disabled and the timing indicator goes out.

### Photocatalyst Function

- The products has a photocatalyst function.
- When Auto Mode is activated, the product will automatically turn on the photocatalyst UV lamp, and the photocatalyst assembly will work. The photocatalyst function is disabled in the “High” “Mid” “Low” and “Sleep” modes.

**Note: To avoid UV damage to the human body, do not closely observe with naked eyes when the UV lamp is powered on. Before dismantling the front cover for maintaining the filter or other purposes, please turn off the power supply of the product and unplug the power plug first.**

## Maintenance



**Warning** • The power plug must be unplugged

**Be sure to disconnect the product from the power socket before cleaning the product**

- Do not use the detergent shown on the right.
- When using a chemical wipe, please pay attention to the precautions for using a chemical wipe.
- Do not operate this product while the filter is dismantled. (If dust gets into the product, it may cause malfunctions and the purification effect will be unable to be achieved.)



 
**When the product will be unused for a long time**

- ① Unplug the power plug.
- ② Maintain the main body.
- ③ Put the product into the packaging bag. Put the bag into the packaging carton. Place the carton in a dry place.

## Maintenance

### Main body

- Please use a vacuum cleaner to clean the dust in the air inlet and outlet first.
- Finally, use a soft, dry cloth to wipe the surface of the entire main body.

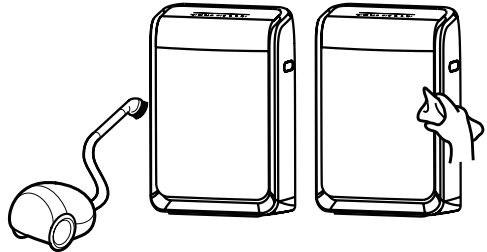


### Pre-filter

- Clean surface dust with a vacuum cleaner.
- Can be soaked with clean water and then cleaned and dried before being used.



### High efficiency filter / Photocatalyst filter

 
- Clean surface dust with a vacuum cleaner.
- The back does not need to be maintained.
- Cannot be washed
- Do not press hard.

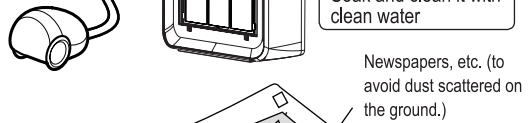

Soak and clean it with clean water

Newspapers, etc. (to avoid dust scattered on the ground.)

 Surface with color (Easily damaged, please do not press it with force)

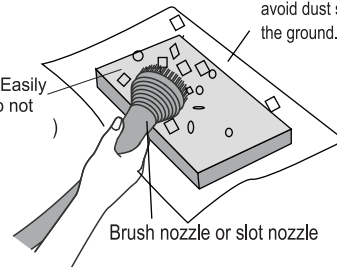

Brush nozzle or slot nozzle

### Active Carbon Filter

- Depending on the severity of the environment and running time may be generally used for 12 months.
- When there is strange smell, remove it from the product, remove the dust with a vacuum cleaner or a hair dryer, place it under the sun for 3-5 hours and then replace it back to the unit. If the odor cannot be removed, please consider to replace a new one.

## Filter Replacement

Filter replacement criteria (accessories will be sold separately)

Accessory Name	Replacement Cycle	Remarks
Active Carbon Filter	About 12 months	Packed inside the product
High Efficiency Filter	About 12 months	
Photocatalyst Filter (with blue tag)	About 12 months	Packed in additional giftbox
Active Carbon Filter (with blue tag)	About 12 months	

※ Depending on the site of use and the actual situation (such as families with high smoking), the filter replacement cycle may be shortened. Generally, when the effect is not good, please replace it promptly.

- See Page 6 of the Manual for the filter replacement method.
- After the replacement is completed, reset the filter.
- Dispose the used filter as a non-combustible waste.

## Specifications

Model No.	AP3602
Rated voltage / frequency	220V-240V~50-60Hz
Rated input power	65W
Product Weight	9.7kg
Noise	Sound power level noise limit 63dB(A)
Product Size	405mm (width) x 235mm (depth) x 615mm (height)

## Troubleshooting Guide

- When the machine does not work properly, confirm the following issues first. If the machine still cannot work properly, unplug the power plug and take it to the repair station for repair service.

Common Problems	Solution
The product does not work properly	<ul style="list-style-type: none"><li>● Please check whether the plug is plugged into the socket properly</li><li>● Please check whether the power button is turned on</li><li>● Please check whether the front cover is installed in place. Reinstall the front cover.</li></ul>
The product does not work after powered on	<ul style="list-style-type: none"><li>● Please check whether the front cover is installed in place. Reinstall the front cover.</li></ul>
Buttons make no response	<ul style="list-style-type: none"><li>● Please check whether the plug is plugged into the socket properly</li><li>● Please check whether the power button is turned on</li><li>● Please check whether the Child Lock function is enabled</li></ul>
Fresh air cannot be sent out smoothly	<ul style="list-style-type: none"><li>● Please check whether the plastic packaging of the new filter has been removed. Please remove the plastic packaging first</li><li>● Please check the state of the filter. If the filter is dirty, replace it with a new filter.</li></ul>
Poor air purification effect	<ul style="list-style-type: none"><li>● Please check whether the filter needs to be replaced</li><li>● The air quality of the room where you use this product may be very poor. In this case, open the window to improve air circulation</li></ul>
The screen filter replacement indicator is lit	<ul style="list-style-type: none"><li>● Please replace the filter</li><li>● After the filter is replaced, press and hold the Filter Reset button for 4 seconds, and then the filter timer will be reset</li></ul>

## Packing List

No	Name	Quantity	Remarks
1	Main body	1	
2	Manual	1	
3	Warranty Card	1	
4	Pre-filter	1	Installed inside the product
5	Active Carbon Filter	1	Installed inside the product
6	High Efficiency Filter	1	Installed inside the product
7	Photocatalyst Filter (with blue tag)	1	Packed in additional giftbox
8	Active Carbon Filter (with blue tag)	1	Packed in additional giftbox

感謝您選購Whirlpool產品，為了更好及更安全地使用，操作前請仔細閱讀本說明書，並請妥善保存此說明書以備日後參考之用。

## 目 錄

安全注意事項 .....	2
使用注意事項 .....	3
部件名稱 .....	5
使用前準備 .....	6
使用須知 .....	7
操作面板 .....	8
使用方法 .....	9
維護保養 .....	11
技術規格 .....	12
故障排除指南 .....	13
裝箱清單 .....	14

## 安全注意事項

為了避免對您自己或其他人造成可能的傷害或財物損害，請務必注意以下注意事項：









■ 無視或錯誤理解這些標誌，會產生下面兩種情況：

 <b>警告</b>	本標誌所表示的內容為“可能造成人員重傷或死亡”。	 <b>注意</b>	本標誌所表示的內容為“可能造成人身傷害或其他物品損害”。
---	--------------------------	---	------------------------------

■ 務必遵守的內容分類，用標誌區分說明如下：

 此標誌表示禁止事項。	 此標誌表示強制事項。
--	--

## 警告

<p> <b>切勿擅自拆開或改裝本空氣淨化機。</b> (擅自拆開或改裝電器可能會導致事故或火災事故。)請與指定維修店聯繫，以便安排維修。</p> <p> <b>移動或存放時切勿拉扯電源線。</b> (否則可能導致短路或電源線內部損壞，發生火災或觸電事故。)</p> <p><b>切勿用濕手接觸電源插頭。</b> (否則可能會導致觸電。)</p> <p><b>切勿損壞電源線和插座。</b></p> <ul style="list-style-type: none"> <li>切勿割劃、改裝、過度扭曲、拉扯、扭轉和擰絞電線，切勿在電源線上放置重物或擠壓。</li> </ul> <p><b>(使用已破壞的電源線可能會導致觸電或火災事故。)</b></p> <ul style="list-style-type: none"> <li>要修理電源線或插頭時，請與指定維修店聯繫。</li> </ul> <p><b>切勿使用超出額定值的電源、萬能插座或連接設備，只可使用220V交流電源。</b> (使用超出額定值的萬能插座或連接設備，可能會導致電源過熱，引起火災事故。)</p> <p><b>為了更好的保護產品，延長使用壽命，請勿快速頻繁的插拔電源插頭。</b></p>	<p> <b>請您定期清潔電源插頭。</b></p> <ul style="list-style-type: none"> <li>如果電源插頭上有灰塵，濕氣可能會破壞插頭的絕緣部分，從而導致火災事故。</li> <li>拔下電源插頭，用乾布擦淨。電器如長期不使用，應拔下電源插頭。</li> </ul> <p> <b>請將插頭完全插入電源插座。</b></p> <ul style="list-style-type: none"> <li>如果插頭沒有完全插牢，可能會因為過熱導致觸電，甚至引起火災事故。</li> <li>切勿使用已壞的插頭或鬆動的電源插座。</li> </ul> <p> <b>禁止兒童直接操作使用產品。</b> (可能導致觸電、受傷。)</p> <p> <b>禁止使用氯類以及酸性的洗滌劑。</b> (洗滌劑中散發的有毒氣體損害健康。)</p> <p> <b>禁止將手指或金屬物放入進風口、出風口等縫隙處。</b> (接觸產品內部可能導致觸電或受傷。)</p> <p> <b>此機不適合傷殘人士，知覺障礙人士，智力障礙人士或兒童自行操作。如有安全負責人在場監督及提供指導下協助操作此機，則屬例外。</b></p>
---	--



## 使用注意事項

### 警告



切勿弄濕機身。

禁止弄濕！

- 否則可能導致短路而發生火災或觸電事故。



移動時

- 停止運轉
- 手持把手



機體請勿放倒運轉。

禁止！

- 否則可能導致內部部件損壞，引發觸電或火災事故。

### 注意



切勿使用苯或稀釋劑等溶劑清潔空氣淨化機，還要避免接觸殺蟲噴霧劑。

禁止！

空氣淨化機可能會破裂而導致損傷，甚至發生短路，以致造成觸電或火災事故。



禁止弄濕！

不可在高溫、高濕或會弄濕機體的場所使用本空氣淨化機，例如浴室。

空氣淨化機可能會漏電而造成觸電或發生火災事故。



禁止！

不可在存有油膩微粒的場所使用本空氣淨化機。

例如廚房內的場所空氣淨化機可能會破裂而造成損傷。

- 本空氣淨化機不應用作通風抽氣設備。



遠離火焰！

切勿讓揮發性物質或可燃物品，例如煙草或香火等飄入機內。

否則可能會發生火災事故。



禁止！

不可在有薰蒸類型殺蟲劑的室內使用本空氣淨化機。

化學殘餘物可能會積聚在機內，然後從出風口中釋放而危害健康。

- 使用殺蟲劑後，應該讓房間徹底通風，然後才可以使用本空氣淨化機。



如與取暖器（加熱器一起使用本空氣淨化機，房間需通風）。

否則會發生一氧化碳中毒事故。

### 注意

當有以下的任何情況出現時，請立即關掉機器的電源。

 
- 如果某一開關無法操作。
- 如果斷路器起作用或保險絲燒毀。
- 如果電源線或插頭異常發熱。
- 如果您發覺有燒焦的異味或異常的聲音或振動。
- 如果有其他任何異常現象或故障。

如果機器的電源線損壞，必須委託該機器的廠商、維修服務中心或合資格的技術人員替您更換，以防發生危險。


## 使用注意事項

### 注意

- 本產品只能在室內使用，嚴禁戶外使用。
- 本產品需放置在乾燥的水平面上使用。
- 使用時不要堵住進風及出風口。
- 本產品不能替換氣扇、吸塵器或廚房中的抽油煙機。
- 如果房間空氣品質較差（如油煙味及新裝修後的異味等），強烈建議使用本產品的同時打開窗戶以獲得更好的效果。
- 產品使用時，與四周障礙物的距離應大於30厘米。
- 產品在運作時，請勿直接拆下前蓋，以免強行斷電，對機器造成不必要的傷害。
- 因維護過濾網等原因，需要拆下前蓋時，請先關閉機器，拔下電源。
- 切勿放置於以下場所：
  - 緊靠牆壁或者窗簾等柔軟物體。（可能會阻擋進出風口，而影響空氣迴圈。）
  - 陽光直射的場所。（長期的日照，可能會造成變形、變色，而影響產品壽命。）
  - 電視、微波爐等產生磁場的物體附近。（可能會引起產品功能紊亂及噪音問題。）
  - 出風口正對傢俱或其他物品。（易出現污跡。）

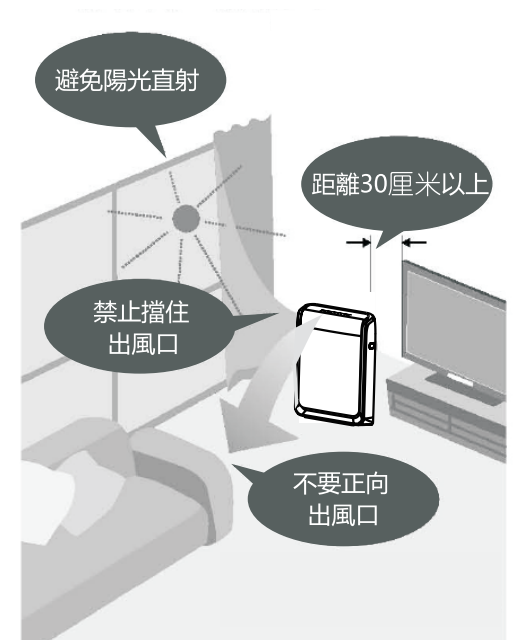

## 部件名稱

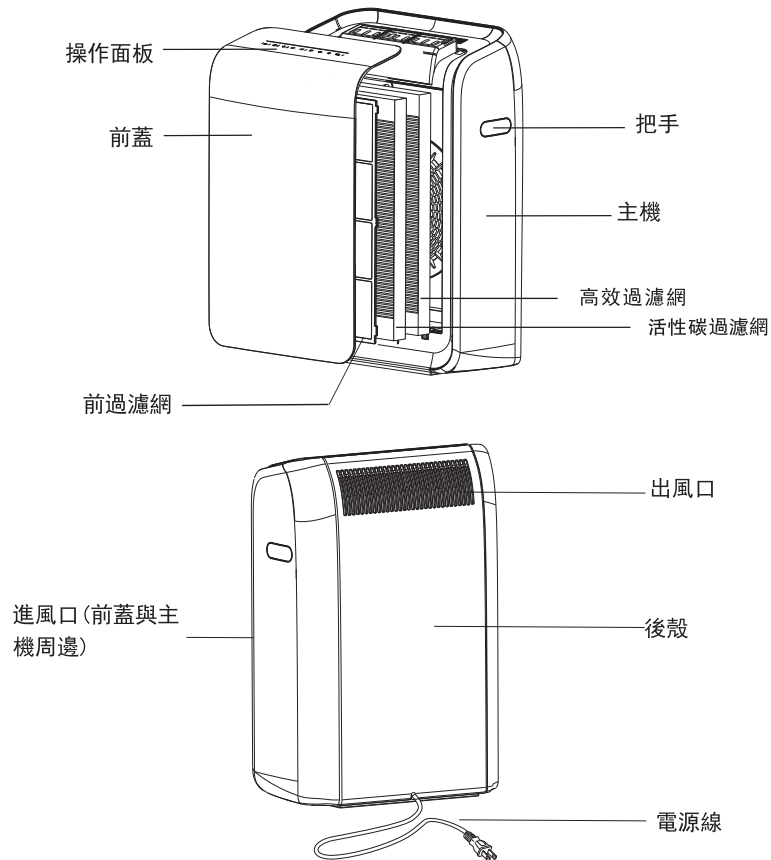 


過濾網	
隨機附送	額外的彩盒包裝內
<p>活性炭過濾網      高效過濾網</p> <p>以上附件已放入機器內。使用前請從機器內取出，請務必將包裝袋除去。</p>	<p>以上附件裝在額外的彩盒包裝內。</p> <p>光觸媒過濾網      活性炭過濾網</p> <p>以上附件裝在額外的彩盒包裝內。 <b>注意：</b>由於兩個過濾網的厚度不一樣，兩個過濾網<b>必須</b>同時共用，以免影響效能。過濾網上已印有藍色標籤方便用家分辨。擺放過濾網時，藍色標籤必須面向用家。請務必在安裝前將包裝袋除去。</p>


## 使用前準備
 
### 1. 打開包裝

打開包裝箱後能看到整機發泡，如圖，然後，依次取下整機的左\右發泡。（為保障運輸安全，產品主機與前蓋分開包裝）

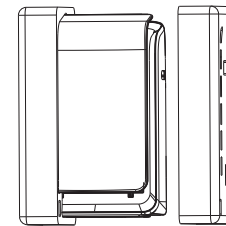


### 3. 將過濾網從包裝袋內取出。

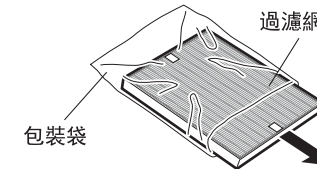 


### 5. 安裝前過濾網

 將前過濾網周邊的扣位，對應安裝到產品主機的卡槽中。

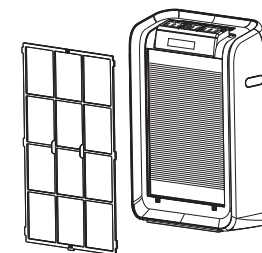


### 2. 依次取出前過濾網、活性炭過濾網和高效過濾網。

 - ① 取出前過濾網。
- ② 取出活性炭過濾網、高效過濾網。

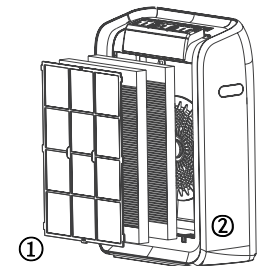


 4. 將活性炭過濾網和高效過濾網重新安裝至機器中，或將光觸媒過濾網和活性炭過濾網安裝至機器中。（藍色標籤必須面向用家）

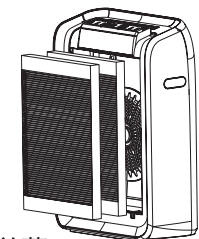

### 6. 安裝前蓋

 - ① 將前蓋上部的卡位對應安裝到機器上部的扣位槽中。
- ② 手握前蓋底端，向下稍許用力將前蓋下部的卡位對應安裝到機器下部的扣位中。

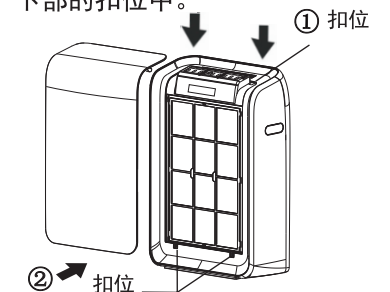

## 使用須知

### 自動運轉模式

此模式下，機器會根據室內空氣的污染程度，自動選擇適合的工作狀態。

### 空氣質量指示燈

香煙煙霧、殺蟲劑、化妝品、烹飪氣味及溫濕度的急劇變化等都會影響指示狀態。

空氣污濁程度	乾淨 ←————→ 污濁			
標示顏色	綠色	藍色	黃色	紅色
風量	弱	弱	中	強

### 安全鎖功能

如果產品正在運行，當用戶打開空氣淨化機前蓋，安全開關會強制機器斷電，確保用戶安全。

### 重置過濾網

當過濾網需要更換時，重置過濾網指示燈亮起並閃爍，顯示燈顏色為紅色，風速檔位限制在“2”檔，此時請更換過濾網。濾網更換後，用戶只需輕觸面板重置過濾網指示按鍵4秒，重置過濾網指示燈熄滅。同時產品恢復正常運作，並對過濾網重新計時。

 
如果重置過濾網指示燈未亮而需要提前更換濾網，更換完成後，在開機狀態下長按“開/關”及“重置過濾網”按鍵4秒以上，以重置過濾網的計時信息。

### 兒童鎖

同時按住“重置過濾網”以及“睡眠模式”按鍵3秒以上，產品將進入鎖定狀態並發出“嗶”聲，同時數碼定時屏顯示“L”3秒提示用戶按鍵已鎖定，此時，用戶操作任何按鍵，所有按鍵均不能操作，再次同時按住“重置過濾網”以及“睡眠模式”按鍵解除兒童鎖功能。

## 操作面板

### 面板指示及操作說明

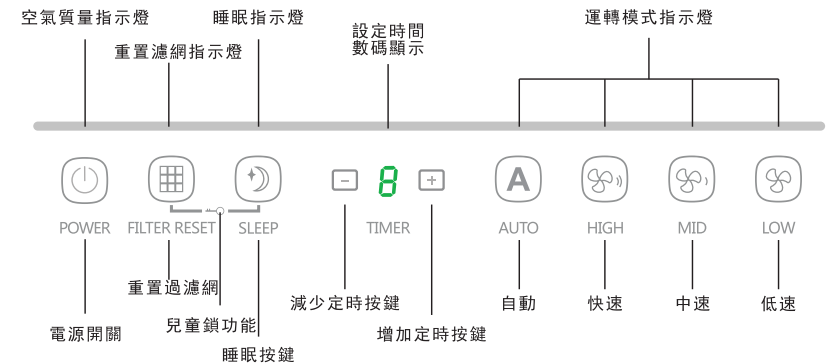

### 通電

將機器的電源插頭插入電源插座

- 機器首次通電，會有一聲“嗶”響提示，隨即進入待機狀態，此時所有指示燈均熄滅。

### 運行

輕觸電源按鍵

- 待機狀態輕觸電源按鍵，機器所有功能指示燈全部亮起。
- 空氣質量指示燈顯示顏色依次循環，進行空氣質量的檢測，此時自動運行模式指示燈亮起，產品進入“自動”運行模式。
- 約30秒後，空氣質量指示燈顏色轉換到檢測後的空氣質量顯示。

### 模式切換

- 運轉模式可以在自動、高、中、低、睡眠模式間切換，啟動功能，相應指示燈亮起。
- 以自動模式運行即可滿足一般情況下的室內空氣淨化。

### 停機

輕觸電源開關按鍵

- 機器停止運行，進入待機狀態，所有指示燈熄滅。

## 使用方法

### 智能運轉模式



#### 自動模式

開機時，機器進入自動運行模式。  
此模式下，機器會根據室內空氣質量自動選擇合適的風速運行。



#### 高速模式

當家中打掃或有人吸煙時，可以選擇快速模式。此模式下，機器淨化能力最強，可快速淨化室內空氣。



#### 中速模式

此模式下，機器風速會維持在第“3”檔，既能快速淨化空氣，亦能減少功率的損耗。



#### 低速模式

此模式下，風速將不受空氣質量顯示燈的影響，會以低速運行，更舒適、節能滿足不同客戶的需求。



#### 睡眠模式

當在休息需要靜音時，可以選擇睡眠模式。此模式下，機器保持低速運行，除睡眠指示燈亮外，其餘指示燈關閉，避免晚間干擾睡眠。

## 使用方法

### 智能運行模式



#### 定時設置

- 輕觸定時鍵，然後設定機器運行時間。  
按鍵 **+** 每次增加一小時。  
按鍵 **-** 每次減少一小時。
- 設定時間到，機器自動關閉。
- 最大設定時間為9小時，最小設定時間為0小時，當定時時間設置為0時，定時功能取消，此時定時指示燈熄滅。

### 光觸媒功能

- 產品設置有光觸媒功能。
- 當啟動“自動”運行時，產品會自動開啟光觸媒UV燈裝置，光觸媒組件開始工作。  
在“高”、“中”、“低”、“睡眠”模式時，光觸媒功能不啟動。

注意：為了避免紫外線對人體的傷害，請勿近距離直接目視通電狀態的UV燈裝置。打開前蓋更換過濾網等操作前，請先切斷機器電源。

## 維護保養



### 清潔電器前，請確保斷開電源插座

- 禁止使用右邊所示的洗滌劑。
- 使用化學抹布時，請留意化學抹布的使用注意事項。
- 過濾網在拆下狀態時請勿運行本機（如果灰塵吸入機內，可能會造成故障，失去淨化效果。）



 
### 長期不使用時

- ① 拔下電源插頭。
- ② 對機體做維護保養。
- ③ 套上包裝袋，放入包裝箱內，置於乾燥處保管。

## 維護保養


### 主機

- 請先使用吸塵機吸走進風口及出風口的灰塵。
- 最後使用柔軟的乾布擦拭整個主機的表面。

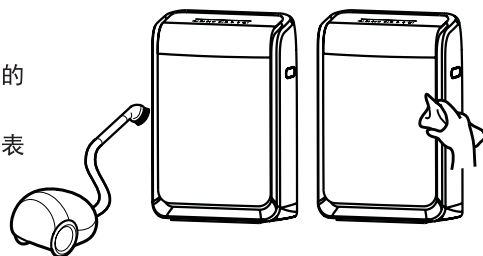


### 前過濾網

 - 可使用吸塵機吸走表面灰塵。
- 可用清水浸泡清洗。

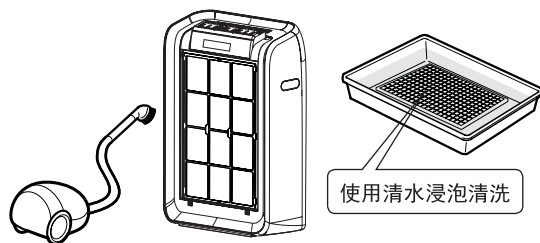

### 高效過濾網 / 光觸媒過濾網

 - 使用吸塵機吸走表面灰塵。
- 背面無需保養。
- 不可水洗。
- 不可用力按壓。

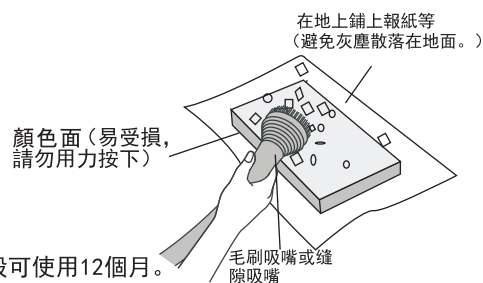

### 活性炭過濾網

- 視乎環境惡劣程度及運行時間而定, 一般可使用12個月。
- 當感到有異味時, 將其取出用吸塵機或吹風機去除表面積塵, 放置在陽光下晾曬3-5小時再放回即可, 如果異味還不能去除, 則需要考慮更換。

## 維護保養

### 更換過濾網

更換過濾網的標準(另行出售配件)

部件名稱	更換週期	備註
活性炭過濾網	約12個月	裝在主機內
高效過濾網	約12個月	
光觸媒過濾網(印有藍色標籤)	約12個月	裝在額外的彩盒包裝內
活性炭過濾網(印有藍色標籤)	約12個月	

※ 根據使用場所和實際情況(例如吸煙較多的家庭), 過濾網更換週期可能會縮短。當過濾網效果不好時, 請及時更換。

- 更換過濾網的方法參見說明書第6頁。
- 更換後, 請重置過濾網。
- 請將用過的過濾網作為非可燃垃圾處理。

## 技術規格

產品型號	AP3602		
額定電壓頻率	220-240V~50-60Hz		
額定輸入功率	65W	產品重量	9.7KG
噪音	聲功率級噪聲限值為63dB(A)		
產品尺寸	寬405mmX深235mmX高615mm		

## 故障排除指南

■ 機器發生故障時，請先確認以下事項，如仍未能恢復使用，請拔下電源插頭並送到維修店處理。

常見問題	解決辦法
產品無法正常運行	<ul style="list-style-type: none"> <li>請檢查插頭是否正確插入插座</li> <li>請檢查是否打開“電源”按鍵</li> <li>請檢查前蓋是否安裝到位，請重新安裝前蓋</li> </ul>
接通電源機器不工作	<ul style="list-style-type: none"> <li>請檢查前蓋是否安裝到位，請重新安裝前蓋</li> </ul>
按鍵失靈	<ul style="list-style-type: none"> <li>請檢查插頭是否正確插入插座</li> <li>請檢查是否打開“電源”按鍵</li> <li>請檢查是否設置“兒童鎖”功能</li> </ul>
清新空氣無法從出風口順暢送出	<ul style="list-style-type: none"> <li>請檢查是否已拆除新過濾網的塑料包裝。請先拆除塑料包裝</li> <li>請確認過濾網狀況，若過濾網過髒，請更換新過濾網</li> </ul>
空氣淨化效果不佳	<ul style="list-style-type: none"> <li>請檢查過濾網是否需要更換</li> <li>可能您使用本產品的房間周圍空氣質量非常差。這種情況下，請打開窗戶促進空氣流通</li> </ul>
過濾網更換指示燈亮起	<ul style="list-style-type: none"> <li>請更換新過濾網</li> <li>更換過濾網後，請輕觸“重置過濾網”鍵4秒，將過濾網計時器重置。</li> </ul>
空氣質量指示燈閃爍	<ul style="list-style-type: none"> <li>請確認過濾網狀況，若過濾網過髒，請更換新過濾網</li> <li>請關機重新啟動機器</li> </ul>

## 裝箱清單

序號	名稱	數量	備註
1	主機	一台	
2	說明書	一份	
3	保養卡	一份	
4	前過濾網	一個	裝在主機內
5	活性炭過濾網	一個	裝在主機內
6	高效過濾網	一個	裝在主機內
7	光觸媒過濾網(印有藍色標籤)	一個	額外的彩盒包裝內
8	活性炭過濾網(印有藍色標籤)	一個	額外的彩盒包裝內

