


Whirlpool



Health & Safety, Use & Care and **Installation** guide
產品安全指引、使用說明及安裝指南

Model 產品型號 : ART890A++NF HK

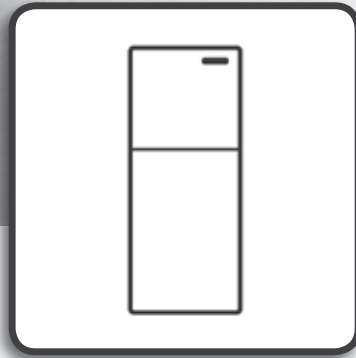

www.whirlpool.com.hk



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT

In order to receive a more complete assistance, please register your product on www.whirlpool.com.hk/member/login



Before using the appliance carefully read the Safety Instruction.


1. PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

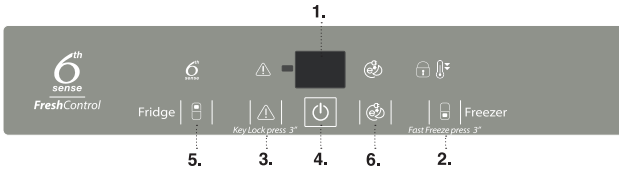

1. Temperature Display
2. Freezer temperature - Fast freeze
3. Turning off the sound alarm - Child Lock
4. On/ stand-by
5. Refrigerator temperature
6. EcoNight

6TH SENSE FRESH CONTROL

The appliance is automatically able to quickly reach the optimal internal preservation temperature. The function enables to control also the humidity of the appliance. In order for it to function correctly, the fan must also be turned on. It is possible to turn the function on/off (see Fan description).

FAN

You can turn the Fan on/off by pressing the button on the base (as shown in the figure). If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.



ANTIBACTERIAL FILTER

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.

ON/STAND-BY




In Stand-by mode, two dashes light up on the display and the light in the refrigerator compartment does not turn on.

Note: this does not disconnect the appliance from the power supply.

TEMPERATURE DISPLAY

The display may alternately show the refrigerator compartment temperature (between 2°C and 8°C) or the temperature of the freezer compartment (between -16°C and -24°C).

ECO NIGHT FUNCTION

 The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the Eco night button at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.


IMPORTANT: To operate properly, the function must be active during both night and day. The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again. When the Eco night LED is OFF, the function is not active.

Note: the appliance's declared energy consumption refers to operation with the Eco night function deactivated.

TURNING OFF THE SOUND ALARM


 To turn off the sound alarm, briefly press the  button.

"CHILD LOCK"


 The "Child Lock" can be activated/deactivated by keeping the "Alarm" button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up).

If you press any button while the "Child Lock" is active, you will hear a sound and the "Child Lock" icon will flash.



REFRIGERATOR COMPARTMENT TEMPERATURE

 It is possible to set a different temperature with the "Fridge" button.

FREEZER COMPARTMENT TEMPERATURE

 It is possible to set a different temperature with the "Freezer" button.


FAST FREEZE

 Press the "Freezer" button for 3 seconds 24 hours before putting large quantities of food to freeze in the freezer compartment. When the function is turned on the icon lights up .

The function turns off automatically after 48 hours, or manually by pressing the "Freezer" button again for 3 seconds.

Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.

2. HOW TO STORE FOOD AND BEVERAGE

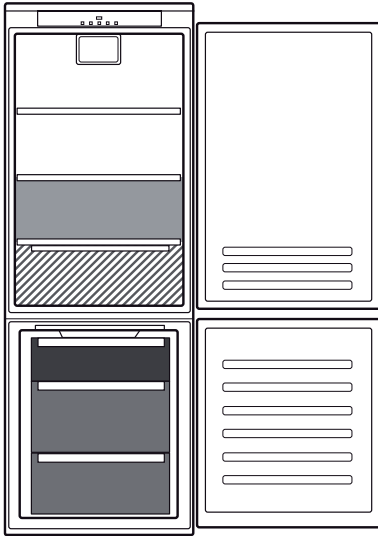

Legend



TEMPERATURE ZONE

Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



COOL ZONE

Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt



COOLEST AREA

Suggested for storage of cold cuts, desserts, meat and fish



FRUIT & VEGETABLE DRAWER



FREEZER DRAWERS








FREEZING ZONE DRAWER

(Max cool zone)

Suggested to freeze fresh/cooked food

3. TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> • there is not a power outage; • the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered); • the household electrical system protection devices are efficient; • the power cable is not damaged.
The inside light does not work.	The light may need to be replaced.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Check that: <ul style="list-style-type: none"> • the doors are closed properly; • the appliance is not installed near a heat source; • the temperature is adequate; • the circulation of air through the ventilation of the appliance is ensured.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").

<p>The front edge of the appliance, at the door striker seal, is hot.</p>	<p>This is not a defect. It prevents condensation from forming.</p>	<p>No solution is necessary.</p>
<p>The red  icon flashes, and a sound signal is activated.</p>	<p>Door open alarm It is activated when the refrigerator and/or freezer compartments door remains open for a prolonged period of time.</p>	<p>To turn the sound signal off, close the open door of the product.</p>
<p>The red  icon flashes, a sound signal is activated and the  icon is activated.</p>	<p>Blackout alarm This activates when there is a prolonged interruption to the power supply which has caused an increase in temperature in the freezer compartment. Note: until the blackout alarm is deactivated, you cannot set a different temperature for the product.</p>	<p>Before turning off the sound signal, it is recommended that you pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power cut. To turn the sound signal off, briefly press the “Turn off sound alarm” button. After pressing the button, the temperature display will again show the temperature set. If the freezer compartment has not yet reached the optimal temperature for the preservation of the food, the freezer compartment temperature alarm may activate (see freezer compartment temperature alarm). Check the condition of the food before consuming it.</p>
<p>The red  icon is lit up (without flashing), a sound signal is activated and the freezer temperature display is flashing.</p>	<p>Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment is not at the optimum temperature. This may occur; when using for the first time, after defrosting and/or cleaning, when freezing large quantities of food or when the door to the freezer does not close completely.</p>	<p>To turn off the sound signal, briefly press the “Turn off sound alarm” button (the temperature display will stop flashing). When the optimum temperature conditions have been reached, the red icon will automatically turn off. If the freezer compartment temperature alarm continues, contact the Authorised Technical Assistance Service.</p>
<p>The red  icon will light up, a sound signal is activated and the letter “F” is flashing on the display.</p>	<p>Malfunction alarm The alarm indicates the malfunction of a technical component.</p>	<p>Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the “Turn off sound alarm” button.</p>

You can download the user manual by:

- Visiting our website www.whirlpool.com.hk
- Alternatively, **contact our After-sales Service** at 852 2406 9138. When contacting our After-sales Service, please state the codes provided on your product's identification plate.





感謝購買惠而浦的產品

務求能為您提供最全面的協助，請在我們的網頁 www.whirlpool.com.hk/member/login 登記此產品。



使用此產品前，請先仔細閱讀本使用說明書。


1. 產品資料

首次使用

請於安裝後最少2小時後方可接駁電源。在接駁電源後，產品會立即自動進行運作，並以出廠前預先調較為最理想的溫度。

請於等待開始運作後約4-6小時，雪櫃會調節至一個正常保存食物的理想溫度。請將抗菌過濾器按包裝上所示(如有)放置於風扇之內。如果訊號聲響，即表示溫度警報已啟動，請按一下按鈕以關閉有關訊號聲響。

操作面板

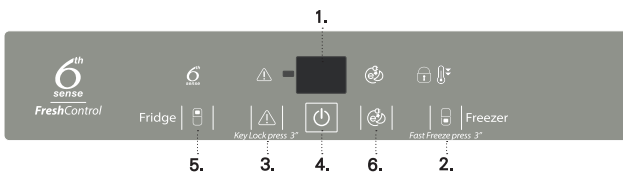

1. 溫度顯示
2. 急凍室溫度 - 快速急凍
3. 溫度或故障顯示/兒童鎖
4. 開啟/待機
5. 冷藏室溫度
6. 夜間環保模式

「第六感」智能保鮮技術

此功能能感應雪櫃內的儲存量而自動調節溫度，亦能控制有關濕度。為確保此功能正常地運作，請同步開啟風扇。風扇是可以選擇開啟或關閉，詳情請閱讀「風扇」之說明。

風扇

您可以透過風扇底部之按鈕(如圖)選擇開啟或關閉。如雪櫃內溫度超過27°C，或玻璃層架上出現水珠，請務必開啟風扇以確保能妥善地保存食物。而關閉風扇則能減低電源的使用量。



抗菌過濾

請從蔬果保鮮格中將過濾器取出並拆開包裝，然後將它安裝於風扇的外罩內。有關更換過濾器之詳情已詳列於包裝盒上。

開啟/待機



當進入待機模式，在顯示屏上之燈號會亮起，而冷藏室內則不會有燈光。

溫度顯示

顯示屏會顯示當時冷藏室之溫度(2°C至8°C之間)或急凍室之溫度(-16°C至-24°C之間)。

夜間環保功能




夜間環保功能可使雪櫃集中於電費最低之時段(一般為晚上)進行操作，目的是節省於日間操作電器的較高用電成本，甚至不受限地免費用電(只適用於實行按日分時段電費制度的國家，請向閣下所在地區的電力公司查詢有關用電收費計劃)。如需啟用本功能，請於低電費時段開始時(請參閱閣下適用的電費計劃)按「夜間環保功能」鍵。當夜間環保功能指示燈亮起，即表示此功能經已開啟。當啟用本功能，閣下的電器將根據所設定的時間自動調整用電操作。換言之，閣下的電器於日間的用電量將少於晚上。

重要事項：為確保正確運作，本功能必須保持全日開啟。本功能一經啟用即保持操作直至被解除(如出現電力中斷或電源被關掉的情況，本功能將自行解除)。如需解除本功能，請再按「夜間環保功能」鍵一次。當夜間環保功能指示熄滅，表示本功能經已解除。

注意事項：本產品所公佈之耗電量為按產品於夜間環保功能被解除的情況下計算。

關閉響鬧警示



如欲關閉響鬧警示，請輕按  鍵。

兒童鎖



如欲開啟或關閉兒童鎖功能，請長按「警示」鍵3秒，產品會發出響聲以示確認(「警示」鍵亦會亮起)。

當兒童鎖功能啟動，無論你按任何功能，產品均會發出響聲，而兒童鎖之標誌亦會同時閃亮以作提醒。

冷藏室溫度



可以使用「冷藏室溫度」功能以設定不同溫度。


冷凍室溫度



可以使用「冷凍室溫度」功能以設定不同溫度。


快速冷凍功能



假如需要冷凍較多份量的食物，請於放入食物前24小時預先開啟快速冷凍功能。持續按「冷凍」功能3秒即可啟動運作。當功能開啟， 之標誌會同步亮起。本功能除可透過重複上述步驟手動關閉外，也會在開啟48小時後自行關上。

注意事項：請避免新鮮的食物與已冷凍的食物有直接接觸。如欲加快冷凍速度，可取出冷凍室之抽屜，並將食物直接放置於冷凍室的下層。

2. 如何儲藏食物及飲料

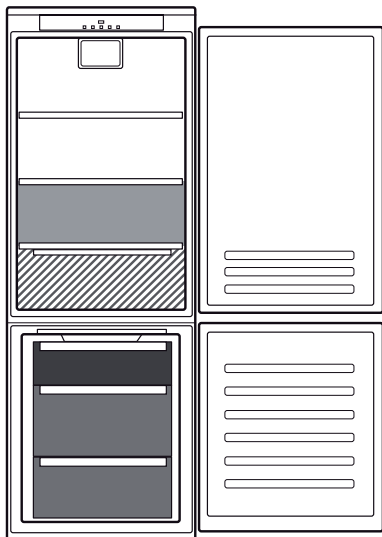


Legend



溫度控制區

 建議用於存放熱帶水果、罐頭、飲料、雞蛋、醬汁、醃漬物、牛油、果醬等



冷凍區

建議用於存放芝士、牛奶、日常食品、熟食、乳酪等



最冷區

建議用於存放冷盤、甜點、魚類及肉類等



水果與蔬菜格



冷凍格








冷凍區儲存格

(最高冷凍溫度)

建議冷凍新鮮或已煮熟食物

3. 故障排除

如以下情況出現...	可能成因	解決方法
操作面板顯示消失，同時產品無法操作。	產品可能處於待機狀態，或連接電源可能出現問題。	以「開啟」按鈕啟動產品，並檢查： <ul style="list-style-type: none"> ● 電力供應是否中斷 ● 電源掣是否已正確連接上插座，而開關總掣又是否處於正確位置(即產品取得電力供應來源) ● 家居供電系統的漏電安全保護裝置運作正常 ● 電源線是否損壞
雪櫃內照明燈熄滅。	照明燈或需更換。	需使用LED燈；請聯絡惠而浦客戶服務中心。
	產品可能處於待機狀態。	以「開啟」按鈕啟動產品。
雪櫃內冷度不足。	可出於多種原因(參閱「解決方法」一欄)。	檢查： <ul style="list-style-type: none"> ● 櫃門已妥善關上 ● 產品附近沒有擺放發熱物件 ● 已設定合適溫度 ● 已確保空氣流通暢順
冷藏格底部積水。	溶雪水的收集管道受阻。	清潔收集溶雪水的管道(參閱「保養及清潔產品」一章)。

產品前端近櫃門封條位置產生微溫。	這並非故障現象，而是防止冷凝產生的設計。	毋須採取任何行動。
紅色  指示燈閃動，並響起警示訊號。	門開警示 當雪櫃或冷凍室櫃門打開相對比較長的時間，警號便會響起以作提示。	只需關上櫃門即可停止警示訊號。
紅色  指示燈閃動及響起警示訊號，同時  標誌亮起。	停電警示 假如電力長時間中斷導致冷凍室溫度持續上升，將觸發此警示。操作面板顯示上閃動的數字代表電力中斷期間冷凍室內最高溫度。 注意事項： 除非停電警示解除，否則您將不能設定產品的其他溫度。	在關閉響鬧警示前，我們建議閣下先留意在顯示屏上所示之溫度，該溫度顯示當時櫃內於停電其間最高之溫度。如欲關閉響鬧警示，只需輕按「關閉響鬧」鍵即可。 當關上有關警示，溫度顯示屏將再度顯示之前所設的溫度。如冷凍室未能達至可保存食物之溫度，「冷凍室溫度警示」將會響起(請參閱有關說明)。請務必在食用前檢查食物的狀況。
紅色  指示燈亮起(並無閃動)及響起警示訊號，同時冷凍溫度顯示閃動。	冷凍室溫度警示 代表冷凍室的溫度未達至理想。可能成因：溶雪或清洗雪櫃後首次操作、冷凍的食物份量較多或雪櫃門未有妥善關上。	按下「警示靜音」掣可關掉響鬧警示。當雪櫃溫度恢復合適水平，紅色LED燈會自行熄滅。假如溫度警示持續，請聯絡惠而浦客戶服務中心。
紅色  指示燈亮起及響起警示訊號，同時顯示屏上出現「F」字並閃動。	故障警示 若警示出現，代表產品的零件出現故障。	聯絡惠而浦客戶服務中心，按下「響鬧靜音」掣將響號關掉。

你可經以下途徑獲得此產品之使用指南：

- 瀏覽我們的網頁 www.whirlpool.com.hk
- 或致電我們的惠而浦售後熱線 (852) 2406-9138，並請提供產品標籤上之機身編號(參考右圖)



Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies

All rights reserved - www.whirlpool.com.hk

註冊商標/惠而浦集團的TM商標

版權所有 翻印必究 - www.whirlpool.com.hk



The Whirlpool logo is centered at the bottom of the page. It features the word 'Whirlpool' in a bold, sans-serif font. The letter 'i' in 'Whirlpool' is stylized with a swirl that loops around the letter.