

EN AWC 7120 A

Max. Load: 7kg / Max Spin Speed: 1200 rpm

PROGRAMME CHART



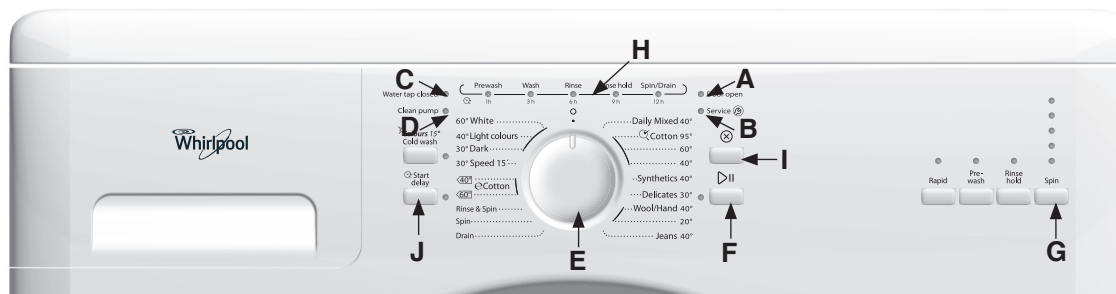
A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication



E. Programme selector



 





 
 




















 
 
 


F. "Start /Pause" button

G. Spin speed selector

H. Programme sequence indicator and Start delay indication

I. "Reset" button

J. "Start delay" button

Programme		Tempe- rature	Care Labels	Suggest- ed Load kg	Type of wash / Notes - respect the manufacturer's recommendations on the care label	Detergents and Additives			Special options						Max. Spin Speed rpm
						Pre- wash 	Main Wash 	Softener 	Colours 15° Cold wash	Start delay	Rapid	Pre- wash	Rinse hold	Spin	
Daily Mixed		40°C	   	4.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	*	—	—	*	*	Max.
Fabrics	 Cotton	40-60-95°C	  	7.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	Max.
	Synthetics	40°C	  	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	Max.
	Delicates	30°C	 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	*	—	*	*	*	1000 ¹⁾
	Wool/ Handwash	cold-40°C	 	1.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.	—	Yes	*	*	*	—	—	*	*	1000 ¹⁾
	Jeans	40°C	 	4.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	*	Yes	*	*	*	*	*	*	*	1000 ¹⁾
Colours	White	60°C	 	7.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	*	*	—	—	*	*	Max.
	Light colours	40°C	 	4.0	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	*	—	*	*	*	1000 ¹⁾
	Dark	30°C	   	4.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	*	*	*	*	1000 ¹⁾
Eco	Speed 15'	30°C	 	3.0	Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	*	*	—	—	*	*	Max.
	 Cotton  	40-60°C	 	7.0	Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	—	Yes	*	*	*	—	—	*	*	Max.
Rinse & Spin		—	—	7.0	Separate rinse and spin programme. Suitable for robust laundry.	—	—	*	—	*	—	—	*	*	Max.
Spin		—	—	7.0	Separate spin programme. Suitable for robust laundry.	—	—	—	—	*	—	—	—	*	Max.
Drain		—	—	—	Drain only - no spinning. Alternative method of terminating programme after “Rinse hold”.	—	—	—	—	*	—	—	—	—	—

= option / Yes = dosing required
For improved garment care, spin speed is restricted in these programmes.

CONSUMPTION DATA

Power consumption in off-mode 0.16 W / in left-on mode 0.16 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh) without "Rapid"	Approx. programme duration (hours : minutes) ☹	
					without "Rapid"	with "Rapid"
Daily Mixed	40	4.0	48	0.50	1:00	-
☕ Cotton	95	7.0	74**	2.20	2:30	-
Cotton	60	7.0	54	1.19	2:20	1:35
Cotton	40	7.0	66	1.00	2:45	1:15
Synthetics	40	3.0	46	0.70	2:15	0:55
Delicates	30	1.5	60	0.40	0:46	-
Wool/ Handwash	40	1.0	45	0.55	0:40	-
Jeans	40	4.0	52	0.50	1:30	1:10
White	60	7.0	68	1.20	2:35	-
Light colours	40	4.0	60	0.45	1:20	-
Dark	30	4.0	40	0.40	1:40	1:15
Speed 15'	30	3.0	25	0.15	0:15	-
☾ Cotton <60° *	60	7.0	50	0.84	4:00	-
☾ Cotton <60° *	60	3.5	40	0.63	3:00***	-
☾ Cotton <40° *	40	3.5	40	0.61	3:00***	-

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

☹ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* Reference programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Automatic adaptation of programme duration after detection of wash load

LOAD LAUNDRY, ADD DETERGENTS AND SELECT THE PROGRAMME

Load the laundry, close the door and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Turn the **programme selector** to the desired programme and temperature. The predefined spin speed lights up. The **"Start/Pause"** indicator blinks. The washing machine is designed to save energy, therefore, if you have selected a programme but do not start it within about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to "O" and then to the desired programme again.

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication switch off automatically.

"Colours 15'" / "Cold wash" button

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.
- Recommendable for lightly soiled laundry without stains.

- Make sure that your detergent is suitable for cold wash temperatures (15 or 20°C).
- Not selectable for Cotton 95°C.

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.
- Not selectable for Cotton 95°C.

"Prewash" button

- Adds a prewash cycle to the wash programme selected;prolongs the programme by about a quarter of an hour.
- Recommended for heavily soiled laundry (e.g. with sand or granular dirt).
- Do not use liquid detergent for the main wash when activating the "Prewash" option.

"Rinse hold" button

- The laundry remains in the last rinse water without pregressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- The wash programme stops to "Rinse hold" when the "Rinse hold" indicator on the display blinks. The **"Start/Pause"** indicator blinks as well.

Terminate the "Rinse hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start/Pause"** button.

"Spin" button

- Every programme has a predefined spin speed, press the button to set different spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY ⌚

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating "Start delay" option.

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1, 3, 6, 9 or 12 hours.
- Press the **"Start/Pause"** button. The indication next to the "Start delay" button blinks and the countdown of the delay time begins.
- The time delay indication disappears when the programme starts and it is replaced by the programme sequence indication.
- Once having pressed the **"Start/Pause"** button, the delay time can be reduced by pressing again the "Start delay" button.

To cancel the "Start delay"**..before you press the "Start/Pause" button:**

- Turn the programme selector to another position or press the **"Reset"** button.

..after having pressed the "Start/Pause" button:

- Press the **"Start/Pause"** button - the light of the selected start delay goes off.

PROGRAMME START ▶▶

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Drain/Spin.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset)" a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed": no or not sufficient inlet water.

⚙ **"Service"**: failure or malfunction of an electrical component.

"Clean pump": waste water is not pumped out.

Spin speed indication blinks : unbalance during spinning.

PROGRAMME END

The "Door open" indicator lights up. After about a quarter of an hour, the washing machine will switch off completely to save energy.

1. Turn the programme selector to the "O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END ⓧ

The **"Reset"** button cancels a programme before the end.

- Press and hold the **"Reset"** button for a few seconds. Any existing water is drained out. It may last some time until the door can be opened.