

Whirlpool



Health & Safety, Use & Care and Installation guide
產品安全指引、使用說明及安裝指南

Model 產品型號：VEHC85920

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies

All rights reserved - <http://www.whirlpool.com.hk>

註冊商標/惠而浦集團的TM商標

版權所有 翻印必究 - <http://www.whirlpool.com.hk>



Whirlpool

No.301B12A004737 -

2018年02月第一版



www.whirlpool.com.hk



CONTENTS

Precautions -----	2~4
Care and Maintenance -----	4
Accessories -----	5
Name of parts -----	5
Installation Instructions -----	6~9
Washing Tips -----	10
Names and functions of control panel -----	11~12
Normal usage -----	13
How to use program and process -----	13~15
Blankets Program Instructions -----	16
Wool Program Instructions -----	17
Other Functions	
Delay time function -----	18
Operation Steps -----	18
Memory Function -----	18
Double level power wash -----	18
Pre-handwash Function -----	19
Water Level Setting -----	19
Residual Water Draining Function -----	19
Tub Light Function -----	19
Soak Function -----	19
Child Lock Function -----	20
Disabling Beeps -----	20
Not failure Indication -----	20
Troubleshooting Guide -----	21
Specification -----	43






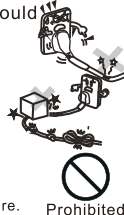

PRECAUTIONS

Please read this instructions manual carefully before using your machine.

- The precautions stated here are classified as "Warning" and "Attention" according to the damage and the emergency caused by misoperation, and are described respectively in line with the marks below.

	Warning	Misoperation may cause death.
	Attention	Misoperation may cause body injury or damage the machine.

		
This mark indicates the content of warning or attention.	This mark indicates the prohibited action.	This mark indicates the compulsory action to be carried out.

 Warning	
<ul style="list-style-type: none">  Dismantling, repair or alterations should only be carried out by professional technician as otherwise you may be subject to electric shock, may cause fire or get injured. 	<ul style="list-style-type: none"> This washing machine is equipped with a 3 pin plug which includes an earthing wire. This appliance must be earthed. 
<ul style="list-style-type: none"> Electricity supply must be unplugged with dry hands. Otherwise, this may cause electric shock. 	<ul style="list-style-type: none"> Do not put water in direct contact with the unit during maintenance and repair. This may cause short circuit or electric shock. 
<ul style="list-style-type: none"> Damaged or loosen wire or plug should not be used. Otherwise electric shock, short circuit or fire may take place. Do not damage wire. Do not damage or alter the wire forcibly bend, pull twist or handle the wire. Beside, please do not put weight on or trap the wire. Damage of wire may case electric shock or fire. 	<ul style="list-style-type: none"> Do not put gasoline, benzine, alcohol, thinner of fabrics with these stains into or near to the washing machine. To prevent fire or explosion which may cause injuries. 

PRECAUTIONS

⚠ Warning

- Keep child away from the wash/spin tub and do not place box or shelves next to the washing machine.

Children may fall in to the tub resulting in injuries.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Prohibited

- Do not put your hand into the wash/spin tub until it has stopped completely.

Even when the spinning of the tub is slow, there is still a danger of being caught in the motion, resulting in injuries. Particular attention should be paid when children are around.



Prohibited

- Do not put your hands into the wash/spin tub during the washing and rinsing process.

Even when the spinning is slow, hands may be trapped by clothes. If necessary, please press pause button, and put your hands into the tub after it has stopped completely.



Prohibited

- Please use the single socket with special voltage and current matched with plug marked specification.

The share of the same socket with other electric appliances may cause fire due to excessive loading.



- Thoroughly wipe the power plug when dirt is adhering the prong or around the base of the prong.

Clear Failure to do so may cause a fire.

- Washing machine should not be installed in humid place or in places exposed to wind and rain.

Otherwise, electricity leakage causing electric shock or fire may occur.



Prohibited

- This washing machine is strictly prohibited to get close to the locations with candle, mosquito-repellent incense, dog-end or other kinds of open flame.

To avoid injuries caused by the lock damage.



Prohibited

⚠ Attention

- Do not pull the wire from the socket when unplugging the unit.

To avoid electric shock or fire cause by short circuit may result.



Prohibited



- Please unplug the unit when not using the unit for a long period of time.

Electric shock or leakage may occur due to deformation of plastic parts of the unit.



- Electricity supply must be unplugged with dry hands during maintenance and repair.

Otherwise, electric leakage causing injuries may occur.

If the power cord or supply cord is damaged, the manufacturer or its service agent or similarly qualified person must replace it in order to avoid a hazard.

- Do not connect to the hot water supply, if use warm water, water of above 50°C should not be used for washing.

Electric shock or leakage may occur due to deformation of plastic parts of the unit.



Prohibited

PRECAUTIONS

⚠ Attention

- Do not wash, rinse and spin the water proof fabric or cloth.

Sleeping bag, raincoat, cover of skiing, utilities, bicycles, cars and motors. Otherwise may lead to injury by abnormal vibration during spinning or damage the washing machine, wall, floor and clothes.



Prohibited

- Do not stand on or put weight on the top of the unit.

Otherwise, deformation and damage may cause injuries.



Prohibited

- Keep hands and feet away from the bottom of the washing when it is in motion.

Ports in motion beneath in the unit may cause injuries.



Prohibited



Water leakage

- Check water supply hose connection by turning on the water before washing. To prevent damages caused by possible water leakage due to loosen screw or not tighten.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


Do not block the ventilation openings at the bottom of washer by carpeting when the washer is installed on a carpeted floor.



Water leakage


- Water supply hose should be tightly screwed to the unit.

Failure to do so may result in water leakage. Used for a long period of time, the unit may result in water leakage caused by loosen union nut. So please check it in time and screw tightly again.

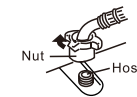

- Please turn off the water tap when not using the unit.

To prevent damages caused by water leakage.

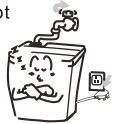

Care and Maintenance

Use a soft cloth to wipe water and dirt on the surface of the washer

- Do not spray water directly to the washer body. This may result in a short circuit or electric shock.
- Do not use a brush, polish, gasoline or other volatile materials to wipe the Washing Machine. This may damage the Main Body Surface Coating or plastic parts.
- You can choose to retain or tear off the Transport Protection Film on the Housing Surface, which will not influence the normal use of the product.



Cleaning of the Water Inlet Valve (recommended once every a half year)


- Dirt deposits will influence the Water Inlet Volume. Please remove the Water Inlet Hose, remove the Screen Filter of the Inlet Valve, and remove the dirt on the Screen before re-installing it.








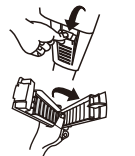


Water Inlet Valve

Cleaning of the lint Filter (suggest cleaning it every time after use)


- Remove the Screen Filter.
- Remove large lint and brush fine lint from the Screen Filter. Reinstall the Screen Filter. During the installation, snap the frame claws into the bottom groove. (The Screen Filter is a wearing part)

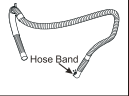

ACCESSORIES

Washing Machine	Manual	Drain Hose Assembly	Water Inlet Hose Assembly	Bottom Cover	Screw	Drain Hose Fixing Holder - Unit B (1 piece)	Warranty Card
							

NAME OF PARTS

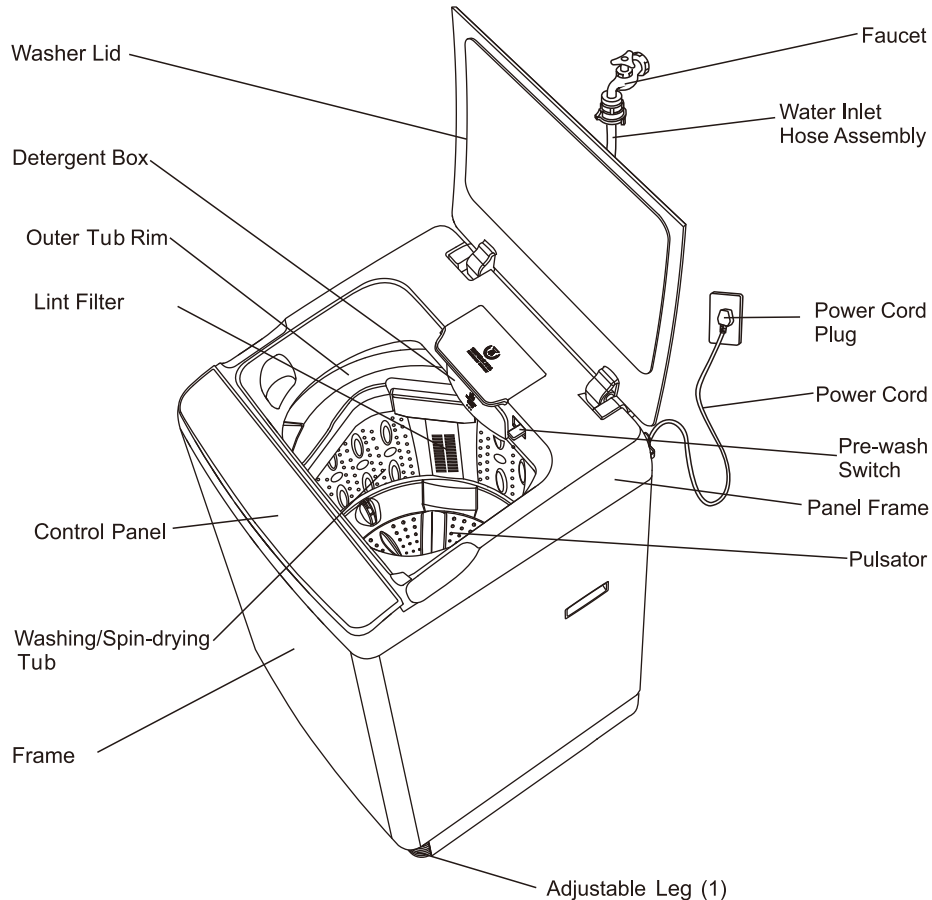


(This diagram is for reference only.
The actual product shall prevail.)

INSTALLATION INSTRUCTIONS

Bottom Cover Installation

1. Take out the Bottom Cover on the Panel Frame protective packaging and the Screws in the bag.
2. Tilt the Washing Machine backward and slowly put it down on a cushion.
3. Push the Bottom Cover straight along the Seat Slot until it is installed in place.
4. Fix the Bottom Cover and Seat with Screws.
5. Lift the Washing Machine gently until it is placed steadily.

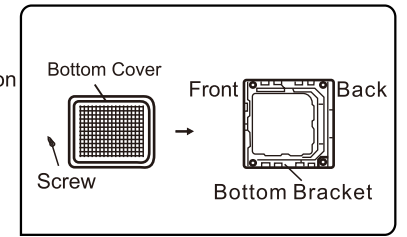


Location of Washer

1. Choose a dry place without direct sunlight to the Washing Machine.
2. Place the Washing Machine on steady solid ground.
3. A floor drainer shall be provided in the place where the Washing Machine is placed, and shall drain water smoothly. The floor drainer shall be in the same plane as that where the Washing Machine is placed or slightly lower than the plane, to avoid Washing Machine leakage causing any damage.
4. Place the Washing Machine as firmly as possible. If necessary, level the Washing Machine by adjusting the Adjustable Feet of the Washing Machine according to the order shown in the figures. The maximum allowable inclination of the plane on which the Washing Machine is placed is 2°.

Notes:

- When the Washing Machine is placed on the floor or a flexible support stand, the Washing Machine may vibrate.
- Do not place any object such as a carpet below the Washing Machine to prevent the bottom opening from being blocked.

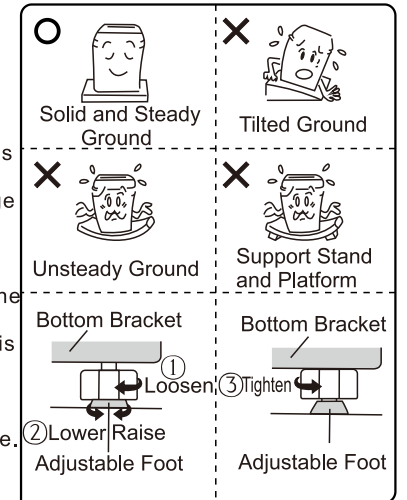

Faucet Selection


Faucet Type: (the faucet mouth shall be smooth)

Type A: The most appropriate

Type B: Faucet length must be greater than 16mm.

Otherwise the universal joint cannot be installed.

Type C: Water leakage may occur with the part shown in the figure.


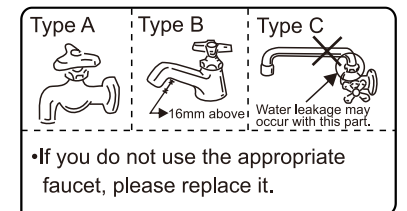

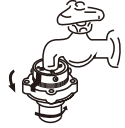


Notes:




1. When installing the Washing Machine, please be sure to remove the Pedestal and Bracket for transportation at the bottom of the Washing Machine. Otherwise it cannot be used.
2. During installation or initial use, a small amount of water will flow out of the Drain Hose, which is residual water left over from the factory during routine inspection.
3. After the Washing Machine is used, unplug the Power Cord and turn off the Faucet to avoid accidental fires and water leakage accidents.

INSTALLATION INSTRUCTIONS

Installation of the Universal Joint

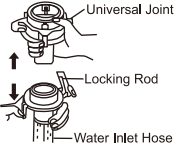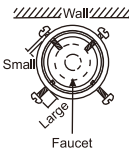
<p>1. Hold the Universal Joint in one hand and the Locking Rod in the other hand and then detach the Universal Joint from the Water Inlet Hose.</p> 	<p>2. Evenly adjust the four screws on the Universal Joint so that the two screws near the wall fully contact the outside of the Faucet first.</p> 	<p>3. Insert the Universal Joint vertically onto the Faucet with its internal seal tightly attaching to the opening of the Faucet and tighten the 4 screws with a screwdriver.</p> 	<p>4. Remove the seal from the Universal Joint and tighten the Universal Joint.</p> 
---	--	--	---

Connection of the Water Inlet Hose
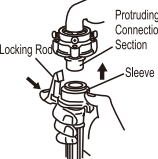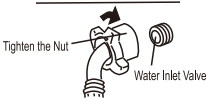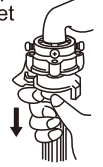
<p>1. Connect the Water Inlet Hose to the Universal Joint.</p> 	<p>2. Align the Water Inlet Hose with the opening of the Water Inlet Valve, and turn the fastening screw nut clockwise on the Water Inlet Hose until it cannot be turned.</p> 	<p>4. Check whether the Water Inlet Hose is Connected Firmly</p> <ul style="list-style-type: none"> • Pull the Water Inlet Hose downwards to check whether the Water Inlet Hose is firmly connected to the Universal Joint. Then slowly turn on the Faucet to see if water leakage occurs. If water leakage occurs, turn off the Faucet and reinstall. • After long-term use, the Universal Joint may become loose. Reinstall it. • Turn off the Faucet when the laundry Program ends or the Machine will not be used for a long time. 
--	---	--

Removal of the Water Inlet Hose

1. Turn off the Faucet.
2. Press the Power Button to turn on the power. Then press the Start/Pause Button.
3. Turn off the power after 15 seconds.
4. Pull down the Locking Rod and Sleeve with your fingers and remove the Water Inlet Hose.
5. Turn the Water Inlet Hose on the Inlet Valve anticlockwise until the Water Inlet Hose is removed.

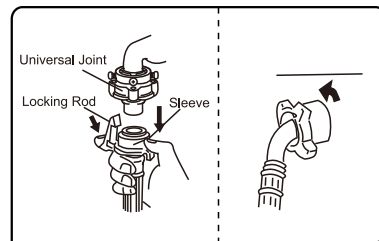


INSTALLATION INSTRUCTIONS


For high draining level installation

Installing the Drain Hose

1. Connect the water drainage hose with the water drainage joint on the back of the body. Fully insert it into the position to avoid leakage.
2. After the connection is completed, please use hose clipper to clamp the water drainage hose to avoid falling off.

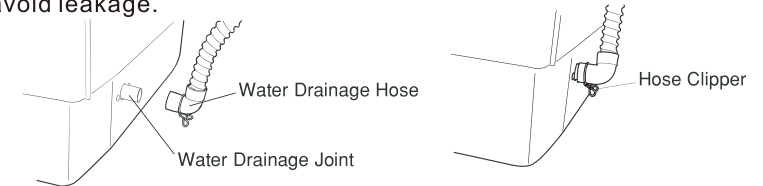


3. ① Insert the fixing holder of water drainage hose into mounting hole.
② As shown below, rotate the fixed leg for 90 degree into the hole.
4. Pull the water drainage hose straight, concave to fix into the fixing holder of water drainage hose.

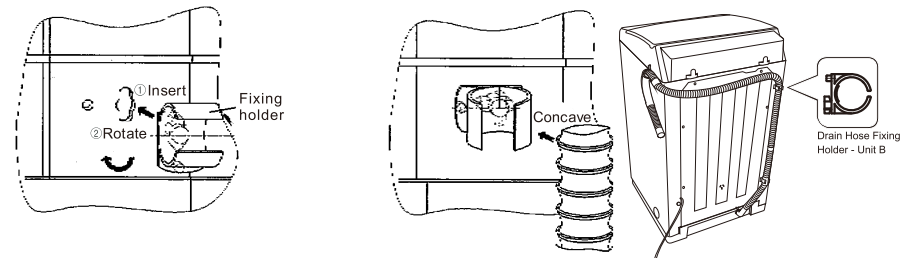


INSTALLATION INSTRUCTIONS

CAUTION:

- Do not release the water drainage hose lest the water is splashed.
- Do not use extended water drainage hose.
- Do not immerse the tail of the U-shaped hose in the water.
- Be sure not to install the water drainage hose at a position lower than water drainage joint, otherwise, it could lead to difficulties in water drainage .

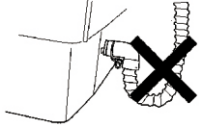

- Please make sure to keep the height of drain hose below 1000 mm and above 700 mm during washing, otherwise, the washer mightn't work properly.


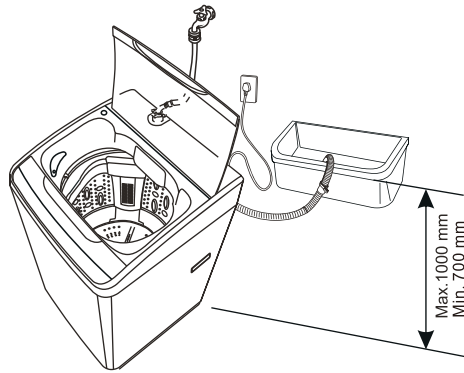


INSTALLATION INSTRUCTIONS




 
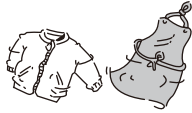


For low draining level installation

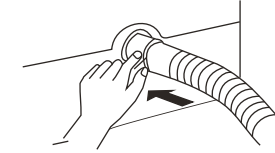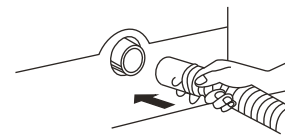Installing the Drain Hose


1. Pinching the two bands of the clamp on the drain hose, connect it to the pump (rear of cabinet) and fix the hose band.
2. Pull the drain hose upward and fix it to the hose clip at the back cover of cabinet.
3. Hang the drain hose to the hole on right side of top frame when the washer is not working. And put the drain hose to drain spout when washer start working.

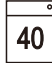

Washing Tips

<p>• Please wash colored and white, thick and thin laundry separately. Please wash laundry according to the clothing care tags.</p> <p>Legend  </p>	<p>• Please wipe dirt and sand off the laundry first.</p> <p>• Make sure there are no items in the clothing pockets. (such as nails, coins, etc. that may damage clothes or the Washing Machine or make extra noise or cause a malfunction of the Washing Machine.)</p> 	<p>• Please put clothes that can easily float, or large, heavy clothes in first.</p> <p>• If any clothes come to the surface, please temporarily stop washing and press the clothes down into the water.</p> 
<p>• Tighten loose straps on the clothes, zip zippers and button buttons.</p> 	<p>• When washing fine fabrics such as lingerie, lace-trimmed items, nylon and thin chemical fiber fabrics, etc., they should be placed in a mesh washing bag.</p> 	<p>• For the clothes that are inclined to pill or unravel, please turn them inside out during washing.</p> 

NAMES AND FUNCTIONS OF CONTROL PANEL

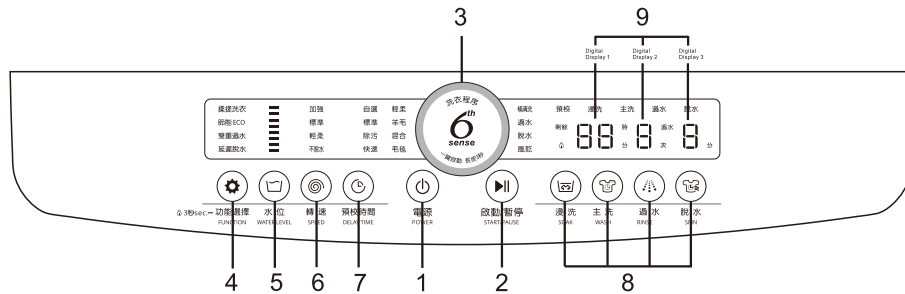

1.Power Button

•To turn on the Washing Machine, please press this Button. To cut off the power, press the Button again. After this Button is pressed, all the Indicators will be lit for 2 seconds before the Program Display restores. If there is no Button operation for 10 minutes, the power will be cut off automatically. After the program stops running, the power will be cut off automatically within 5 seconds (within 10 minutes if the Draining Function is enabled).

2.Start/Pause Button

•When the power is turned on, the Washing Machine will start running after this Button is pressed. This Button can also be used to temporarily stop the operation. You can just press this Button again to resume the operation.

3.6th Sense Button

•After the Machine is powered up and the Power Button is pressed, you can press the 6th Sense Button to switch between 12 Automatic Programs - Custom, Standard, Stain Wash, Quick, Delicate, Wool, Mixed, Blankets, Tub Clean, Rinse, Spin, and Air Dry .
 •When the Machine is power up, you can start the Standard Wash Program by pressing and holding the 6th Sense Button for three seconds.

Notes: If you select the Custom, Standard, Stain Wash, Quick, Mixed or Tub Clean Program, the Washing Machine will carry out automatic fuzzy judgment to automatically select the appropriate Water Level, Water Flow and other procedures.

4.Function Button

•You can use this Button to switch between the Rub + Spin, Energy-saving, Double Rinse, and No spin Functions.
 •This Button can be used to set the Child Lock Function. See Page 20 for the method for setting the Child Lock Function.

5.Water Level Button

•This Button is used to select the Water Level appropriate to the laundry to be washed. Washing and rinsing can be done at different water levels. Only Levels 5 to 8 can be chosen for the Blankets Program. Only Levels 3 to 8 can be chosen for the Wool or Delicate Program.

6.Spin Speed Button

•This Button can be used to choose any of the four spinning strengths -Strengthen , Normal, Delicate or No Spin.

7.Delay-time Button

•You can use this Button to set the end time of the Program.
 Note: This function is unavailable for the Delicate, Wool, Rinse, Spin, and Air Dry Programs.

NAMES AND FUNCTIONS OF CONTROL PANEL

8. Program Button

•You can use this group of Buttons to set the Soaking Time, Washing Time, Rinsing Times, and Spinning Time freely.

9.Description of Digital Display Functions

Digital Display 1

•While the Program is proceeding, the Digital Display will show the remaining time of the whole process. For example: Delay Time: 18 minutes. ----- [18]

•When setting the Schedule, the Digital Display will show when the Scheduled Program ends. For example: Ends in 2 hours----- [2]

•When an abnormality occurs, the Digital Display will show the Fault Code. For example: Abnormal Water Addition----- [E1]

•During setting, the Digital Display will show the set time for soaking or washing. For example: Wash for 10 minutes ----- [10]

Digital Display 2

•The Digital Display will show the rinsing times.

For example: Rinse Twice----- [2]

Digital Display 3

•The Digital Display will show the spinning time.

For example: Spinning Time: 5 minutes. ----- [5]

NORMAL USAGE

1. Get Ready

- ① Connect and lay down the Drain Hose.
- ② Connect the Water Inlet Hose to the Faucet and unscrew the Faucet.
 - Before turning on the Faucet, you need to make sure that the screws of the Universal Joint have been tightened. Loose screws may cause water leakage.
- ③ Plug the Power Plug into a power socket.
- ④ Add the laundry.

2. Press the Power Button.

3. Press the Start/Pause Button

- The Sensor will automatically detect the laundry amount (Custom, Standard, Stain Wash, Quick, Mixed or Tub Clean)
 - The appropriate water level, water flow and other operating Programs will be selected automatically.
4. Add some detergent to the Detergent Box or the Washing/Spin-drying Tub . (Use the appropriate amount of detergent according to the instructions for the detergent used)
5. Close the Tub Lid.
- If the Tub Lid is not closed, the Washing Machine will automatically stop running and emit alarming beeps before it starts spin-drying.

Model	Water								VEHC85920									
Water Level	1	2	3	4	5	6	7	8										
Volume (L)	About 16	About 24	About 30	About 36	About 42	About 48	About 54	About 60										

During fuzzy judgment of the water level, there will be some differences due to the laundry texture, size and so on. This is a normal phenomenon.

HOW TO USE PROGRAM AND PROCESS

1. Preparation: Lay down the Drain Hose. Turn on the Faucet. Plug the Power Cord Plug into the power socket. Add the laundry.
2. Press the Power Button.
3. According to the laundry type, press the 6th Sense Button to set the desired Program.
- See the Table below for the selection of each Program.

HOW TO USE PROGRAM AND PROCESS

Program Selection Guide			Default Program Settings		
Program	Applicable Laundry Type	Laundry Amount	Washing Time	Rinse Method	Spinning Time
Custom	The user customizes the program	Rated Laundry Amount	10 minutes	Spray+Soak Rinse	5 minutes
Standard	Daily wear clothes	Rated Laundry Amount	10 minutes	Soak Rinse Twice	5 minutes
Stain Wash	Heavy clothes, heavily dirtied coats	Rated Laundry Amount	12 minutes	Spill Rinse Twice	8 minutes
Quick	A small amount of laundry, slightly dirty laundry	3.0kg	5 minutes	Soak Rinse Once	3 minutes
Delicate	Fine textiles, silk textiles, etc.	2.0kg	6 minutes	Soak Rinse Twice	2 minutes
Wool	Wool clothes and other textiles	1.5kg	6 minutes	Soak Rinse Twice	2 minutes
Mixed	Cotton and linen clothes	Rated Laundry Amount	10 minutes	Spill Rinse Twice	10 minutes
Blankets	Large household textiles	4.0kg	12 minutes	Spill Rinse Twice	8 minutes
Tub Clean	Tub Clean	-	8 minutes	Soak Rinse Once	3 minutes
Rinse	Laundry to be only rinsed and spin-dried	-	-	Soak Rinse Once	5 minutes
Spin	Laundry to be only spin-dried	-	-	-	5 minutes
Air Dry	Slightly drying	-	-	-	60 minutes

4. You can press the Delay time Button and a group of Buttons under the Procedure Button to freely set the delay time, soaking time, washing time, rinsing times and spinning time. During setting, the Digital Display will show numbers cyclically as follows:

• Delay Time Options Displayed:

0 → 1 → 2 → ... → 5 → 6 → ... → 24 hours (except for the Delicate, Wool, Rinse, Spin, and Air Dry Programs)

• Soaking Time Options Displayed:

0 → 5 → 10 → 15 → ... → 40 minutes (except for the Delicate, Wool, Blankets, Rinse, Spin and Air Dry Programs)

• Washing Time Options Displayed:

0 → 5 → 10 → ... → 15 → ... → 20 minutes

• Rinsing Times Options Displayed:

0 → 1 → 1_{Spill} → 2 → 2_{Spill} → 3 → 3_{Spill} → 4 → 4_{Spill} (the number indicates times; the lit Spill Indicator indicates Spill Rinse)

• Spinning Time Options Displayed:

0 → 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9 minutes (for the Custom, Standard, Stain Wash, Quick, Mixed, Blankets, Tub Clean, Rinse, and Spin Programs only)

• Spinning Time Options Displayed:

0 → 1 → 2 → 3 minutes (for the Wool and Delicate Programs only)

• Setting of a Single Procedure: Press the 6th Sense Button. Select the Standard Program and then select the washing time, rinse times and spin time. You can set the Program to perform the function of washing, rinsing, or spin only.

Note: The above settings are unavailable for some Programs.

HOW TO USE PROGRAM AND PROCESS

5. Press the Water Level Button to select the appropriate level. Add some detergent.

6. Press the Start/Pause Button

7. Close the Tub Lid.

• If you want to change the pre-set Procedure, please turn off the Power Switch and then turn on it again, and select your desired Program.

8. If necessary, press the Function Button to enable your desired additional functions, which can be the Rub+Spin, Energy-saving, Double Rinse, or Retain Water Functions.

• **Rub+Spin:** This function requires a washing load less than or equal to 3kg and is only available for the Custom, Standard, and Stain Wash Programs. When the Rub+Spin Function is enabled, the Indicator of this function will be lit and the Water Level Button and Washing Time Button will be disabled.


• **Energy-saving:** After this function is enabled, the corresponding Indicator will be lit and the Washing Mode will be changed to the Energy-saving Mode. This function is available for the Custom, Standard, Stain Wash, Quick, Delicate, Wool, Mixed, Blankets, and Tub Clean Programs only.

• **Double Rinse:** After this function is enabled, the corresponding Indicator will be lit while the original Washing Procedure and Spinning Procedure will remain unchanged and the first Rinsing Procedure will be changed to Spray+Spill Rinse. This function is unavailable for the Spin and Air Dry Programs.

• **Retain Water:** When proceeding to the Spinning Procedure, the program will pause without draining, and the Indicator will blink accompanied by beeps. The Spinning Procedure will restore when you press the Start Button. If there is no operation within 1 hour, the power will be cut off automatically.


Description of Three Rinse Methods

1. Soak Rinse (the usual method)

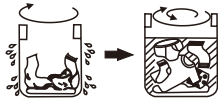


After spin program ends and water is added to the Set Water Level, the water addition will stop and a rinse will start.

2. Spray Rinse (water-saving)

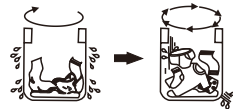

After the spin program ends, the spin will rotate slowly while water is added. Like taking a shower, the laundry will have the detergent on it removed and drained to the sewer (the Washing Machine will immediately stop working when the Washer Lid is opened during the spray rinse).

3. Spill Rinse (in the event of too much detergent used)

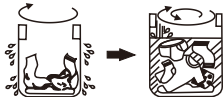

After the spin program ends and water is added to the Set Water Level, a rinse will start in conjunction with water addition so that a large amount of foam produced during the rinse will spill from the Spill Mouth and will then be drained to the sewer.

BLANKETS PROGRAM INSTRUCTION

The Blankets Program applies to washing blankets and other large items.

• When this Program is used, the water level is automatically set to Level 8. However, you can change the Water Level to Level 5 – 8 according to the size of the blankets and large items.

Operation Steps

1. Open the Washer Lid and press the Power Button.

2. Press the 6th Sense Button until the Blankets Indicator is lit.

3. Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.

4. Place the rolled side of the blanket down in the Washing Machine.

5. Press the Start/Pause Button (If necessary, you can adjust the water level manually.)


6. Close the Tub Lid.

• If the Tub Lid is not closed properly, the Washing Machine will automatically stop running before starting Spinning.

• After the wash ends, the beeper will emit beeps and then the power will be cut off automatically within 5 seconds.

• After the wash ends, turn off the Faucet and clean the Mesh Lint Pouch.

How to Fold a Blanket and Put it in the Washing Machine

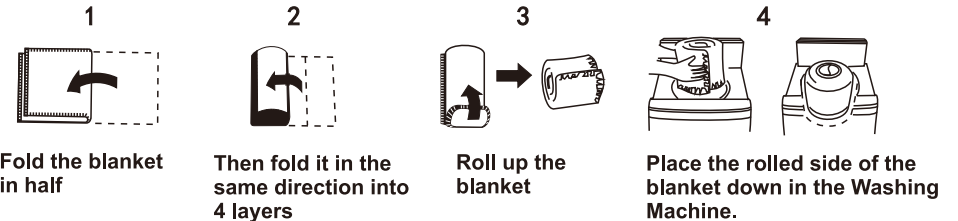

After the Wash Ends


Take out the blanket and hang it from the middle in the shade.

Notes: Pre-wash the dirty parts by hand.

• Do not use too much detergent.

• Stains can be removed effectively with warm water (about 30°C).

• In the washing process, if a part of the blanket is exposed above the water surface, press the Start/Pause Button. The Washing Machine will temporarily stop running. Press the exposed part into the water and press the Start/Pause Button again to resume the wash.

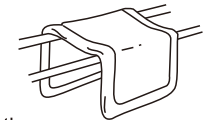

WOOL PROGRAM INSTRUCTIONS

- This Program is used for washing wool clothes. Please check the clothing care tag before starting the wash.
- When the Wool Program is used, the water level is automatically set to Level 6. However, you can change the water level to Level 3 – 8 according to the size of the wool clothes.

Operation Steps

- 1.Open the Tub Lid and press the Power Button.
 - 2.Press the 6th Sense Button until the Wool Indicator is lit.
 - 3.Pour the liquid detergent into the Washing Machine. If you are using powder detergent, dissolve it thoroughly in 5L of warm water (about 30°C) and then slowly pour the solution into the Washing Machine.
 - 4.Put wool clothes in the Washing Machine.
 - 5.Press the Start/Pause Button (If necessary, you can adjust the Water Level manually.)
 - 6.Close the Tub Lid.
- If the Tub Lid is not closed properly, the Washing Machine will automatically stop running before starting Spinning.
 - After the wash ends, there will be beeps and the power will be cut off automatically within 5 seconds.
 - After the wash ends, turn off the Faucet and clean the Mesh Lint Pouch.

Caution

- The laundry amount shall be less than 1.5kg.
- After the Program ends, please immediately take out the clothes and handle and air the clothes to prevent them from becoming deformed due to too long placement.
- The Wool Program cannot be scheduled.
- In order to avoid damage to the clothes, the temperature of the washing water shall not exceed 30°C.
- Please wash clothes of white or bright colors and the clothes of dark colors separately. Using dedicated wool detergents can reduce the damage to clothes and improve the washing effect.

OTHER FUNCTIONS

Delay Time Function


- The Pre-set Delay Time is the Program end time.
- Before making a Time delay, first turn on the Faucet, and then lay down the Drain Hose and check whether the Universal Joint is tightened to avoid water leakage accidents.

Operation Steps

- 1.Press the Power Button.
 - 2.If necessary, press the 6th Sense Button or the Procedure Button to select the appropriate laundry Program and Procedure Settings.
 - 3.Press the Delay time Button to set the Delay end time. The Digital Display will show the set time, which is increased by one hour whenever the Button is pressed once. The maximum time is 24 hours.
 - 4.If necessary, use the Water Level Button to set the appropriate Water Level. Add some detergent, softener, etc.
 - 5.Press the Start/Pause Button
 - 6.Close the Tub Lid .
- All the Indicators except the Delay time Indicator will go out in about one minute. (If the Child Lock is enabled, the Child Lock Indicator will be lit)
 - Delay time Wash is unavailable for the Delicate, Wool, Rinse, Spin , and Air Dry Programs.
 - If you want to check the Scheduled Program, please press any Button other than the Power Button. Then the Delay time Program will be displayed for 5 seconds.
 - To change the Delay time Program, please turn off the power and then restart the Machine and carry out the resetting.

Instructions for Adding Detergent for a Scheduled Wash

- Synthetic powder detergent can be directly added into the Detergent Box or wrapped with a cloth and then directly put it in the Washing/Spin-drying Drum.
- Liquid detergent and bleach can be poured directly into the hole in the Panel Frame but not directly on the laundry. Otherwise, they may cause fading of clothes.
- After softener is diluted with water of a volume 2 times that of the softener to be used, pour the diluted softener into the Softener Inlet. Please do not use soap, because it cannot be dissolved easily and will lead to a poor washing effect.

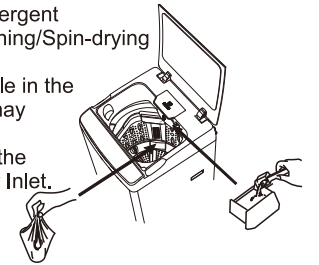

Memory Function

- If you choose the Custom, Standard, or Stain Wash Program, the Washing Machine will remember your choice after the Program ends. When you use the Machine the next time, the remembered Program will be displayed after you turn on the power. The Machine will start running when you simply press the Start/Pause Button.
- For the Standard or Stain Wash Program, no wash parameters but only the Program will be remembered.

Double-level power wash

- In the washing process, after the water level of the washing machine reaches the level that is two levels lower than the pre-set water level, the wash will start while water addition proceeds.
- When the two lowest levels are set, the wash will start after the pre-set water levels are reached.
 - The Two-step Clean Function is unavailable for the Delicate, Wool, and Blankets Programs.
- If the Soaking Time Procedure is selected, after the soak ends, the Two-step Clean Function will be disabled during the wash.

OTHER FUNCTIONS

Pre-handwash Function

In the process of wash water addition, press the Pre-wash Switch. There will be water flowing out from the Dispenser. Then you can manually wash the laundry partially. When the added water reaches the set Water Level, water addition will automatically stop.

Water Level Setting

In order to improve the detergent content in the washing water and save water, you can set different water levels for a wash and rinse respectively. It is recommended that the wash proceeds at a lower water level and the rinse at a higher water level. In this way, a clean wash and a thorough rinse can be ensured.

Setting Method

Press the Power Button to turn on the power. After selecting the appropriate Program, press the Washing Time Button to set the washing time, press the Water Level button to set the wash water level, press the Rinsing Times Button to set the rinsing times, press the Water Level Button again to set the rinsing water level, press the Spinning Time Button to set the Spinning time, and finally, press the Start/Pause Button to start. Then the wash and rinse will proceed at different pre-set water levels.

Residual Water Draining Function

After it is enabled, within 9 minutes after the Program ends, the Drain Valve will open automatically to drain the remaining water inside the Machine to prevent it from becoming frozen when the weather turns cold. (Used when the temperature is below 0°C)

Setting Method

•Press the Power Button. Press and hold the Spinning Time Button for more than 4 seconds until you hear a beep. Repeat the operation to enable beeps.

Tub Light Function

The Tub Light will be lit when the Washer Lid is opened and will go out 2 minutes after the Washer Lid is closed. The Tub Light will go out automatically 3 minutes after the Washer Lid is not closed.

Soak Function

After the Soak Function is enabled, a dynamic soak can be added before a wash (this function is unavailable for the Delicate, Wool, Blankets, Rinse, Spin, and Air Dry Programs). The soaking time is 0 - 40 minutes with an increment of 5 minutes.

OTHER FUNCTIONS

Child Lock Function

You can enable the Child Lock Function to avoid injury to a child opening the Washer Lid of the Washing Machine.

Setting Method

Press the Power Button to turn on the power. Press and hold the Function Button for more than 4 seconds until you hear a beep. Repeat the operation to enable it again.

- After the Child Lock is enabled, the Washing Machine will stop running and display “ES” and emit alarming beeps when the Drum Cover is opened for more than 5 seconds during a wash.
- After the Child Lock is enabled, while a Program is running, no Buttons except the Power Button will respond.

Disabling Beeps

Cancel Method: Press the Power Button. Press and hold the Start/Pause Button for more than 4 seconds until you hear a beep. Repeat the operation to enable beeps.

NOT FAILURE INDICATION

- 1.Sometimes water is added during a wash or rinse cycle.This is automatic water replenishment due to a lowered water level.
- 2.At the beginning of Spinning, the Washing/Spinning Tub will stop and start intermittently. This is intermittent Spinning designed to achieve a better Spinning effect.
- 3.During the Spill Rinse, the Drain Hose does not drain water. This is due to the set water level being too low or the water pressure being too low.
- 4.Sometimes water is replenished during Spinning. This is an automatic replenishment due to the improper placement of the laundry to be Spin-dried.
- 5.After the Spinning ends, there is the sound of residual water, which is the sound of the balance liquid that is in the balance ring and designed to reduce Spinning vibration.
- 6.There was a power failure during operation and the operation cannot be automatically resumed after the power supply restores. Please set the Machine again.

TROUBLE SHOOTING GUIDE

When the following problems occur, the microcomputer will detect the abnormal condition and an electronic buzzer sounds for approximately 10 seconds and the indicators flash as shown below. At the same time, the washer stops operation.










Kind of Trouble	Trouble Indication	Where to Check
The washer does not work at all.		<ul style="list-style-type: none"> • Press the POWER ON/OFF button. • Press the START/PAUSE button. • Check whether power failure occurs. • Check whether the fuse or circuit breaker has been activated.
Water does not flow into the Wash/Spin Tub.	E1	<ul style="list-style-type: none"> • Turn on the water supply faucet. • Check whether the water supply has been cut off. • Check whether the metal filter of the water inlet is clogged. • Check whether the water inlet has been blocked or frozen. • Check whether water pressure is too low.
Water does not drain out.	E2	<ul style="list-style-type: none"> • Check whether the height of drain hose is more than 1000mm . • Check whether the drain hose is clogged.
The washer does not spin.	E3	<ul style="list-style-type: none"> • Check whether the laundry is clumped on one side of the Wash/Spin Tub. • Check whether the washer is on the level surface.
	E4	<ul style="list-style-type: none"> • Close the washer lid.
The buzzer keeps beeping.	E5	<ul style="list-style-type: none"> • Check whether the CHILD LOCK is set. • Close the washer lid.
Other troubles.	Ea Eb Ec	<ul style="list-style-type: none"> • Please press the Power ON/OFF Button to turn off the power, unplug the Power Cord Plug, and call your service-person or dealer.
	Ed	
	E901 E902	
	E920 etc.	

注意事項	23~25
保養須知	25
附件說明	26
各部件名稱	26
安裝介紹	27~31
洗衣要領	31
操作面板功能介紹	32~33
一般的使用方法	34
選擇「程序」「過程」的使用方法	34~36
毛毯程序的使用方法	37
羊毛程序的使用方法	38
其他功能介紹及設定方法	
預校功能	39
記憶功能	39
雙重強力洗	39
預手洗功能	40
雙水位設定	40
排餘水功能	40
桶燈功能	40
浸洗功能	40
兒童鎖功能	41
取消蜂鳴提示	41
並非故障的情況	41
故障排除指南	42
規格	43

- 使用前請詳細閱讀【注意事項】並正確使用。
- 本電器用品並非設計給身體、感覺或心智功能不足者（包括孩童），或缺乏經驗及知識者使用。除非有能確保其安全者給予監督或指導，才能使用本產品，以避免引起火災或導致受傷。
- 為了防止對使用人和其他人造成傷害或財產損壞，現就安全方面需要務必遵守的事項，作如下說明：

 警告	此標示欄的內容為【有死亡或受傷的可能性】
 注意	此標示欄的內容為【有受傷及僅有物品損壞的可能性】

		
「警告或提醒注意」的內容。	「禁止」的內容。	「注意」的內容。

 警告	
 不可改裝,非專業維修人員禁止分解及修理洗衣機。 • 會造成火災、觸電、受傷。 • 發生故障時請向本公司聯絡。	 勿過度彎曲、拉扯、扭轉電源線。 • 會造成電源線破損導致火災、觸電。
 保養時,請務必從插座拔上下電源線插頭,此外,手潮濕時不可插拔電源線插頭。 • 會造成觸電、受傷。	 不可使用220V以外的電壓。 • 會造成破損、火災、觸電。
 電源線及電源線插頭損壞或鬆動時請勿使用。 • 會造成觸電、短路,造成受傷或引起火災。	 電源線插頭的灰塵等要定期清除。 • 電源線插頭上若灰塵堆積,會因濕氣造成絕緣不良引起火災。
 請勿將洗衣機做其他用途功能使用。 • 洗衣機除按照說明書所規定可洗滌的衣物外,不得用於其他用途,以避免洗衣機產生損壞或發生危險。	 請勿放置在不穩定的位置。 • 因外力影響,極容易傾倒,移動而造成人員受傷并使洗衣機損壞。




注意事項

警告	
<p>當洗衣機運轉時，不要將手伸進洗衣機/脫水桶。</p> <ul style="list-style-type: none"> 如果手碰到洗衣/脫水桶，可能會受到傷害。 脫水時，如果洗衣機上蓋打開15秒內，洗滌/脫水桶不停止轉動，請立即關掉電源，並盡快撥打本公司客戶服務電話。 	<p>請勿清洗沾有揮發性溶劑的衣物。</p> <ul style="list-style-type: none"> 請勿清洗沾有汽油、煤油、稀釋劑等的衣物。這樣可能引起火災或爆炸。
<p>請務必正確接地。</p> <ul style="list-style-type: none"> 為防止漏電事故的發生。 	<p>避免安裝於潮濕及雨淋處。</p> <ul style="list-style-type: none"> 電器絕緣會不良成為漏電或故障的原因。
<p>不要讓兒童在洗衣機上或洗衣/脫水桶內玩耍。</p> <ul style="list-style-type: none"> 如果兒童不慎掉入洗衣/脫水桶內，會產生嚴重的傷害。 	<p>禁止使用220V電源以外的插座。</p> <ul style="list-style-type: none"> 會造成損壞/火災及觸電危險。 請單獨使用10A以上的插座，勿使用延長線插座或與其他電器共用電源。
<p>電源線插頭的插拔。</p> <ul style="list-style-type: none"> 電源線插頭插入或拔出時，手指須緊握插頭絕緣部分施力，請勿觸碰插頭的金屬插片，以避免觸電或施力於導線端，導致電源線內部導線斷裂。 在移動洗衣機時，務必先拔下電源線插頭。 	<p>請勿靠近煙火。</p> <ul style="list-style-type: none"> 請勿靠近煙火，且勿將點燃的蠟燭、香煙、蚊香及水壺放在洗衣機上，這是造成火災或變形的主要原因。
<p>電源線的保護。</p> <ul style="list-style-type: none"> 使用時請注意電源線外皮是否損傷，有無不合理彎曲或拉伸及重物壓住變形等現象，電源線破損導致絕緣不良，這是發生觸電、火災的原因。如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。 	<p>禁止改裝或自行維修。</p> <ul style="list-style-type: none"> 除本公司指定的維修部外，禁止改裝或自行維修，以避免發生火災或觸電危險。
<p>防水性或不吸水的衣物不可以放入洗衣機內清洗。</p> <ul style="list-style-type: none"> 以避免洗衣或脫水時，產生異常振動。(如：雨衣、車套) 	<p>探視洗衣機時請注意。</p> <ul style="list-style-type: none"> 女性或留長髮人員探視洗衣機時，請注意頭髮勿掉入夾縫中，以避免頭髮被夾住的危險。









注意事項

注意	
<p>注意洗衣物的溢出。</p> <ul style="list-style-type: none"> 請勿清洗防水性的衣物，以避免脫水時洗衣物溢出造成損傷。 	<p>特別注意：勿將手指或物品放在洗衣機上蓋中央的彎曲部或面架上蓋覆蓋區域。</p> <ul style="list-style-type: none"> 這是造成受傷或發生故障的原因。
<p>請勿連接熱水水源！</p> <ul style="list-style-type: none"> 熱水會使塑料部件變形，這是發生故障的原因。 	<p>洗衣機本體各部件，請勿直接用水沖洗。</p> <ul style="list-style-type: none"> 以避免絕緣不良，導致觸電的危險。
<p>洗衣機運轉中，請切勿嘗試接觸內部運動部件。</p> <ul style="list-style-type: none"> 以避免受傷的危險。 	<p>請勿將幼兒及重物放置在洗衣機上。</p> <ul style="list-style-type: none"> 以避免部件變形或破損導致危險的發生。
<p>手潮濕時請勿插入或拔下電源線插頭。</p> <ul style="list-style-type: none"> 以避免觸電的危險。 	<p>洗衣機不使用時</p> <ul style="list-style-type: none"> 應關閉水龍頭，以避免進水軟管破損或脫落，造成漏水事故的發生。 應將電源線插頭拔掉，以防止發生火災或其他事故。


保養須知

<p>使用軟布擦除箱體上的水及污跡</p> <ul style="list-style-type: none"> 不要將水直接潑灑在箱體上，這樣做可能會造成短路或觸電。 不要使用刷子、上光粉、汽油或其他易揮發性材料擦拭洗衣機。這樣做可能會損壞機身表面塗層或塑料部件。 箱體表面的運輸保護膜可選擇保留或撕掉，不影響產品正常使用。 	
<p>進水閥口的清理(建議半年一次)</p> <ul style="list-style-type: none"> 髒物積存會影響進水量，請取下進水軟管，取出進水閥口的過濾網，清除網上的髒物後重新裝回。 	 <p style="text-align: center;">進水閥口</p>
<p>過濾網的清洗(每次用完及時清洗)</p> <ul style="list-style-type: none"> 取下過濾網。 去除大塊毛絨，同時刷去過濾網上的細小絨屑。 重新裝上過濾網，安裝時將框部的爪對準下方的溝部放入。(過濾網為易損部件) 	

附件說明

洗衣機 (一台)	說明書 (一本)	排水軟管組件 (一根)	進水軟管組件 (一根)	防鼠板 (一個)	螺釘 (一個)	排水管固定架-組件B (一個)	保用證 (一個)
							

各部件名稱

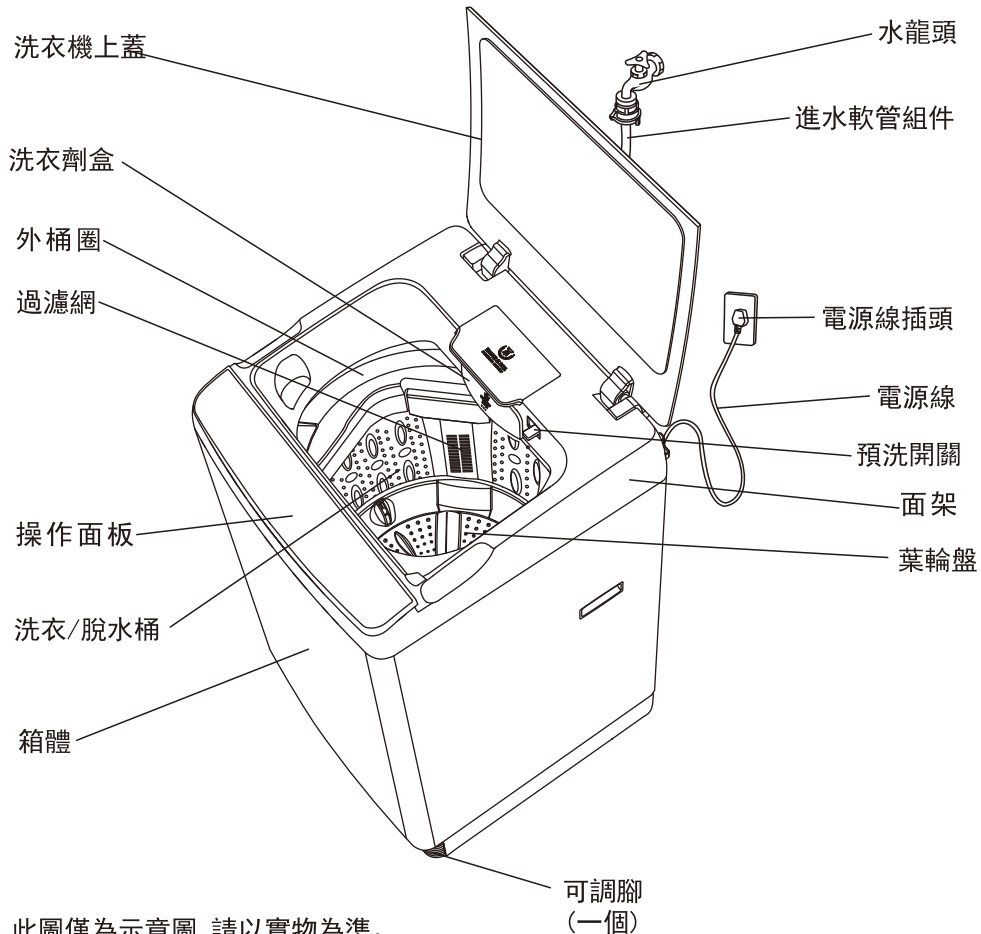


此圖僅為示意圖，請以實物為準。

安裝介紹

防鼠板的安裝

1. 拿出洗衣機面架保護上的防鼠板和部件袋中的螺釘。
2. 將洗衣機向後傾斜，慢慢地放到在軟墊上。
3. 將防鼠板沿底托卡槽筆直推入，直至其安裝到位。
4. 用螺釘將屏蔽板與底托固定。
5. 將洗衣機輕輕扶起，放穩。

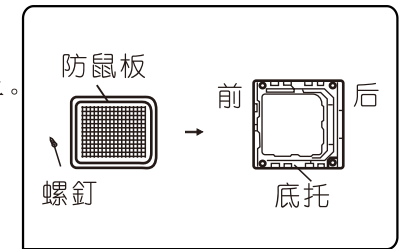


洗衣機的放置

1. 選擇乾燥、無陽光直射的地方放置洗衣機。
2. 將洗衣機安放在堅實、平穩的地面上。
3. 洗衣機安放處應有排水管，且流水通暢，同時排水管口應與洗衣機安放平面平齊或略低，以防洗衣機漏水造成危害。
4. 盡量使洗衣機平穩，如有必要，可按圖示順序通過調節洗衣機的可調腳來將洗衣機調平。洗衣機支撐面最大允許斜度為 2° 。

注意：

- 洗衣機安放在地板或彈性較大的支撐台上時，可能會造成洗衣機的振動。
- 請勿在洗衣機底部放置地毯等物，以避免阻塞底部開口。

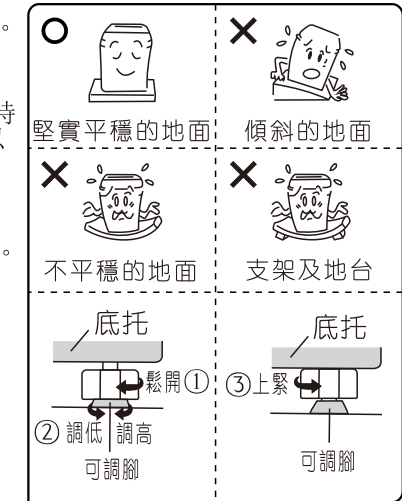


水龍頭的選用

水龍頭類型：(水龍頭口部要平整)

A型：最為合適。

B型：水龍頭長度續大於16mm，否則無法安裝進水管接頭。

C型：如圖所示部位可能會出現漏水現象。




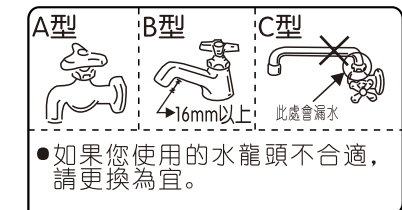


- 如果您使用的水龍頭不合適，請更換為宜。




注意：

1. 在洗衣機安裝時，請務必拿掉洗衣機底部運輸用的台座及支架，否則將無法使用。
2. 在安裝或初次使用時，排水軟管內會有少量的水流出，這是在工廠進行例行檢查時留下的餘水。
3. 洗衣機使用完時，請拔下電源線插頭，關閉水龍頭，以防意外的火災及漏水事故發生。

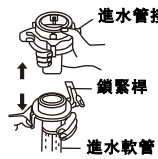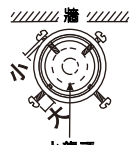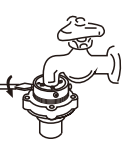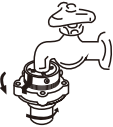進水管接頭的安裝


<p>1. 一手拿著進水管接頭，一手按住鎖緊桿，將進水管接頭與進水軟管分開。</p>	<p>2. 均勻調整進水管接頭上的4枚螺釘，使靠牆側的2枚螺釘首先與水龍頭外側充分接觸。</p>	<p>3. 將進水管接頭垂直套到水龍頭上，使其內部的密封圈緊貼在水龍頭的口部，用螺絲刀擰緊4枚螺釘。</p>	<p>4. 撕下進水管接頭上的封條，旋緊進水管接頭。</p>
			

進水管的連接
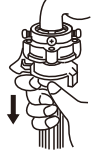
<p>1. 將進水軟管與進水管接頭連接。</p>	<p>2. 將進水管口對準進水閥口，順時針旋轉進水軟管上的旋緊螺母，直至旋不動為止。</p>	<p>3. 確認進水管連接是否牢固</p> <ul style="list-style-type: none"> • 向下拉拽進水管，確認進水管與進水管接頭連接可靠，然後慢慢打開水龍頭，檢查是否漏水。如果漏水，請關閉水龍頭，重新安裝。 • 長時間使用後，進水管接頭可能會鬆動，此時請重新安裝。 • 洗衣機程序結束或長期不用時，請關閉水龍頭。
		


如何取下進水管

1. 關閉水龍頭。
2. 按下“電源”鍵，接通電源，然後按“啟動/暫停”鍵。
3. 15秒鐘後，切斷電源。
4. 用手指按壓鎖緊桿及套管向下拉，取下進水管。
5. 進水閥上的進水管按逆時針方向旋轉，直至取下進水管。

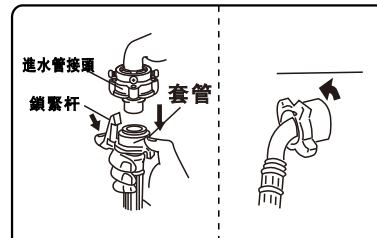

排水管的連接

1. 將排水管連接到排水口上，然後用軟管夾子將其固定。如右圖所示：


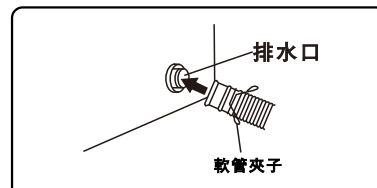


注：請務必使用附件中的新進水軟管，舊進水軟管不能重新使用。


適用於高去水位安裝

排水軟管的安裝


1. 將排水管連接到箱體背後的排水接頭上。
2. 連接好後，請用軟管夾子將排水管夾緊，應切實的插入到位，以免漏水。

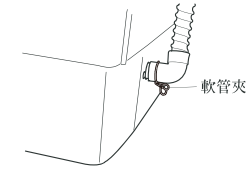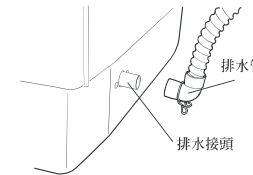

3. ① 將排水管固定架插入孔中。
② 按圖示方向旋轉90度，將固定腳旋入孔中。

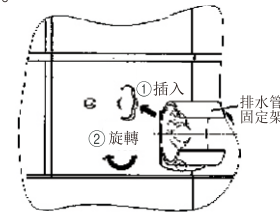

4. 將排水管拉直，嵌入固定在排水管固定架上。

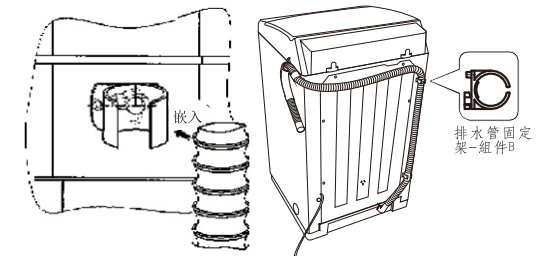


安裝介紹

注意：

- 請勿將排水管放倒，以免水灑落。
- 請勿使用延長排水管。
- 請勿將排水管尾部的U型管浸在水中。
- 排水管安裝時，請勿低於排水接頭，如低於排水接頭可能會導致排水不順。



- 洗衣機操作時，排水軟管掛起的高度必須低於1000mm 及高於700mm，否則洗衣機可能無法正常工作。

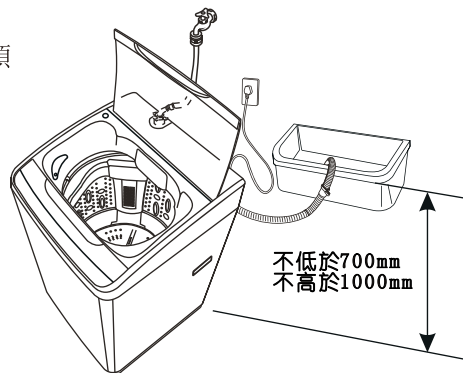

安裝介紹

適用於低去水位安裝

排水軟管的安裝

1. 捏緊排水軟管夾子上的兩個柄，將排水軟管連接到排水泵口上（洗衣機後部）。然後用軟管夾子將其固定。



2. 將排水軟管另一端向上提起，按順序把排水軟管扣在洗衣機背部的卡扣內。
3. 在不用洗衣機的時候，將排水軟管的口部一端掛在洗衣機面架右側的小孔內。在使用洗衣機時，請將排水軟管口放在下水道口。

洗衣要領

- 有色和白色、厚和薄的衣物請分開清洗。請按照衣物上洗衣標示圖方式清洗。

圖例




- 請先彈掉衣服上的泥土及砂。
- 確保衣服口袋內沒有物品。（如釘子、硬幣等可能損傷衣服或洗衣機，產生額外的噪音或使洗衣機發生故障的東西。）



- 請先放入易浮於水面、大件、厚重的衣物。
- 如果衣物浮出水面上，請暫時停止洗衣，先將衣物壓入水中。



- 拉緊衣服上鬆動的帶子，並拉上拉鍊，扣好扭扣。

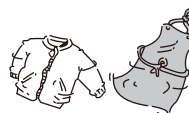


- 當洗精細衣物時，如女性內衣、飾有花邊的物品、尼龍和薄化纖衣料等，應將其放入清洗用網套中。



- 易起毛球及脫線的衣物，請翻反面來清洗。



操作面板功能介紹

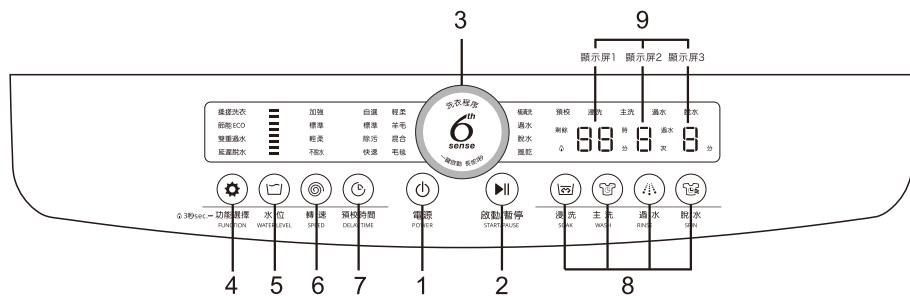

1. “電源” 鍵

- 要接通洗衣機電源，請按該鍵。如要切斷電源，再按該鍵一次即可。按該鍵後，所有顯示燈點亮2秒鐘後恢復程式顯示，10分鐘內沒有按其它鍵，電源將自動切斷。程式運行結束後，電源會在5秒鐘之後自動切斷（設定了排餘水功能時為10分鐘）。

2. “啟動/暫停” 鍵

- 接通電源時，按下該鍵後，洗衣機開始運轉。該鍵亦可用於暫時停止運轉，如要繼續開始運轉，只需再按該按鍵。

3. “6thsense” 鍵

- 在通電狀態下，按下“電源”鍵後，可通過按“6 sense”鍵來選擇自選、標準、除污、快速、輕柔、羊毛、混合、毛毯、桶清洗、過水、脫水、風乾12種全自動程式。
- 在通電狀態下，通過長按“6thsense”鍵三秒開始運行標準的洗衣程式。

注意：如果您選擇自選、標準、除污、快速、混合或桶清洗程式，洗衣機將自動進行模糊判斷，自動選擇合適的水位和水流等工作程式。

4. “功能選擇” 鍵

- 您可以通過該鍵選擇揉搓洗衣、節能、雙重過水、延遲脫水4種功能。
- 該按鍵可以設定兒童安全鎖功能，請參照第41頁“兒童安全鎖功能”的設定方法。

5. “水位選擇” 鍵

- 通過該鍵選擇與洗滌衣物相合適的水位。洗滌和漂洗可以用不同的水位。“毛毯”程式只能選擇5~8檔水位，“羊毛”、“輕柔”程式只能選擇3~8檔水位。

6. “脫水速度” 鍵

- 可以通過該鍵選加強，常規，輕柔，和不脫水4種脫水強度。

7. “預校時間” 鍵

- 您可以通過該鍵設定程式結束的時間。

注意：輕柔、羊毛、過水、脫水、風乾程式不能設定該功能。

操作面板功能介紹

8. “過程” 鍵

- 您可以通過該組按鍵自由設定“浸洗時間”、“主洗時間”、“過水次數”、“脫水時間”。

9. 顯示屏功能介紹

顯示屏1

- 在程式進行過程中顯示屏顯示整個過程的剩餘時間。
例：剩餘時間18分鐘。----- [18]
- 在預校設定時，該顯示屏顯示預約程式何時完成。
例：2小時後完成 ----- [2]
- 當非正常情況發生時，顯示屏顯示故障程式碼。
例：進水異常----- [E1]
- 在設定過程中，顯示屏顯示“浸洗”或“主洗”設定的時間。
例：主洗10分鐘----- [10]

顯示屏2

- 該顯示屏顯示過水的次數。
例：主洗2次----- [2]

顯示屏3

- 該顯示屏顯示脫水的時間。
例：脫水時間5分鐘 ----- [5]

一般的使用方法

1. 使用洗衣機前準備及步驟

- ①接好並放倒排水軟管。
- ②將進水軟管接到水龍頭上，並擰開水龍頭。
擰開水龍頭之前，需確認進水管接頭的螺釘已擰緊。
如果螺釘鬆動，可能會造成漏水。
- ③將電源線插頭插入電源插座。
- ④放入洗衣物。

2. 按“電源”鍵。
3. 按“啟動/暫停”鍵。

洗衣機將自動檢測布量(“自選”、“標準”、“除污”、“快速”、“混合”、“桶清洗”)

- 自動選擇合適的水位、水流, 洗衣脫水時間, 過水方式等。

4. 將洗衣劑放入洗衣劑盒或洗衣/脫水桶內。(洗衣劑的具體用量請根據您所使用的洗衣劑的使用說明正確使用)
5. 蓋好洗衣機上蓋。
- 如洗衣機上蓋沒有關閉, 洗衣機將會在脫水運行之前自動停止運轉並有蜂鳴提示。

型號	VEHC85920							
水位(檔)	1	2	3	4	5	6	7	8
水量(L)	約16	約24	約30	約36	約42	約48	約54	約60

- 水位模糊判斷時, 因洗衣物的質地、大小等不同會有一定差異, 這是正常現象。

選擇「程序」、「過程」的使用方法

1. 準備: 放倒排水軟管, 擰開水龍頭, 將電源線插頭插入電源插座, 放入洗衣物。
2. 按下“電源開關”鍵。
3. 根據所洗衣物的種類, 按“6 sense”鍵設定您想要的程序。

- 各程序的選用參見下表。

選擇「程序」、「過程」的使用方法

各程序的選用指導			程序默認的運行情況		
程 序	適合衣物的類型	洗衣容量	洗衣分鐘	過水方式	脫水分鐘
自 選	用戶自己設定程式參數的衣物	額定洗衣容量	10分	噴淋+過水	5分
標 準	日常穿著類衣物	額定洗衣容量	10分	兩次過水	5分
除 污	厚重衣物, 髒污嚴重的外套	額定洗衣容量	12分	兩次過水	8分
快 速	少量衣物, 輕微污漬的衣物	3.0kg	5分	一次過水	3分
輕 柔	精細織物、真絲織物等	2.0kg	6分	兩次過水	2分
羊 毛	羊毛纖維等質地的衣物	1.5kg	6分	兩次過水	2分
混 合	棉麻材質的衣物	額定洗滌容量	10分	兩次過水	8分
毛 毯	大件家居類紡織品	4.0kg	12分	兩次過水	8分
桶清洗	桶清洗	-	8分	一次過水	3分
過 水	僅需脫水的衣物	-	-	一次過水	5分
脫 水	僅需脫水的衣物	-	-	-	5分
風乾	輕輕風乾衣物	-	-	-	60分

4. 通過按“預校時間”和“過程”的一組按鍵, 可以自由設定預校時間、浸洗時間、洗衣時間、過水次數、脫水時間。設定時, 數位顯示中數位迴圈顯示如下:

- 預校時間設定顯示:
0→1→2……→5→6 ……24 小時 (“輕柔”、“羊毛”、“過水”、“脫水”、“風乾”程式無此功能)
- 浸洗時間設定顯示:
0→5→10→15→……40 分鐘 (“輕柔”、“羊毛”、“毛毯”、“過水”、“脫水”、“風乾”程式無此功能)
- 洗衣時間設定顯示:
0→5→10……→15 ……20分鐘
- 過水次數設定顯示: 0→1→1過水→2→2過水→3→3過水→4→4過水(數位表示次數, “過水”燈亮表示邊進水邊過水)
- 脫水時間設定顯示:
0→1→2→3→4→5→6→7→8→9分鐘 (“自選”、“標準”、“除污”、“快速”、“混合”、“毛毯”、“桶清洗”、“過水”、“脫水”程式)
0→1→2→3分鐘 (“羊毛”、“輕柔”程式)
- 單一過程的設定: 按“6thsense”鍵, 選擇“標準”程式, 然後選擇“洗衣時間”、“過水次數”、“脫水時間”, 可設定單主洗、單過水和單脫水功能。

注: 部分程式以上設定受限。

選擇「程序」、「過程」的使用方法

- 按“水位選擇”鍵，選擇適合的水位，放入洗衣劑。
- 按“啟動/暫停”鍵。
- 蓋好洗衣機上蓋。
 - 如果您想改變已設定好的“過程”。請關掉電源開關再打開，並重新選擇您所需要的程式。
- 根據需要，可按“功能選擇”按鍵設定您想要的附加功能。有“揉搓洗衣”、“節能”、“雙重過水”和“延遲脫水”4種可供選擇。
 - “揉搓洗衣”：選擇該功能要求洗衣負載小於或等於3kg，僅自選、標準、除污程式能選擇此項功能，選擇揉搓洗衣功能後該功能指示燈亮，水位、洗衣時間按鍵不可選。
 - “節能”：選擇該功能後相應指示燈亮，洗衣管道變為節能管道，自選、標準、除污、快速、輕柔、羊毛、混合、毛毯、桶清洗有此功能。
 - “雙重過水”：選擇該功能後相應指示燈亮，同時原程式的洗衣過程和脫水過程保持不變，第一次過水過程變更為：噴淋過水+同時進水及過水，淨脫水和風乾無此功能。
 - “延遲脫水”：運行到脫水過程中時，程序暫停，不進行排水，指示燈閃爍並發出提示音。當您按“啟動”按鍵時恢復脫水過程。若1小時之內無操作則自動斷開電源。

三種過水方式介紹

1. 進水過水(通常方式)



脫水結束後，進水到設定水位，停止進水，開始過水。

3. 同時進水及過水(洗衣劑較多時)



脫水結束後，進水到設定水位後，一邊過水，一邊進水，使過水時的大量泡沫從排水口排出，排入下水道。

2. 噴淋過水(節約用水時)



脫水結束後，一邊進水，脫水桶一邊慢速旋轉，像淋浴一樣淋掉衣物上的洗衣液，排入下水道。(噴淋過水時，打開洗衣機上蓋，洗衣機立即停止工作)。

毛毯程序的使用方法


毛毯程式適用於清洗毛毯等大物

- 使用該程序時，水位自動設置成第8檔。但您可根據毛毯和大物的大小改變水位，設置成第5-8檔。

操作順序

1. 打開洗衣機上蓋，按“電源”鍵。
2. 按“6 sense”鍵，直到“毛毯”燈亮為止。
3. 將洗衣液倒入洗衣機，如您使用洗衣粉，將其充分溶解在5L的溫水中(大約30°C)，然後慢慢地倒入洗衣機中。
4. 將卷好的毛毯邊朝下放入洗衣機內。
5. 按“啟動/暫停”鍵。(根據需要，可人工調整水位。)
6. 蓋好洗衣機上蓋。
 - 如洗衣機上蓋沒有蓋好，洗衣機將會在脫水運行之前自動停止運轉。
 - 如洗衣完成之後，蜂鳴器將發出蜂鳴提示音，電源將在5秒鐘後自動切斷。
 - 洗完後，關上水龍頭並清洗過濾網。

怎樣折疊毛毯並將其放入洗衣機

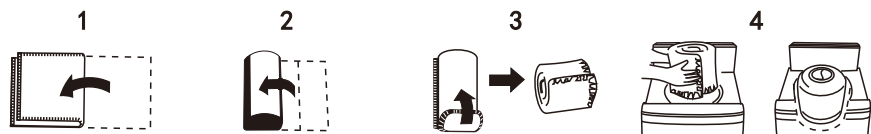

將毛毯沿長度方向對摺

再在同一方向摺成4層

將毛毯卷起

有邊的一方向下放入洗衣/脫水桶內

洗衣完畢


拿出毛毯從中間掛曬在背陰處。

注意：● 用手預洗較骯髒的部分。

● 不要用太多的洗衣劑。

● 用溫水(大約30°C)能有效地去除污漬。

● 在洗衣過程中，如毛毯的一部分露出水面，按一下“啟動/暫停”鍵，洗衣機臨時停止運轉，把露出的部分壓入水裡，再按一下“啟動/暫停”鍵，繼續洗。

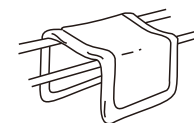

羊毛程序的使用方法

- 清洗羊毛纖維等質地的衣物時使用，洗滌前請確認衣物的洗衣圖示標誌。
- 使用“羊毛”程序時，水位自動設在第6檔。但您可根據羊毛衣物的大小改變水位，設置成第3-8檔。

操作順序

1. 打開洗衣機上蓋，按“電源”鍵。
 2. 按“6thsense”鍵，直到“羊毛”燈亮為止。
 3. 將洗衣液倒入洗衣機，如您使用洗衣粉，將其充分溶解在5L的溫水中（大約30°C），然後慢慢地倒入洗衣機中。
 4. 將羊毛衣物裝放入洗衣機內。
 5. 按“啟動/暫停”鍵。（根據需要，可手動調整水位。）
 6. 蓋好洗衣機上蓋。
- 如洗衣機上蓋沒有蓋好，洗衣機將會在脫水運行之前自動停止運轉。
 - 洗完後，終了蜂鳴音響，電源將在5秒鐘後自動切斷。
 - 洗完後，關上水龍頭並清洗過濾網。

注意

- 洗衣容量應在1.5kg以下。
- 程序完成後，請速將衣物取出，整形晾曬，以免放置時間過長而變形。
- “羊毛”程序不可預約洗衣。
- 為了防止衣物的損傷，洗衣水溫不應超過30°C。
- 請將白色或明亮色彩的衣物與深色衣物分開洗滌。
- 使用羊毛專用洗滌劑可以減少衣物的損傷，提高洗滌效果。

其他功能介紹及設定方法

預校功能


- 預校洗衣設定的時間是程式完成的時間。
- 預校設定前，首先要擰開水龍頭，放倒排水軟管，檢查進水管接頭是否擰緊，防止發生漏水事故。

操作順序

1. 按“電源”鍵。
2. 根據需要按“6thsense”鍵或“過程”鍵選擇合適的洗衣程式及過程設定。
3. 按“預校時間”鍵，設定預約完成時間，顯示屏顯示設定的時間，每按一次增加一小時，最長時間為24小時。
4. 必要時，用“水位選擇”鍵設定合適的水位。放入洗衣劑、柔順劑等。
5. 按“啟動/暫停”鍵。
6. 蓋好洗衣機上蓋。
 - 約一分鐘後，除“預校”指示燈外其餘燈全部熄滅。（若設定了兒童安全鎖，則“兒童安全鎖”燈亮）
 - “輕柔”、“羊毛”、“過水”、“脫水”、“風乾”程式不能設定預校洗衣。
 - 想要查看預約過的程式，請按除“電源”鍵以外的任意鍵，預約過的程式會有5秒鐘顯示。
 - 要變更預校程式，請關掉電源，重新開機設定。

預校洗滌時洗衣劑的投放方法

- 洗衣粉可以直接放在洗衣劑盒內，也可以用手絹包起來，直接放入脫水桶內。
- 漂白劑可直接倒入面架上的孔內，但不能直接倒在衣物上，否則可能造成衣物褪色。
- 柔軟劑用2倍水稀釋後，從柔軟劑注入口倒入。
- 請不要使用皂片，因為它不容易溶解，洗衣效果不好。

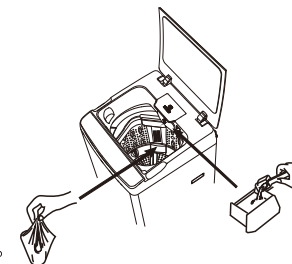

記憶功能

當選擇“自選”、“標準”、“除污”程式時，程式結束後，洗衣機將記住你所選的程式，下次使用時，打開電源，即顯示上次記憶的程式，只要按“啟動/暫停”鍵，即可開始工作。

- “標準”、“除污”程式只記憶程式，不記憶洗衣參數。

雙重強力洗

在洗衣過程中，洗衣機在達到比設定水位低兩檔水位時，進水同時開始洗衣。

- 設定最低兩檔水位時，達到設定水位後開始洗衣。
- “輕柔”、“羊毛”、“毛毯”程式無雙重強力洗。
- 選擇“浸洗時間”過程時，浸洗結束後，洗衣時無雙重強力洗。

其他功能介紹及設定方法

預手洗功能

在洗衣機進水的過程中，撥動預洗開關，預洗口會有水流出。可對衣物進行局部手動洗衣。當水位到設定水位時，會自動停止。

雙水位設定

為了提高洗衣濃度，同時也可以節約用水，主洗、過水可以設定不同的水位，建議以較低的水位清洗，較高的水位過水，這樣可以保證洗的乾淨，過水的徹底。

設定方法

按“電源”鍵，接通電源，在選擇好程式後，按“主洗”鍵設定洗衣時間，按“水位選擇”鍵設定洗滌水位；按“過水次數”鍵設定過水次數，再按“水位”鍵設定適合水位；再按“脫水”鍵設定脫水時間，最後按“啟動/暫停”鍵，啟動後，主洗和過水將按照設定好的不同水位進行。

排餘水功能

設定後，在程式結束9分鐘後，排水閥自動打開，排出機內殘留的水，防止天冷時結凍。（在氣溫低於0℃時使用）

設定方法

- 按“電源”鍵，按住“脫水”鍵4秒以上，直到聽到蜂鳴提示音為止。恢復時，重複上述操作。

桶燈功能

打開洗衣機上蓋時桶燈亮，關蓋2分鐘後桶燈關閉，不執行關蓋動作桶燈3分鐘後自動關閉。

浸洗功能

選擇浸洗功能後，可在洗衣前新增動態浸泡（輕柔、羊毛、毛毯、過水、脫水、風乾程式無此功能）。浸洗時間為0-40分鐘。

其他功能介紹及設定方法

兒童安全鎖功能

為了防止兒童打開洗衣機上蓋造成傷害，可設定兒童安全鎖功能。

設定方法

按“電源”鍵，接通電源按住“功能選擇”鍵4秒以上，直到聽到蜂鳴提示音為止。取消時，重複上述步驟。

- 設定“兒童安全鎖”後，在洗衣過程中打開洗衣機上蓋超過5秒，洗衣機停止操作並出現“E5”和蜂鳴提示音啟動。
- 設定兒童安全鎖後在程式運行時所有按鍵除“電源”鍵外均不會有反應。

取消蜂鳴提示

取消方法：按“電源”鍵，按住“啟動/暫停”鍵4秒以上，直到聽到蜂鳴提示音為止。恢復時，重複上述步驟。

並非故障的情況

1. 在主洗或過水時有時有進水現象，這是由於水位下降而進行的自動補水。
2. 在脫水開始時，脫水桶時停時轉，這是為達到更好的脫水效果而設計的間歇脫水。
3. 同時進水及過水時，排水軟管有不排水現象，這是由於設定水位較低或水壓較小造成的。
4. 脫水中途有時出現進水過水現象，這是由於脫水時衣物偏置而自動進行的脫偏糾正。
5. 脫水結束後，有水殘留的聲音，這是為了降低脫水震動而設計的平衡環內平衡液的流動聲。
6. 程序運行中停電，來電後不能自動進行繼續運轉，請重新設定。

故障排除指南

當下列問題出現時，微電腦將對不正常狀態進行檢測，並發出大約10秒鐘的蜂鳴提示音，顯示屏將按下表所示狀態顯示。

注意：

檢查各項並排除故障後，按“啟動/暫停”鍵，故障顯示被解除，洗衣機將繼續運轉。如仍有異常，請拔下電源線插頭，並盡快撥打本公司客戶服務熱線。

故障類型	故障顯示	原因
完全不運轉		<ul style="list-style-type: none"> ● 電源開關是否接通？ ● 是否按了“啟動/暫停”鍵。 ● 是否在預校狀態？ ● 電源的保險絲或電路的電流斷路器是否完好。 ● 是否停電
不進水或進水量很少	E1	<ul style="list-style-type: none"> ● 水龍頭是否打開。 ● 是否停水。 ● 進水管及進水閥過濾網是否被堵塞。 ● 洗衣機進水管是否已經凍結。 ● 水壓是否太小，長時間進水未達到設定水位。
不排水	E2	<ul style="list-style-type: none"> ● 排水管位置是否放倒。 ● 排水口是否過高（超過1米）。 ● 排水管是否被堵塞。
不脫水	E3	<ul style="list-style-type: none"> ● 洗衣物是否偏向洗衣桶一側。 ● 洗衣機安放是否平正？
	E4	<ul style="list-style-type: none"> ● 洗衣機上蓋是否打開？
不洗衣	E5	<ul style="list-style-type: none"> ● 檢查兒童安全鎖模式是否設置。 ● 洗衣機上蓋是否打開。
其他	EA EB EC	<ul style="list-style-type: none"> ● 請按“電源”鍵，關閉電源，拔下電源線插頭，並盡快撥打本公司客戶服務熱線。
	Ed	
	E901 E902 E920 等	

SPECIFICATIONS

規格

Dimensions 尺寸	540(W)x570(D)x945(H)mm (闊) (深) (高)
Weight 重量	34 kg
Water quantity (HIGH) 水量 (高水位)	60L
Voltage 額定電壓/頻率	AC 220V ~ 50Hz
Input Power 額定輸入功率	300W
Required Water Pressure 水壓	0.03 MPa – 0.8 MPa

FOR WASHER WITH A 13 Amp. PLUG TOP 3 PIN
對於附有13安培三腳插頭的洗衣機

 
WARNING - This appliance must be earthed.
警告-本電器必須接地。

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow: Earth
Blue: Neutral
Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

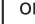The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol , or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.


The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

重要事項

電源線的電源是根據以下的顏色表示：

綠 黃：地線
藍：中性線
棕：火線

由於本電器電源線的顏色不一定和您的插頭終端上的顏色標誌相同，所以應該採取以下步驟：

綠黃色電源線應該連接至插頭上標明英文字母 E 或地線符號  或顏色是綠色或黃綠色的終端。

藍色電源線應該連接至插頭上標明英文字母 N 或顏色是黑色的終端。

棕色電源線應該連接至插頭上標明英文字母 L 或顏色是紅色的終端。