


Whirlpool

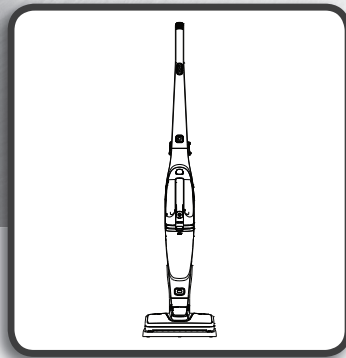

Health & Safety and Use & Care guide
產品安全指引及使用說明指南

Model 產品型號： VS2511




www.whirlpool.com.hk

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

 **WARNING :** To reduce the risk of fire, electric shock, or injury:

1. Do not pick up detergent, kerosene, blizzard, needle, ash, wet dust, dirty water and match, etc. with the vacuum cleaner.
2. To avoid filter blockage and motor damage, do not pick up granule such as cement, land plaster, and spitball.
3. Keep the vacuum cleaner away from fire and the place of high temperature.
4. Caution: Always use the vacuum cleaner should be assembled with HEPA and roller brush before operation.
5. To avoid short circuit, keep the vacuum cleaner away from water.
6. Recharge the battery when use it first time or the battery is used up. Keep recharge and discharge once three months when do not use it in long period.
7. Unplug the plug when the vacuum cleaner recharge finished, or during cleaning and maintenance.
8. When cleaning the vacuum cleaner, please use dry cloth; do not use petrol and lacquer thinner which will damage the surface.

9. Do not use if the plug or cord is damaged.
10. Switch the appliance off after use.
11. The charging base requires a 100-240V~, 50/60 Hz supply. Do not use any other power source.
12. Only the supplied charging base should be used with the appliance.
13. Never suck up water or any other liquid. Never suck up flammable substances and do not suck up ashes until they are cold.
14. Do not immerse the body of the cleaner or the electrical cord or plug in water or liquids.
15. Do not use attachments or accessories not recommended by the manufacturer.
16. Close supervision is necessary when an appliance is used near children. Children should not operate this appliance.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. This appliance is for household use. Do not use for any purpose not expressly specified in this manual.
20. There are no user serviceable parts in this appliance. Unauthorised dismantling or servicing will void the warranty.
21. Store the appliance away from direct sunlight, with all accessories detached and out of the reach of children.

22. Caution: Only charge the vacuum cleaner with the Charging bracket supplied. During charging, the plug feels warm to the touch. This is normal.
23. Caution: Never block the exhaust air openings during vacuuming.
24. Caution: Switch off the appliance when you recharged it.

IMPORTANT NOTICE - PLEASE READ BEFORE USING THIS PRODUCT!

THIS CLEANER WORKS BY SUCKING AIR AT HIGH PRESSURE THROUGH A POWERFUL MOTOR. FOR EFFICIENT AND SAFE OPERATION IT IS ESSENTIAL THAT ALL THE AIRWAYS AND FILTERS ARE CLEANED AT REGULAR INTERVALS AND THAT THE DUST IS EMPTIED BEFORE THE DUST CONTAINER IS FULL AND AFTER EVERY USE OF THE APPLIANCE.



FAILURE TO CLEAN THE FILTERS AND EMPTY THE DUST CONTAINER WILL RESTRICT THE AIRFLOW. THIS WILL RESULT IN POOR CLEANER PERFORMANCE.

LONG TERM NEGLECT WILL BLOCK THE AIRFLOW AND MAY DAMAGE THE CLEANER BEYOND REPAIR. ANY DAMAGE CAUSED BY FAILURE TO CLEAN THE FILTERS, AIRWAYS AND DUST CONTAINER AS SPECIFIED IN THESE INSTRUCTIONS WILL NOT BE COVERED BY THE WARRANTY.

SAVE THIS INSTRUCTIONS


IMPORTANT SAFETY INSTRUCTIONS

(for Bed Cleaner)

1. Check the rating label of Bed Cleaner matches the dedicated Handheld unit.
2. This Bed Cleaner is intended for normal household use only. Do not use the appliance outdoors. Do not use the appliance for other uses than its intended use.
3. To protect against electrical shock, do not immerse the Bed Cleaner in water or other liquids.
4. Do not store the Bed cleaner in areas with high temperature, keep it away from heat sources such as radiators or gas/electric fires.
5. If a blockage is found in the rotating brush, it should be removed before use.
6. Do not continue to operate the appliance if you are in any doubt about it working normally (e.g. abnormal noise, smell, smoke), or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.
7. The use of accessories not recommended by the appliance manufacturer may cause injuries.
8. Never touch the appliance itself with wet hands.
9. Do not point the appliance at the eyes, ears or mouth during operation.
10. Do not watch the power-on UV lamp directly, it may cause damage to vision.

PRODUCT OVERVIEW

UPRIGHT UNIT:

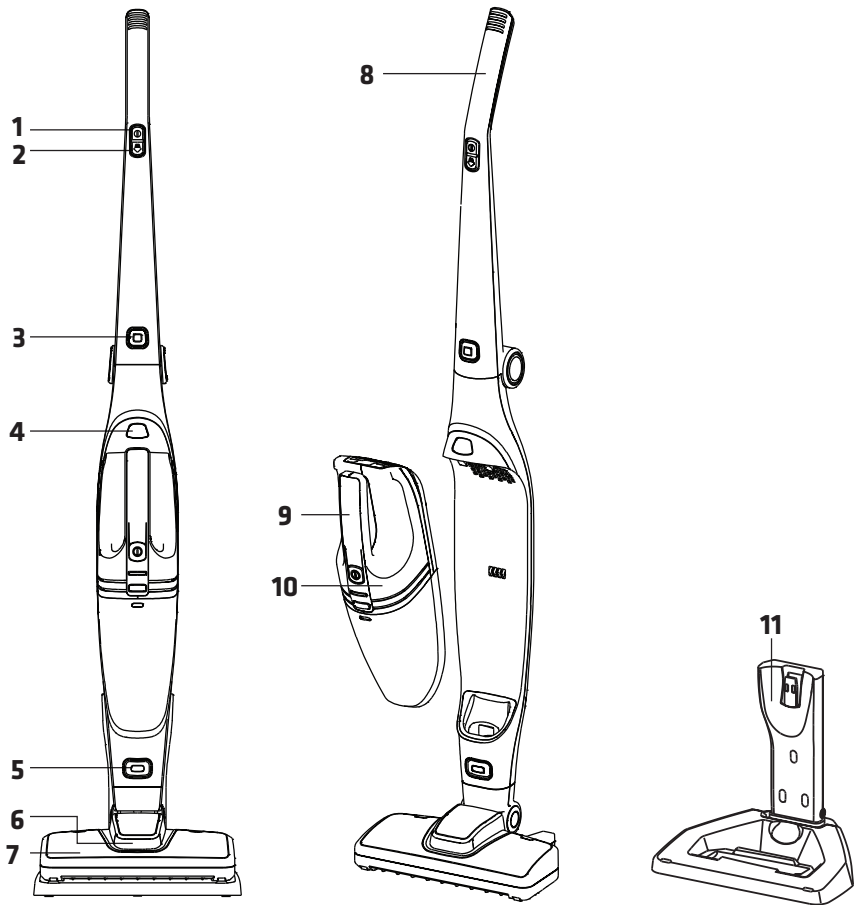


- 1. ON/OFF switch
- 2. ECO speed switch
- 3. Foldable handle release button
- 4. Handheld release button
- 5. Motorized brush
- 6. LED light
- 7. Motorized brush

- 6. LED light
- 7. Motorized brush
- 8. Folding handle
- 9. Handheld handle
- 10. Handheld unit
- 11. Charging bracket

PRODUCT OVERVIEW

HANDHELD UNIT:

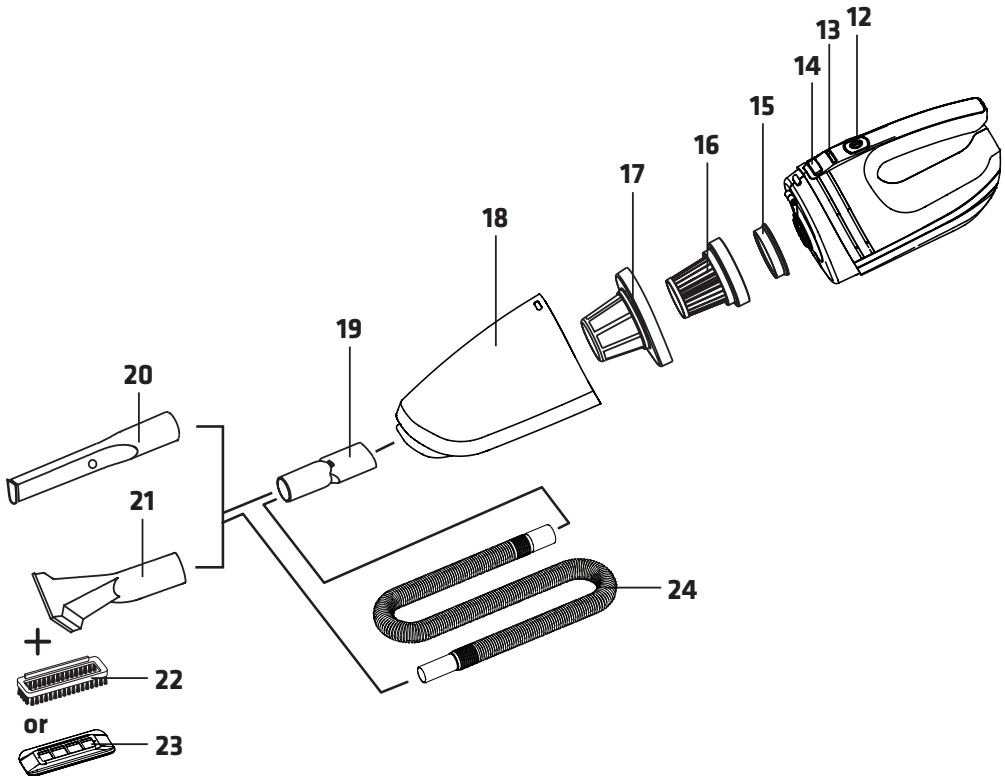

- 12. ON/OFF switch
- 13. Battery/ Charging indicator
- 14. Dust container release button
- 15. Seal ring
- 16. HEPA filter
- 17. Outer filter
- 18. Dust container
- 19. Adaptor

- 20. Extended crevice tool
- 21. Wide brush / Upholstery adaptor
- 22. Wide brush
- 23. Upholstery
- 24. Flexible hose

APPLICATION OF ACCESSORIES

Adaptor:

Insert the Adaptor [19] into the inhale handheld nozzle of dust container. It acts as an adaptor for the connection of accessories for different purposes. To remove the Adaptor from dust container just pull firmly outward.

Extended Crevice Tool:

Connect [20] Extended Crevice Tool is for cleaning small areas which are difficult to reach, such as corners, gaps, holes, etc.

Wide Brush:

Insert and slide [22] Wide Brush into [21] Wide brush / Upholstery adaptor. The Wide Brush is applicable for cleaning uneven surfaces, such as hair, fibers, carpets, etc.

Upholstery:

Insert and slide [23] Upholstery into [21] Wide brush / Upholstery adaptor. The Upholstery is applicable for cleaning textile surface, such as shirts, curtain, bedding, etc.


Flexible hose:

Connect the Flexible hose [24] to accessories and Adaptor [19] at both ends. The extension hose allows the vacuuming flexibility to reach some narrow and hidden areas.


PRODUCT ASSEMBLING

Foldable Handle

To lower the handle, press the folding handle release button.

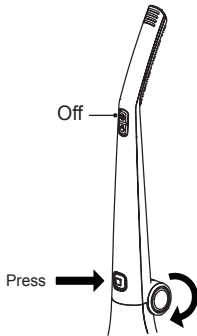

Lift the handle to an upright position, the handle will lock automatically.

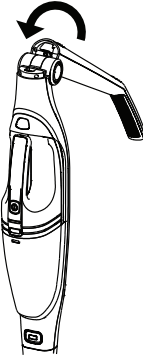


Assembling the Charging bracket



Mounting Screws




Plastic Wall Anchors

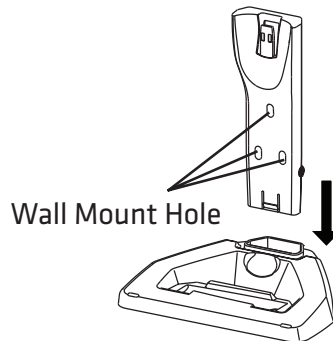


- Charging bracket assembly must be placed on a flat ground, mounting screws and plastic wall anchors can fix the charging bracket on the wall.
- Mounting screws and plastic wall anchors are placed at the bottom of the charging bracket. Drill the holes on the wall and put the plastic wall anchors into holes, and then fixed the charging bracket with mounting screws.

Detachable Motorized Brush

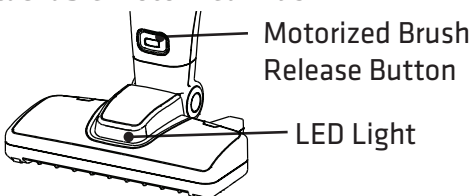

Motorized Brush

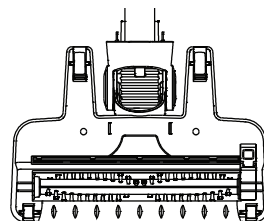

PRODUCT CHARGING


Charging the Vacuum Cleaner

Charge the battery when:

- using the product for the first time
- after not using the product for a long period of time
- when the unit is at low power and the battery/ charging indicator flashes red.


1. Insert the handheld unit to the upright unit

Make sure the upright unit is switched OFF. Avoid any obstacles in between the hand-held unit and the upright unit.

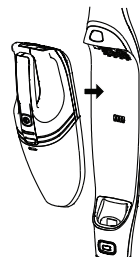


2. Attach the upright unit onto the charging bracket

- Make sure the charging bracket is placed on a flat stable floor.
- Attached the upright unit onto the charging bracket.
- If the upright unit is not attached to the charging bracket properly, charging will not start.
- Avoid any dust in between the charging bracket and the unit, clean the contacts if necessary.
- Be careful of the unit will be tripped over by the power cable during charging.

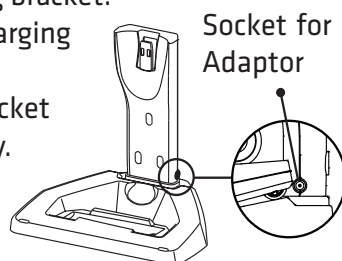

3. Connect the power cable to the main socket

- The charging indicator will illuminate red to indicate that the vacuum cleaner is being charged.
NOTE: The charging indicator will turns to blue when the battery is fully charged.
HINT: It is recommended to charge the vacuum cleaner for at least 6 hours for before use.
- It is normal that the charging bracket and the unit will get warm while charging.
- Even if the switch button is turned on, put the vacuum cleaner back into the charging bracket, the vacuum cleaner will be automatically stop working.
- During the battery recharge process on charging bracket, the vacuum cleaner has the circuitry protect feature. Even press on the switch button, the product will be still in power-off mode.

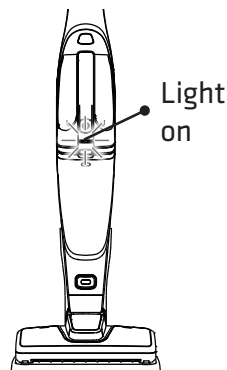

LED INDICATOR

Status	LED color
Power ON	Blue
Low battery	Blue flashing
Empty battery	Red flashing
Charging	Red
Charging complete	Blue
Bad battery	Red & Blue alternative flashing

OPERATION

Make sure the battery is fully charged before use.

Operation of the upright vacuum cleaner

1. Press the ON/OFF switch to switch on the upright vacuum cleaner.
2. During the use, press the ECO Speed switch to shift between High Speed and ECO Speed. In High Speed, the product suction power will be in maximum while ECO Speed will be at relatively lower noise level and with longer operation lead time.
3. During operation, the LED light on the floor brush will light up.
4. Always turn off the vacuum cleaner when the product is standing upright on the ground because the brush bristles may damage the floor or carpet.
5. When the product is not in used, it is recommended to store it against the wall upright and children should be supervised to ensure that they do not play with the appliance.


Operation of the handheld vacuum cleaner

1. Press the handheld button to detach the handheld vacuum cleaner from the upright unit. Press the ON/OFF switch to turn on the vacuum cleaner. The handheld vacuum cleaner will start to work.
2. Vacuum the surface in any direction until the area is clean.
3. Press the ON/OFF switch to turn off the vacuum cleaner. Slightly lift the vacuum clenaer head upward to avoid dust falling out from the dust container before switching off.
4. Empty the container before doing any more vacuuming and clean it before putting it away.
5. Return the handheld vacuum cleaner to the upright unit.


MAINTENANCE & CLEANING

Empty the dust container


- Dirt and liquid in the dust container should be emptied after each use or at the time when the dust exceeds the maximum dust marking.
 - Always switch off the vacuum cleaner before cleaning.
1. Hold the vacuum cleaner vertically with the air-intake (nozzle end) pointing downward to avoid spillage. Press the release button on the top of the vacuum cleaner and release the dust container over a rubbish bin and remove the filter bracket from the dust container.

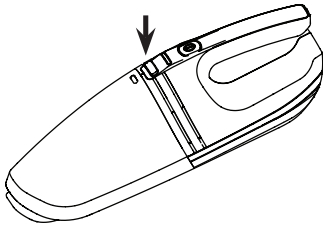


2. Remove the filters by holding the two lips on the outer filter and pull them out from the dust container.

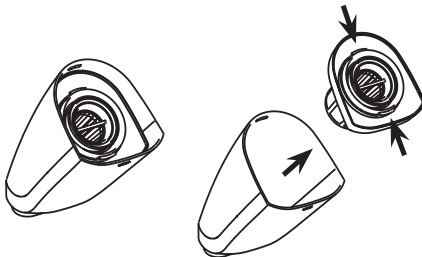


3. Empty the contents of the dust container into the rubbish bin.

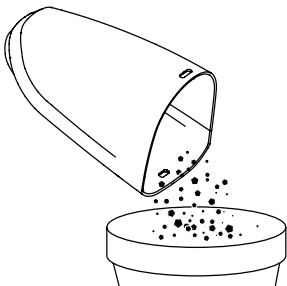

4. Remove the filters and wash with water. Dry it before re-installing it.
NOTE: Do not clean the vacuum cleaner with paint thinner or chemical solutions as this will damage the vacuum cleaner.

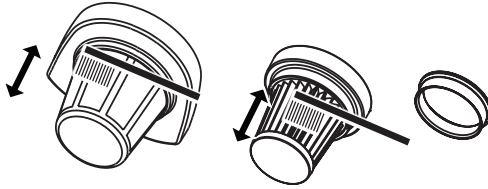

5. Fit the inner and outer filter into the dust container. Make sure you have dried the inside of the dust container.

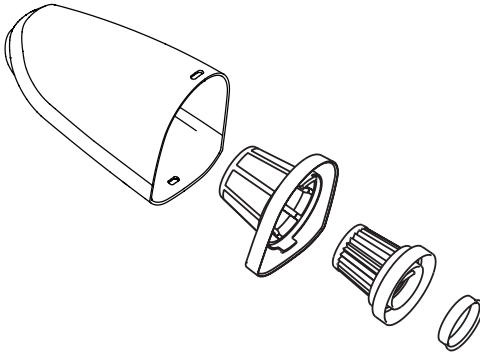


6. Re-install the dust container.

Caution:

- Do not vacuum up large objects such as tissue papers. This will cause a blockage and lower the suction power.
- Never vacuum up flammable substances and do not vacuum up ashes until they are cold.
- Always dispose of the dust and clean the filter frequently, otherwise the dust will damage the motor.

Maintenance for Motorized brush

Carry out the maintenance if any waste threads or hair gets tangled in the brush. Press the motorized brush release button to detach the motorized brush from the upright unit.

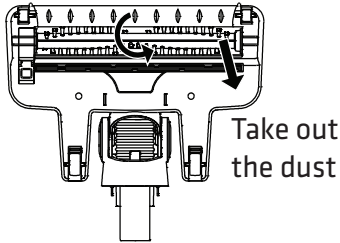


Regular Maintenance


Slowly rotate the brush manually and remove any foreign objects tangled around the brush.

Maintenance when the motorized brush cannot be manually rotated

1. Slide the brush lock.

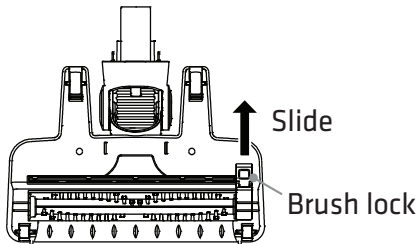


2. Rotate to open the brush door.

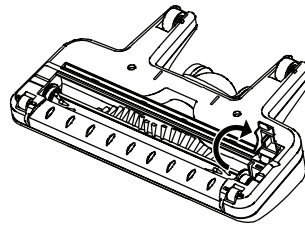


3. Take out the rotating brush.


Lift up the right side of the rotating brush, then take out the rotating brush.

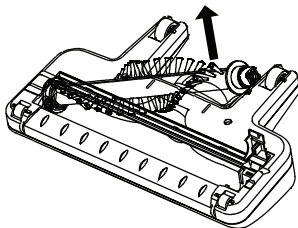


4. Remove the hair on the rotating brush.

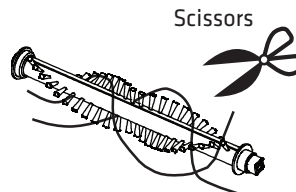


5. Re-install the rotating brush back into the motorized brush

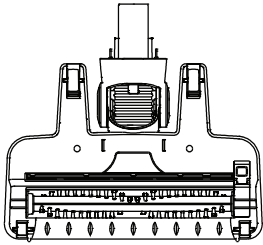

PRODUCT OVERVIEW (for Bed Cleaner)

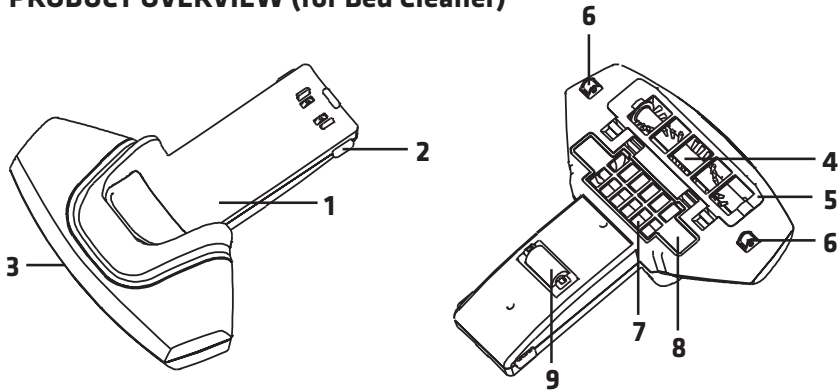


1. Bed cleaner body
2. Handheld unit release buttons (2 buttons at two sides)
3. Dust spotting LED windows
4. Rotating brush (UV triggered device)
5. Rotating brush door
6. Front wheels (two sides)
7. UV lamp tube
8. UV lamp tube door
9. Rear wheel (UV triggered device)

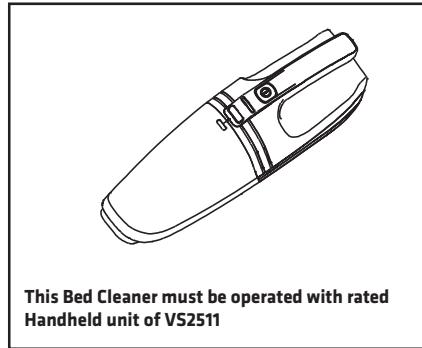


HOW TO USE THE UV BED CLEANER


1. Fit the Handheld unit onto the UV bed cleaner.

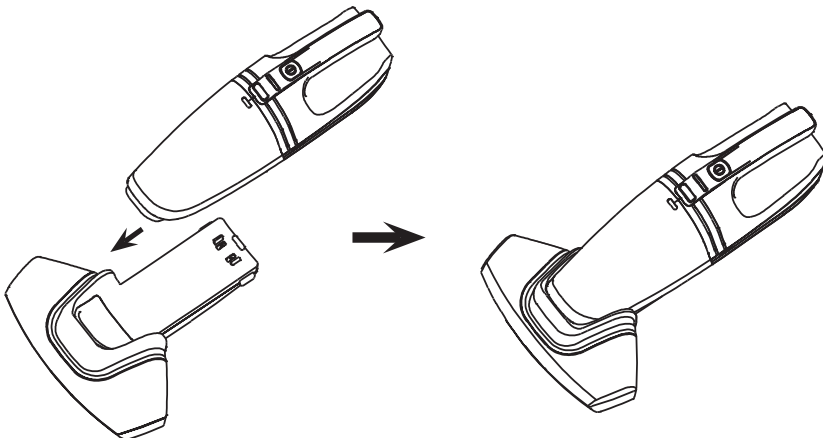

2. Press the Power Button on the Handheld unit to power on.

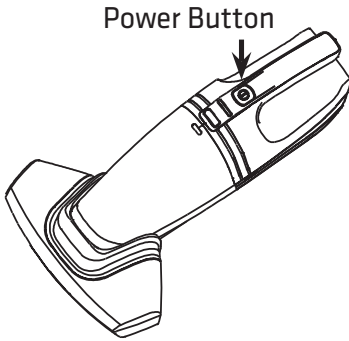


3. Slide on the surface of your bed to clean.

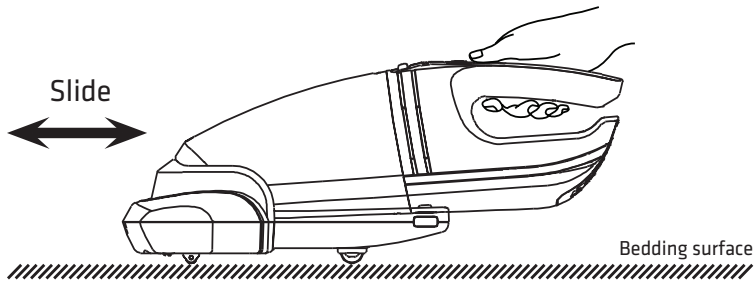


4. How to detach UV Bed Cleaner from Handheld unit.

Hold the Handheld unit tightly with one hand, then press the two Handheld unit release buttons with your other hand at the same time to unlock.

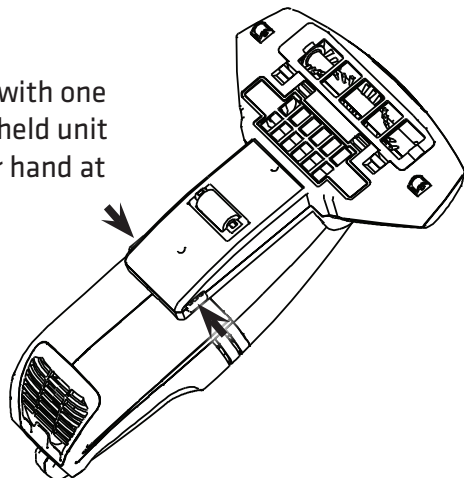


NOTE

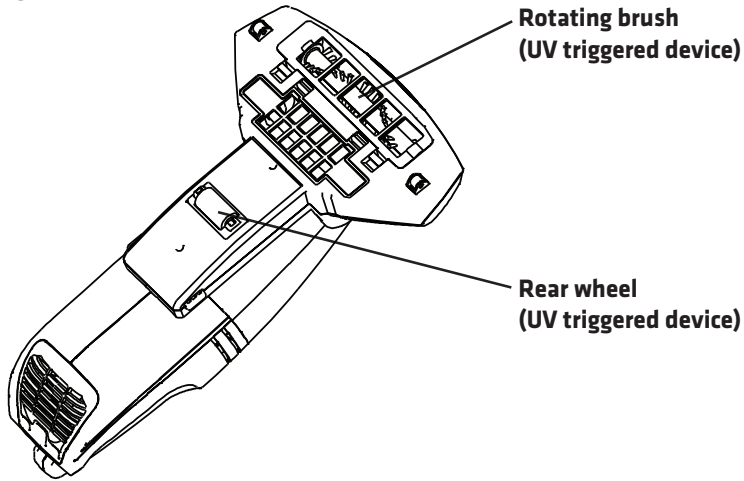

There are totally two triggered devices at the rear wheel of UV bed cleaner and rotating brush. UV lamp will be power on only when all these two triggered devices are actuated.



MAINTENANCE / CLEANING

1. How to clean the UV Bed Cleaner.

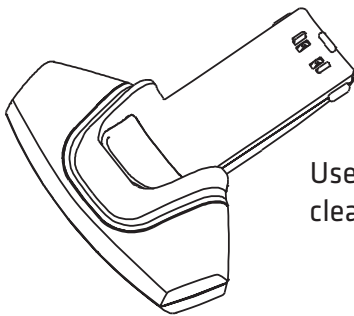


Use a wet towel or tissue to wipe the cleaner, then let it dry before use.

2. How to clean the rotating brush.

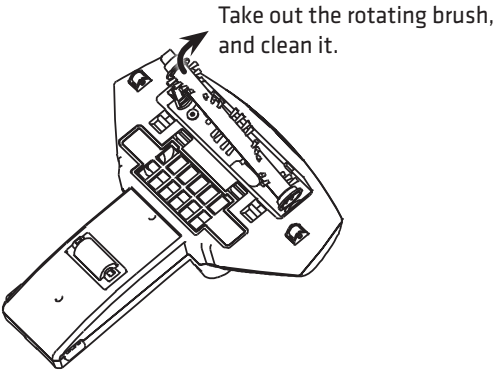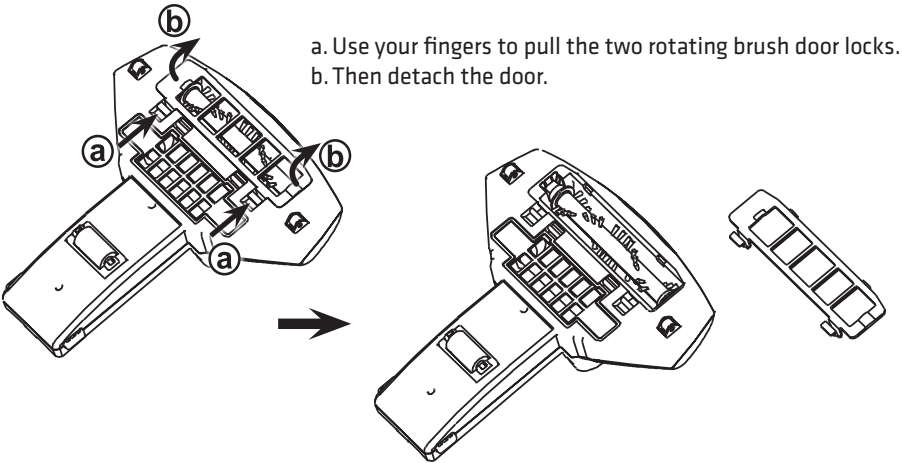


Remove the hair on the rotating brush.


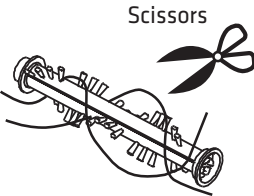


Re-assemble the rotating brush and brush door to the UV Bed Cleaner after cleaning.

3. How to clean or exchange the UV lamp tube.

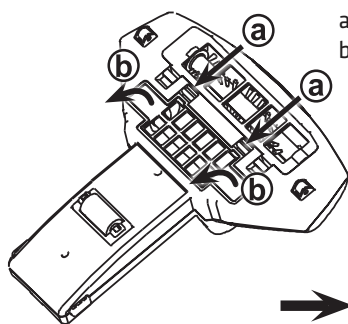

- a. Use your fingers to pull the two UV lamp tube door locks.
- b. Then detach the door.

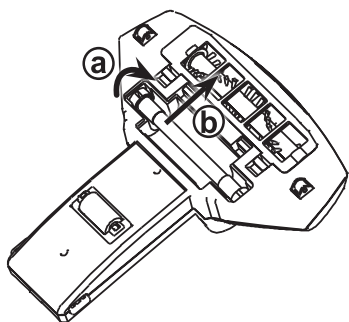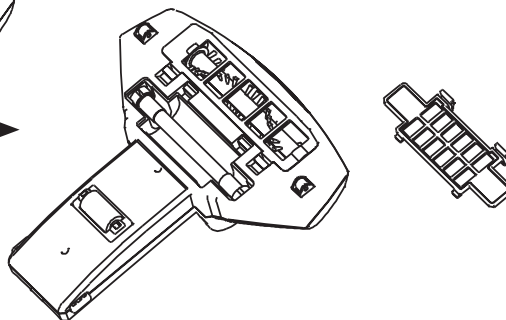

- a. Use your fingers to hold the UV lamp tube and then rotate it by 90° clockwise or anti-clockwise.
- b. Then take out the UV lamp tube.

After cleaning or exchanging the UV lamp tube, re-assemble the UV lamp tube and the door to the UV Bed Cleaner.

TROUBLESHOOTING

If a problem does occur, it may often be due to something very minor. The following table contains various tips.

Problem	Possible cause(s)	Solution(s)
Bed cleaner not working.	Wheel protection switch is away from bedding surface.	Place the product on bedding surface and power on, observe whether there is any sound from the rotating brush, or light from the UV lamp tube. *UV is harmful to eyes, you must not look at the UV light directly.
	Bad contact between the handheld unit and the bed cleaner.	Detach the handheld unit from the bed cleaner and re-assemble, ensure they are attached probably.
Rotating brush not running.	Rotating brush is trapped.	Clean the rotating brush as explained in this manual.
UV lamp tube not functioning.	UV lamp tube is not installed probably.	Detach the UV lamp tube and re-install.
	UV lamp has reached the end of its product life.	Contact technical support to seek spare part.
	Either of two triggered devices is not actuated	Place the product completely on bedding surface. Make sure the rear wheel and rotating brush are touched the bedding surface.

PRODUCT SPECIFICATIONS

Model : VS2511

Battery : 25.2V Li-ion

Adaptor :

Input: AC 100-240V~ 50/60Hz

Output: DC 32V=== 400mA

Model : UV Bed Cleaner

Compatible VC model : Handheld unit of 25.2V VS2511

UV lamp power : 4W

Input Voltage : 25.2V

DISPOSAL OF THE APPLIANCE

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent material to be recovered to obtain significant saving in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



安全使用注意事項

當使用吸塵機時，必須留意以下安全事項：

使用本產品前請閱讀所有使用說明。

警示：為防止火警、觸電或受傷：

1. 請不要用吸塵機吸洗滌劑、煤油、玻璃水、火柴等物品。
2. 請不要用吸塵機吸水泥、石膏粉、牆粉等微小顆粒，或者玩具紙團等較大物體，否則會引起吸塵機堵塞、馬達損壞等故障。
3. 請不要讓吸塵機靠近火源及其它高溫地方。
4. 使用吸塵機前，請注意要裝好HEPA過濾網和吸扒。
5. 請不要將水或其他液體傾倒或濺入機器中，以免引起短路燒壞機器。
6. 在使用新電池前或長期存放後第一次使用電池，請將電池充滿電。長時間存放不使用本機時，應每三個月進行一次充放電。
7. 當您的吸塵機充滿電、需要清潔或維修時，請拔下插頭，插拔電源線時請握住插頭，不要拉扯電線。
8. 清潔吸塵機時請使用乾布，不要用汽油、天拿水等否則會損毀機體。
9. 如電源線破損，切勿使用電接頭。
10. 使用後請關掉電源。
11. 電接頭只適用於100-240V~，50/60Hz電源，切勿使用任何其他電源。
12. 只可使用隨機附送的充電座。
13. 切勿吸水或任何其他液體；切勿吸易燃物質；煙灰必須完全冷卻才可吸取。
14. 切勿將吸塵機機身、電源線或電插頭浸在水或其他液體中。
15. 請勿使用非製造商建議的附件或配件。
16. 在兒童附近使用本裝置時必須小心監督，不可讓兒童操作本裝置。
17. 任何身體、感官或精神障礙人士(包括兒童)或缺乏經驗與知識的使用者，除非經由照顧其人身安全的人士督導或指示操作，否則不宜使用本裝置。

安全使用注意事項

18. 請小心監督兒童，確保他們不會把玩本裝置。
19. 本裝置乃家用電器，除本說明書列明的用途外，切勿作任何其他用途。
20. 本裝置不含任何使用者可自行修理的零件。如擅自拆解或維修，保養即告失效。
21. 用後請擺放在不受陽光直接照射的地方，拆除所有配件，請勿讓兒童觸及。
22. 警告：吸塵機只可使用隨機附送的充電座。充電期間接頭會微熱，此乃正常。
23. 警告：吸塵期間切勿堵塞排氣口。
24. 警告：先關掉吸塵機，才可再充電。

重要說明 — 使用本產品前請先細閱

本吸塵機透過強力馬達以高壓吸入空氣。為確保高效性能及操作安全，必須定期清潔吸管及過濾網，以及在集塵箱滿溢前和每次使用後傾清塵垢。



過濾網不潔和集塵箱未傾清會影響氣流，導致吸塵機性能降低。

長期疏忽清潔會令氣流堵塞，可能導致吸塵機損壞至無法修復。如用戶不按本說明書所述清潔過濾網、吸管及集塵箱而導致吸塵機損壞，本廠恕不提供保養。


請保留使用說明

安全使用注意事項 (床褥吸扒配件)

1. 請檢查床褥吸扒上的銘牌，須與專用的手提式吸塵器使用。
2. 此床褥吸扒僅供家庭使用，請勿在戶外地方使用本產品，請勿將本產品用於其他用途上。
3. 請勿將床褥吸扒浸在水中或其他液體中，避免有觸電的危險。
4. 請勿將床褥吸扒放在高溫的地方，應遠離暖風機或氣體/電爐等熱源地方。
5. 若發現滾刷被異物堵塞，使用前請先清除堵塞物。
6. 若對產品正常操作有任何疑問（如發現異常聲音、氣味、冒煙），或發現產品有損壞，請勿繼續使用本產品。關機並拔下電源插頭，然後諮詢您的經銷商。
7. 沒有按照產品製造商的指示使用本產品及其配件可能會造成傷害。
8. 請勿濕手觸摸本產品。
9. 在操作過程中，請勿將產品指向眼睛、耳朵或嘴巴部位。
10. 請勿直接注視已開啟的 UV 紫光外燈，否則會損害視力。

產品部件概述

直立式吸塵器：

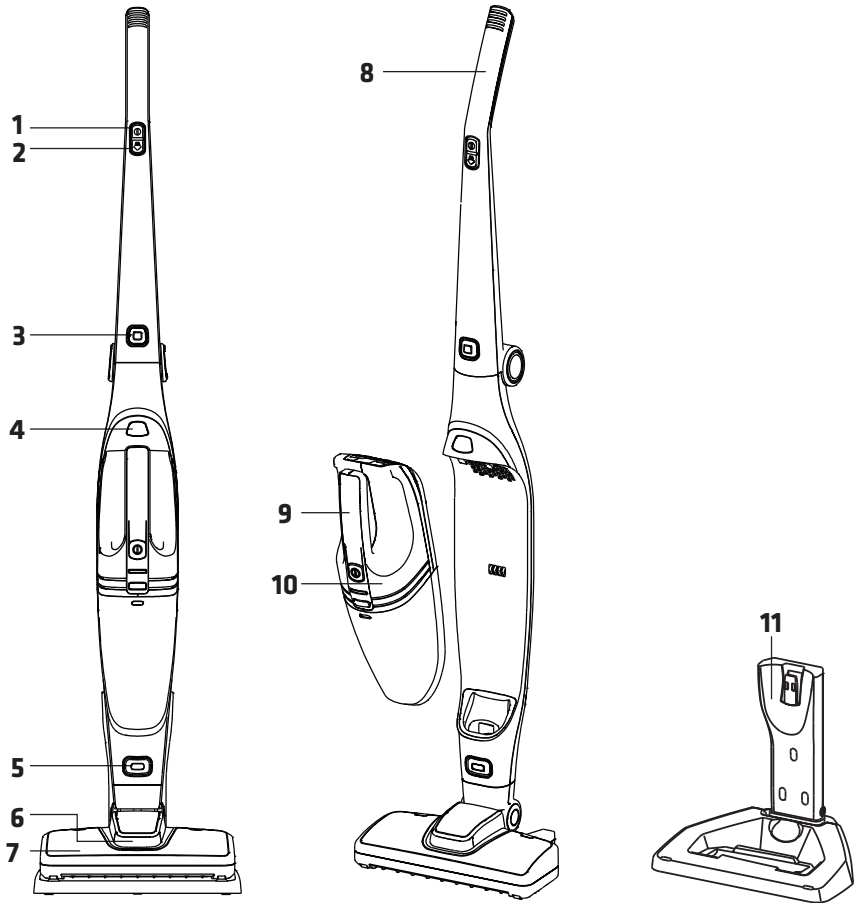


1. 開關按鈕
2. 主機速度調節開關
3. 摺疊把手按鈕
4. 手提式吸塵器釋放按鈕
5. 電動滾刷釋放按鈕
6. LED 照明燈
7. 電動滾刷

8. 摺疊把手
9. 手提式把手
10. 手提式吸塵器
11. 充電座

產品部件概述

手提式吸塵器：

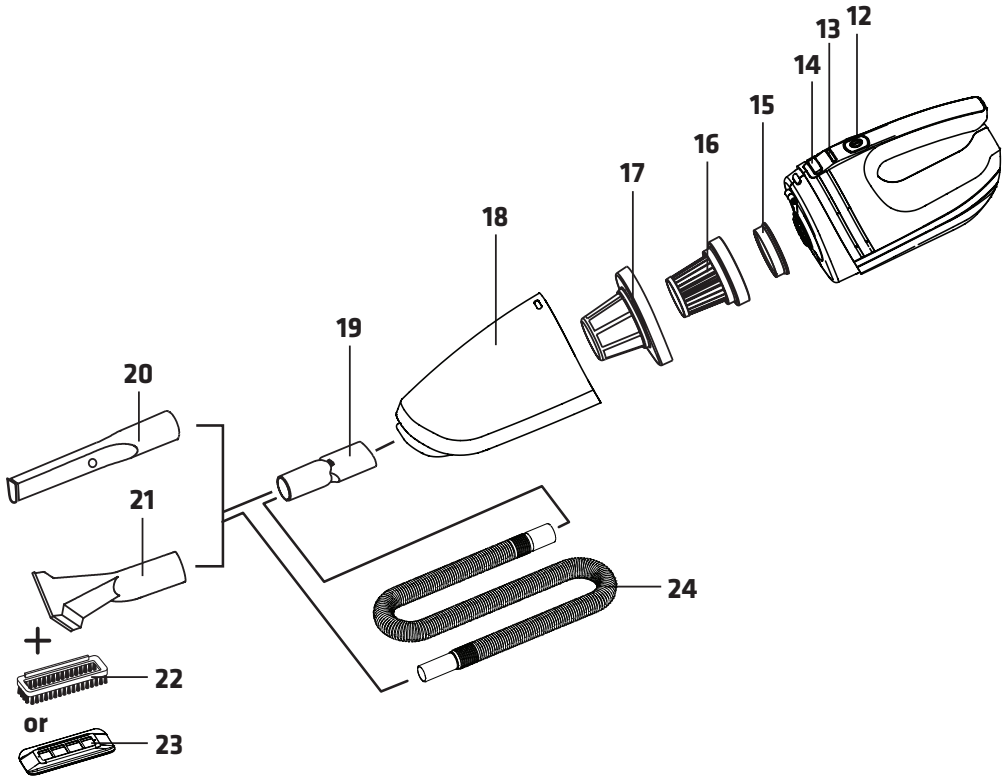

- 12. 開關按鈕
- 13. 電量 / 充電指示燈
- 14. 塵杯釋放按鈕
- 15. 密封圈
- 16. HEPA濾網
- 17. 外部濾網
- 18. 塵杯
- 19. 配件連接器

- 20. 特長縫隙吸嘴
- 21. 毛刷/傢俱吸嘴接頭
- 22. 毛刷
- 23. 傢俱吸嘴
- 24. 延伸軟管

配件介紹：

配件連接器：

將配件連接器 [19] 插入手提式吸塵器塵杯吸嘴部分。用作不同配件的連接頭。要從塵杯中取出連接器，只需將其向外拉出即可。

特長縫隙吸嘴：

連接特長縫隙吸嘴 [20] 用於清潔空間偏少的地方及難以接觸到的粉塵/毛髮。例如房間的角落，地面淺淺的凹槽。

毛刷：

將毛刷配件 [22] 放在“毛刷/ 傢俱吸嘴接頭 [21]”前端，並插入接頭前端的坑槽，然後向中間位置滑動。

毛刷可以使用於清除桌子、毛髮、布質梳發及地毯上的纖維等等。

傢俱吸嘴：

將傢俱吸嘴 [23] 放在“毛刷/ 傢俱吸嘴接頭 [21]”前端，並插入接頭前端的坑槽，然後向中間位置滑動。

傢俱吸嘴可以使用於清除紡織品、窗簾、床上用品和枕頭布上之塵埃。


延伸軟管：

將延伸軟管 [24] 兩端連接到配件及配件連接器 [19] 上。延伸軟管有助於在一些狹窄和隱藏的區域進行清潔。


產品組裝

摺疊把手


如需摺曲把手，請按下摺疊把手按鈕。

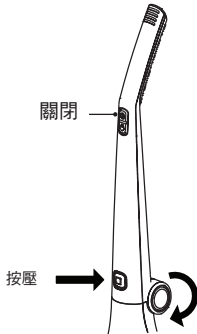

將把手扳回原本直立位置後，把手將自動鎖緊。

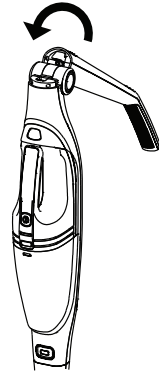


充電座組裝

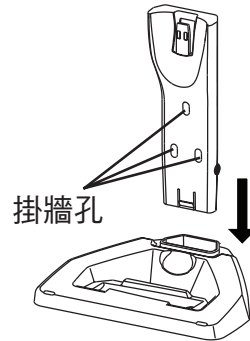


- 充電座組裝後務必放於平坦地面，金屬螺絲與塑膠錨栓可將充電座固定在靠牆位置
- 金屬螺絲與塑膠錨栓放在充電座底部，在牆面鑽孔放上塑膠錨栓，再以金屬螺絲固定，即可將充電座固定在靠牆位置

可拆式電動滾刷

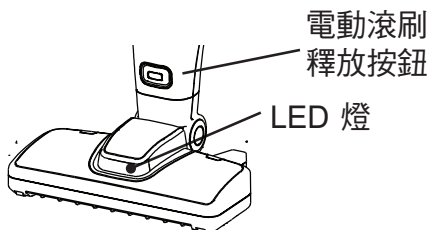

電動滾刷

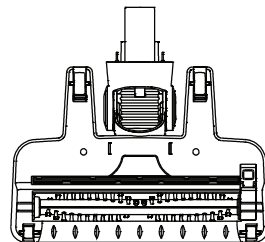

產品充電


吸塵器充電

以下情況請將電池充電：

- 初次使用產品時
- 長時間未使用產品時
- 吸塵器電量即將耗盡，電量 / 充電指示燈將閃爍紅光。


1. 將手提式吸塵器插入直立式吸塵器

確保直立式吸塵器已關閉。避免手提式吸塵器和直立式吸塵器之間出現障礙物。

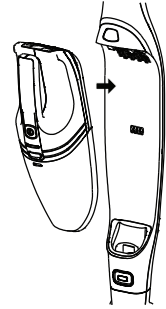


2. 將直立式吸塵器放到充電座上

- 請務必將充電座置於平坦穩固的地面上。
- 將直立式吸塵器放到充電座上。
- 若未以正確方式將直立式吸塵器放到充電座上，將無法開始充電。
- 避免充電座和吸塵器之間積聚灰塵，如有需要，應清理充電接頭。
- 充電時請小心，以避免電源線絆倒吸塵器。

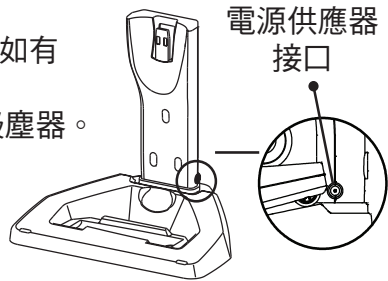

3. 將電源線插到插座上

- 充電提示燈將發出紅光，表示吸塵器正在充電中。
附註：電池充電完畢後，充電提示燈將變成藍色。
提示：吸塵器在使用前，建議充電 6 小時。
- 在充電時，充電座和吸塵器發熱純屬正常現象。
- 即使開關按鈕開啟，若把吸塵器放回充電座充電，吸塵器會自動停止工作。
- 充電時，吸塵器有斷電保護功能，此時即使按下開關按鈕，吸塵器也無法啟動。

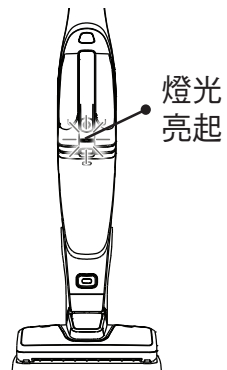

產品充電

電量 / 充電指示燈

狀態	LED 顏色
電源開啟	藍色
電量低	藍光閃爍
電量耗盡	紅光閃爍
充電中	紅色
充電完畢	藍色
電池故障	紅光與藍光交錯閃爍

操作方式

使用前請確認電池已充滿。

直立式吸塵器操作方式

1. 按下開關啟動直立式吸塵器。
2. 使用時，請按下主機速度調節開關，以選擇“快速”或“節能”操作模式，在“快速”模式下，產品會處於最大的吸力。而在“節能”模式下，產品會處於相對低噪音及較長之操作時間。
3. 操作時，地刷上的 LED 照明燈將亮起。
4. 產品直立於地上停放時，請務必關閉吸塵器，因為運轉的刷毛可能損壞地板或地毯。
5. 產品不使用時，建議靠牆直立存放，並防止孩童靠近玩耍，以免產品傾倒受損。


手提式吸塵器操作方式

1. 按下手提式吸塵器釋放按鈕，將手提式吸塵器從直立式吸塵器取下。按下開關以啟動吸塵器。手提式吸塵器將開始運轉。
2. 從任何方向吸塵直到乾淨為止。
3. 按下開關以關閉吸塵器。稍微將吸塵器頭向上舉，避免灰塵在關閉前從塵杯掉出。
4. 吸塵前請將塵杯清空，將吸塵器收起來之前，請將吸塵器清乾淨。
5. 將手提式吸塵器裝回直立式吸塵器。


清潔與保養

清空塵杯


- 在每次使用後或灰塵超出最大集塵量時，應清空塵杯中的灰塵。
 - 清潔前請務必將吸塵器關閉。
1. 將吸塵器垂直擺放，進氣口（吸嘴端）指向下方，避免灰塵灑落。請按下吸塵器頂端的釋放按鈕，在垃圾桶上方解開塵杯，並從塵杯拆下濾網托架。

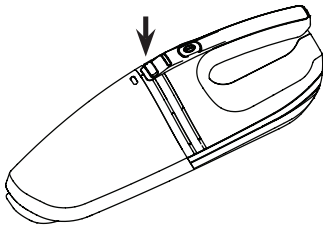

2. 握住外部濾網上的兩個唇部，從塵杯拉出濾網。

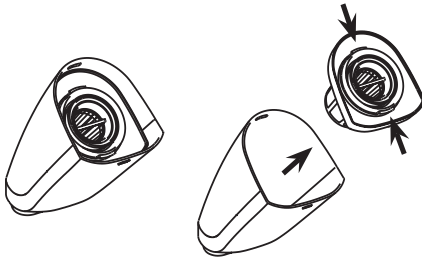


3. 將塵杯中的灰塵倒入垃圾桶。

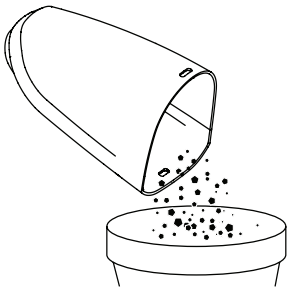


清潔與保養

4. 塵杯與濾網可以用水清洗乾淨。在裝回去之前，請將塵杯及濾網風乾。
附註：不可使用含有磨蝕性或腐蝕性的清潔劑清潔吸塵器，否則吸塵器將受損。

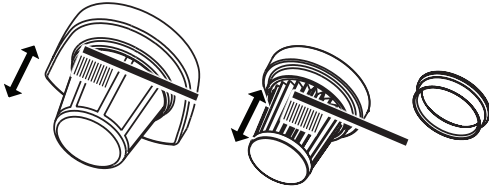

5. 請將HEPA濾網裝回外部濾網再裝回塵杯中。請務必將塵杯內側風乾。

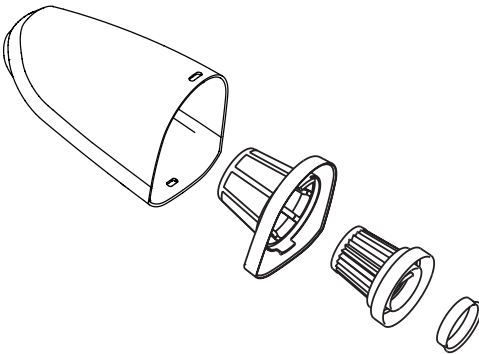

6. 將塵杯裝回。


警告：

- 請勿吸取大型物品，例如衛生紙，否則將堵住吸塵器，導致吸力減弱。
- 請勿吸取易燃物，在灰燼冷卻前，請勿吸取灰燼。
- 請務必常常清空灰塵和清潔濾網，否則灰塵將導致馬達受損。

清潔與保養

電動滾刷維護

若線頭或頭髮在滾刷中打結，請進行清理。按下電動滾刷釋放按鈕，將電動滾刷從直立式吸塵器拆下。

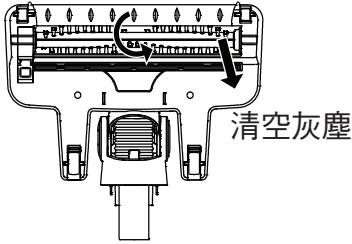


定期維護


用手慢慢轉動滾刷，並清除纏繞在滾刷上的異物。

當無法用手轉動滾刷時，應將滾刷拆下並進行清理。

1. 滑動滾刷鎖。

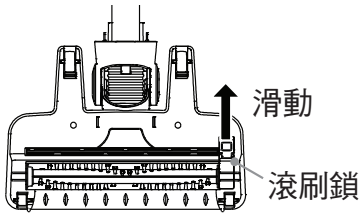


2. 轉動以開啟滾刷蓋。

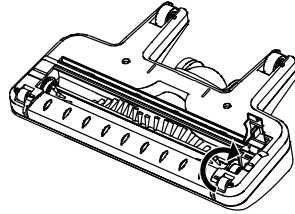


3. 拆下滾刷。


舉起滾刷右側並拆下滾刷。

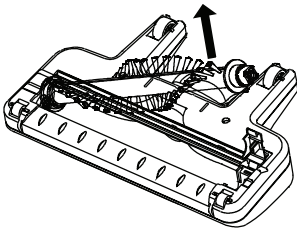

4. 清除滾刷上的頭髮。

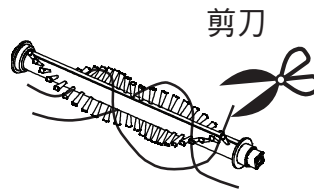


5. 將滾刷裝回電動滾刷。

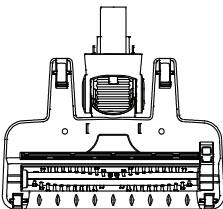

產品部件概述

床褥吸扒：

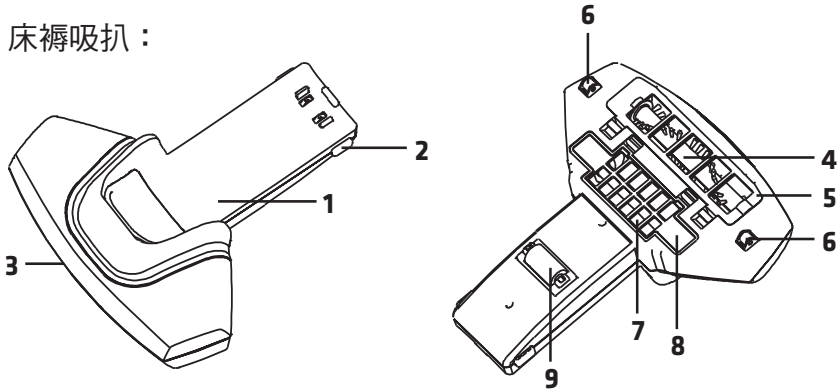


1. 床褥吸扒
2. 手提式吸塵器釋放按鈕
(旁邊兩個按鈕)
3. LED 照明燈
4. 滾刷 (UV 紫外光啟動器)
5. 滾刷門
6. 前滾輪
7. UV 紫外光燈管
8. UV 紫外光燈管門
9. 後滾輪 (UV 紫外光啟動器)




產品使用

如何使用床褥吸扒配件


1. 將手提式吸塵器裝到清潔床褥吸扒配件

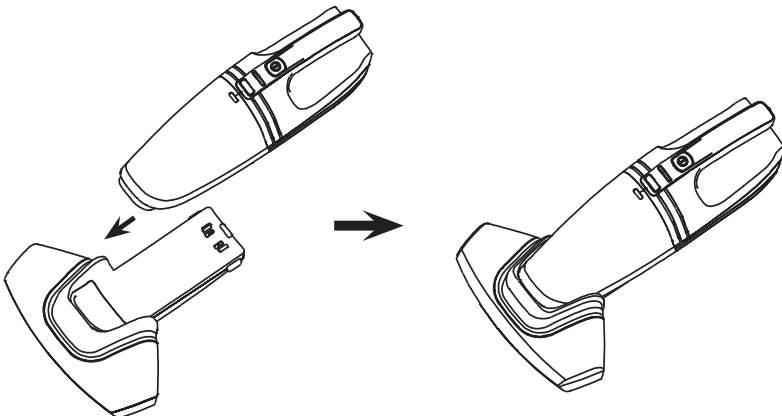

2. 按下手提式吸塵器上的開關按鈕啟動吸塵器

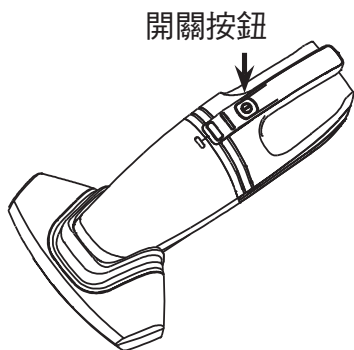


3. 從不同方法移動吸塵器清潔床褥表面

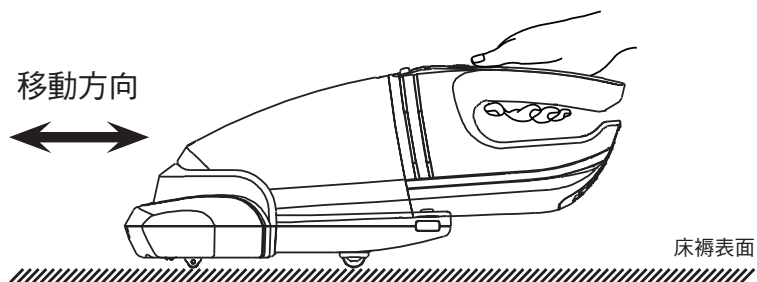


4. 如何從手提式吸塵器拆下床褥吸扒

按住手提吸塵器，同時按下床褥吸扒兩旁的手提式吸塵器釋放按鈕。

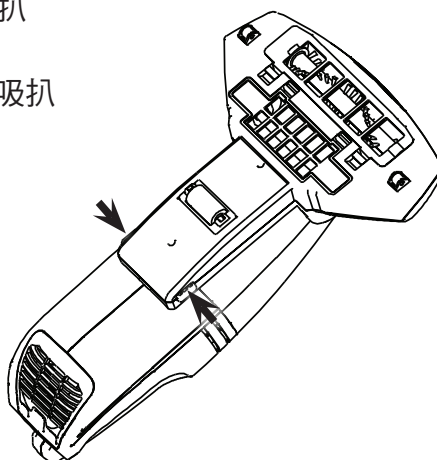


注意

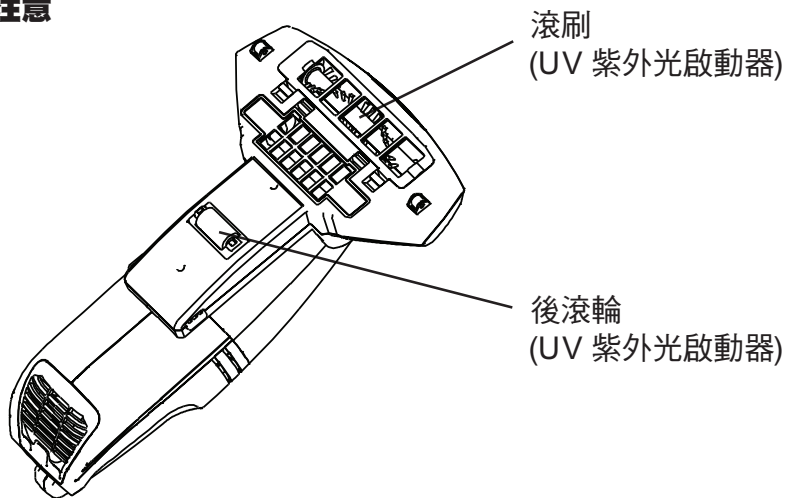

床褥吸扒共有兩個 UV 紫外光啟動器，分別在後滾輪位置和滾刷位置，只有當這兩個啟動器**同時啟動**時，UV 紫外光燈才會開啟。



清潔與保養

1. 如何清潔床褥吸扒

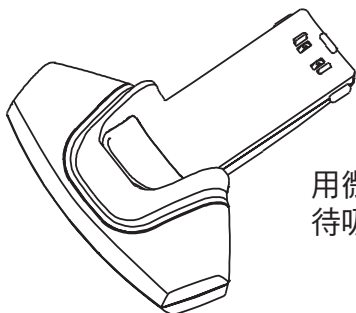


用微濕的毛巾或紙巾擦拭床褥吸扒，然後待吸扒完全乾透後才可使用。

2. 如何清潔滾刷

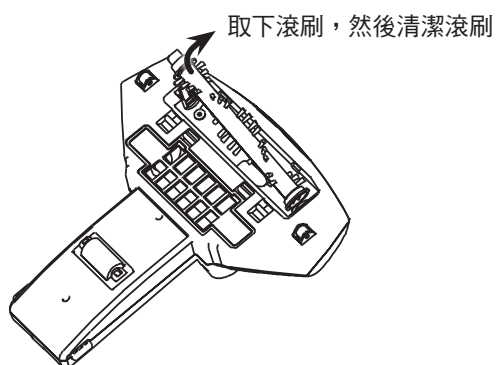
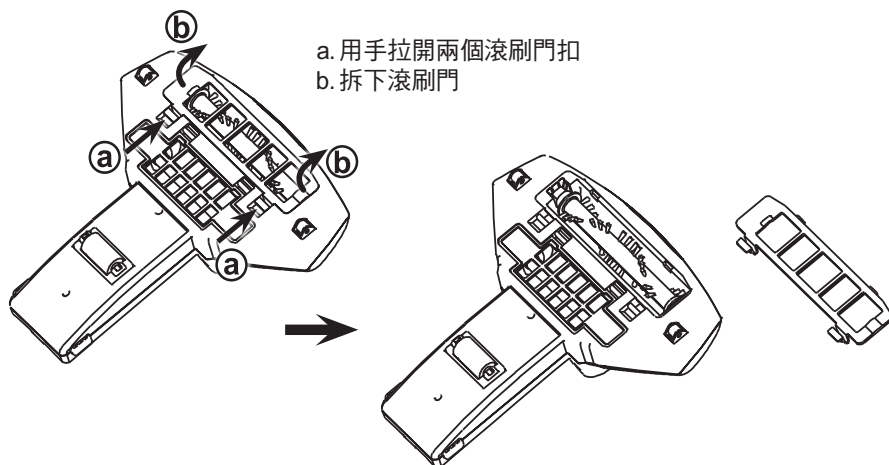


清除滾刷上的頭髮

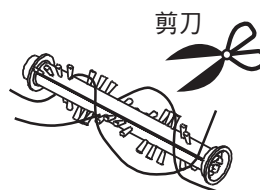

清潔完畢後，將滾刷和滾刷門重新裝回床褥吸扒上。

3. 如何清潔或更換 UV 紫外光燈管

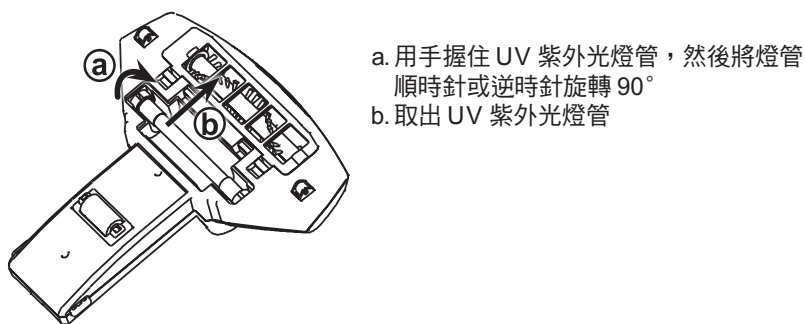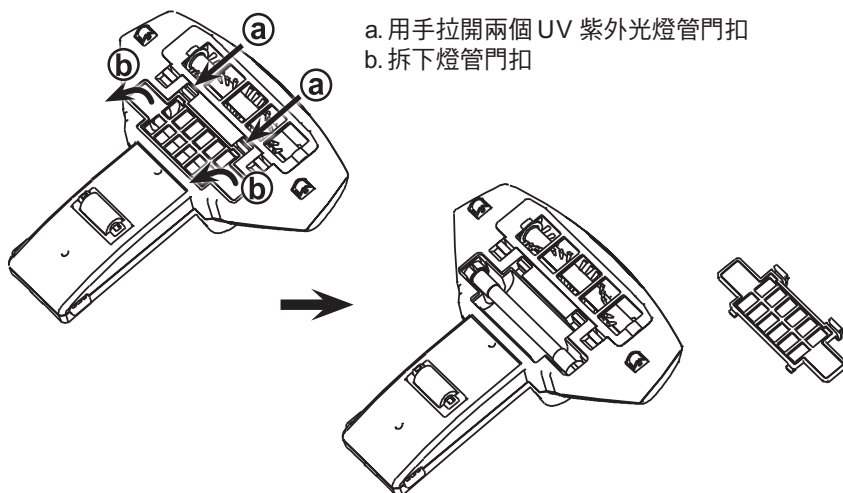

清潔完畢或更換燈管後，將 UV 紫外光燈管和燈管門重新裝回床褥吸扒上。

故障排除

若果產品有故障發生，這可能是由於一些小問題引致。可先參考以下表格中的小貼士。

故障	可能成因	解決方法
床褥吸扒不能啟動。	滾輪安全裝置與床褥表面距離太遠。	將吸塵器放在床褥表面上並開啟吸塵器，觀察滾刷有否發出運作聲音，或UV 紫外光燈管有否亮起。 *注意: UV 紫外光燈對眼睛有害，請避免直接注視 UV 紫外光燈。
	手提式吸塵器與床褥吸扒接觸不良。	將手提吸塵器從床褥吸扒上拆下，然後再重新安裝，確保兩者正確地連接。
滾刷不能轉動。	滾刷被異物纏繞。	根據說明書上指示清潔滾刷。
UV 紫外光燈管不能運作。	沒有正確地安裝UV 紫外光燈管。	拆下UV 紫外光燈管，然後重新安裝。
	UV 紫外光燈管效能已消耗完。	聯絡技術人員/維修中心查詢配件狀況。
	兩個啟動器的其中一個沒有被啟動	將吸塵器完全地放置在床褥表面上，確保後滾輪位置和滾刷位置能夠完全接觸到床褥表面。

產品規格

機型：VS2511

電池：25.2V 鋰電池

適配器：

輸入：AC 100-240V~ 50/60Hz

輸出：DC 32V === 400mA

機型：UV床褥吸扒

相容吸塵機型：VS2511 25.2V 手提吸塵機

UV燈功率：4W

輸入：25.2V

產品棄置

本產品壽命結束後，不可當作都市廢物棄置，必須送到當地特設的廢物分類回收中心或提供相關服務的代理。獨立處置家居電器可避免因為處理不當而危害環境和健康，並可回收組成物料，從而節省能源及資源。為提醒用戶獨立棄置家居電器，本產品印有劃上交叉的有輪垃圾桶圖符。



Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies

All rights reserved - <http://www.whirlpool.com.hk>

註冊商標/惠而浦集團的TM商標

版權所有 翻印必究 - <http://www.whirlpool.com.hk>



Whirlpool