



使用説明書

Gebrauchsanweisung

Instructions for use

Mode d'emploi

Gebruiksaanwijzing

Istruzioni per l'uso



Brugsanvisning

Bruksanvisning

Käyttöohje

Manual de utilização

Instrucciones para el uso



Οδηγίες χρήσης

Instrukcje użytkowania

Használati utasítás

Инструкция за използване

הוראות שימוש



Návod k použití

Návod na použitie

Instrucțiuni de utilizare

Инструкции по эксплуатации

تعليمات وكيفية الاستعمال

www.whirlpool.com



SENSING THE DIFFERENCE



INSTALLATION



 
PRIOR TO CONNECTING



CHECK THAT THE VOLTAGE on the rating plate corresponds to the voltage in your home.

DO NOT REMOVE THE MICROWAVE INLET PROTECTION PLATES located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

PLACE THE OVEN ON A STABLE, EVEN SURFACE that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.

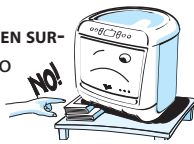

POSITION THE OVEN AT A DISTANCE from other heating sources. For sufficient ventilation there must be a space of at least 30 cm above the oven. The appliance must be placed against a wall, ensure that the space underneath, above and both sides of the oven is empty to allow for proper airflow. The microwave oven shall not be placed in a cabinet.

ENSURE THAT THE APPLIANCE IS NOT DAMAGED. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.



DO NOT OPERATE THIS APPLIANCE if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

DO NOT USE EXTENSION CORD:



 
IF THE POWER SUPPLY CORD IS TOO SHORT, have a qualified electrician or serviceman install an outlet near the appliance.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

AFTER CONNECTING

THE OVEN CAN BE OPERATED ONLY if the oven door is firmly closed.

POOR TELEVISION RECEPTION and radio interference may result if the oven is located close to a TV, radio or aerial.

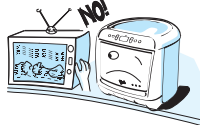

THE EARTHING OF THIS APPLIANCE is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.



IMPORTANT SAFETY INSTRUCTIONS



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE



DO NOT HEAT, OR USE FLAMMABLE MATERIALS in or near the oven. Fumes can create a fire hazard or explosion.



DO NOT USE YOUR MICROWAVE oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.



IF MATERIAL INSIDE / OUTSIDE THE OVEN SHOULD IGNITE OR SMOKE IS OBSERVED, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.



DO NOT OVER-COOK FOOD. Fire could result.



DO NOT LEAVE THE OVEN UNATTENDED, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods. Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!



 
DO NOT USE corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.



DO NOT HANG OR PLACE heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.



ONLY ALLOW CHILDREN to use the appliance without adult supervision after adequate instructions have been given, so that the child is able to use the appliance in a safe way and understands the hazards of improper use. Children should be supervised when using other heat sources (if available) separately or in combination with microwaves due to the high temperatures generated.

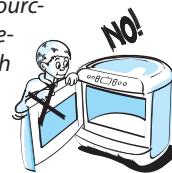

THIS APPLIANCE IS NOT INTENDED FOR use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



CHILDREN SHOULD BE SUPERVISED to ensure that they do not play with the appliance.



DO NOT USE YOUR MICROWAVE oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



THE DOOR SEALS AND THE DOOR SEAL AREAS must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.



THE APPLIANCES ARE NOT INTENDED to be operated by means of an external timer or separate remote-control system.

EGGS

DO NOT USE YOUR MICROWAVE oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.





PRECAUTIONS



GENERAL

THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY!

 
THE APPLIANCE SHOULD NOT BE OPERATED without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

THE VENTILATION OPENINGS on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.

IF YOU PRACTICE OPERATING the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

DO NOT STORE or use this appliance outdoors.

DO NOT USE this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

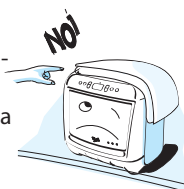

DO NOT USE THE CAVITY for any storage purposes.

REMOVE WIRE TWIST-TIES from paper or plastic bags before placing bag in the oven.



DEEP-FRYING

DO NOT USE YOUR MICROWAVE oven for deep-frying, because the oil temperature cannot be controlled.



USE HOT PADS OR OVEN MITTS to prevent burns, when touching containers, oven parts, and pan after cooking. Accessible parts may become hot during use, young children should be kept away.

LIQUIDS

E.G. BEVERAGES OR WATER. Overheating the liquid beyond boiling point can occur without evidence of bubbling.

This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

AFTER HEATING BABY FOOD or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.



This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Ensure the Lid and the Teat is removed before heating!



ACCESSORIES



GENERAL

THERE ARE a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

ENSURE THAT THE UTENSILS YOU USE are oven proof and allow microwaves to pass through them before cooking.



WHEN YOU PUT FOOD AND ACCESSORIES in the microwave oven, ensure that they do not come in contact with the interior of the oven.

 
This is especially important with accessories made of metal or metal parts.

IF ACCESSORIES CONTAINING METAL comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

ALWAYS ENSURE that the turntable is able to turn freely before starting the oven. If the turntable isn't able to turn freely you should use a smaller vessel.

TURNTABLE SUPPORT

USE THE TURNTABLE SUPPORT under the Glass turntable. Never put any other utensils on the turntable support.



🔧 Fit the turntable support in the oven.

GLASS TURNTABLE

USE THE GLASS TURNTABLE with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.



🔧 Place the Glass turntable on the turntable support.

CRISP HANDLE (only available in specific models)

USE THE SUPPLIED SPECIAL CRISP HANDLE to remove the hot Crisp plate from the oven.



CRISP-PLATE (only available in specific models)

PLACE THE FOOD DIRECTLY ON THE CRISP-PLATE.

Always use the Glass turntable as support when using the Crisp-plate.

 
DO NOT PLACE ANY UTENSILS on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

THE CRISP-PLATE may be preheated before use (max. 3 min.). Always use the Crisp function when preheating the crisp-plate.



WIRE RACK (only available in specific models)

USE THE WIRE RACK when cooking with Grill functions.



STEAMER (only available in specific models)

USE THE STEAMER WITH THE STRAINER in place for such foods as fish, vegetables and potatoes.

ALWAYS PLACE the steamer on the Glass Turntable.



MAINTENANCE & CLEANING

CLEANING IS THE ONLY MAINTENANCE normally required. It must be carried out with the microwave oven disconnected.

FAILURE TO MAINTAIN THE OVEN in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.



DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty wash-cloths, or sharp metal scrapers etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.



Do NOT SPRAY directly on the oven.

AT REGULAR INTERVALS, especially if spill overs have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.



THIS OVEN IS DESIGNED to operate with the turntable in place.



DO NOT operate the microwave oven when the turntable has been removed for cleaning.

USE A SOFT AND DAMP CLOTH with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.



DO NOT ALLOW GREASE or food particles to build up around the door.

FOR STUBBORN STAINS, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

ADDING SOME LEMON JUICE to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.



DO NOT USE STEAM CLEANING APPLIANCES when cleaning your microwave oven.



 
THE OVEN should be cleaned regularly and any food deposits removed.

THE GRILL ELEMENT does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.

If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

DISHWASHER SAFE:


TURNTABLE SUPPORT.

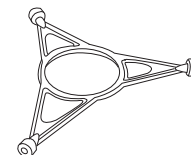

GLASS TURNTABLE.



 
CRISP HANDLE

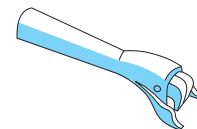

STEAMER



 
WIRE RACK

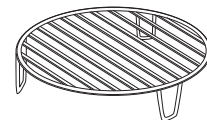

CAREFUL CLEANING:

THE CRISP-PLATE should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring cloth and a mild cleanser.

 ALWAYS let the crisp-plate cool off before cleaning.



DO NOT immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.



DO NOT USE STEEL-WOOL PADS. This will scratch the surface.

TROUBLE SHOOTING GUIDE

IF THE OVEN DOES NOT WORK, do not make a service call until you have made the following checks:

- ❧ The Turntable and turntable support is in place.
- ❧ The Plug is properly inserted in the wall socket.
- ❧ The Door is properly closed.
- ❧ Check your Fuses and ensure that there is power available.
- ❧ Check that the oven has ample ventilation.
- ❧ Wait for 10 minutes, then try to operate the oven once more.
- ❧ Open and then close the door before you try again.

THIS IS TO AVOID unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



IF THE MAINS CORD NEEDS REPLACING it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.

 
It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

DO NOT REMOVE ANY COVER.




ENVIRONMENTAL HINTS

THE PACKING BOX may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

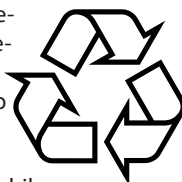

THIS APPLIANCE is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

 THE SYMBOL on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

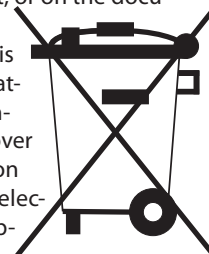

DISPOSAL must be carried out in accordance with local environmental regulations for waste disposal.

FOR MORE DETAILED INFORMATION about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

BEFORE SCRAPPING, cut off the mains cord so that the appliance cannot be connected to the mains.

IN ACCORDANCE WITH IEC 60705.

THE INTERNATIONAL ELECTROTECHNICAL COMMISSION has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	750 G	9.5 MIN	700 W	PYREX 3.220
12.3.2	475 G	5 MIN	700 W	PYREX 3.827
12.3.3	900 G	15 MIN	700 W	PYREX 3.838
13.3	500 G	11-13 MIN	DEFROST LEVEL	



Whirlpool is a registered trademark of Whirlpool, USA



安裝指引



 
接駁電線之前



請先檢查額定電壓銘牌上的電壓是否與您家中的電壓相配合。

請不要移除爐腔內壁上的微波出口防護檔板。它們可以防止油脂或食物微粒進入微波孔中。

請將微波爐放置在平坦及穩固的地方，該處必須足以承托爐具與食物器皿的重量。放置時請務必小心。

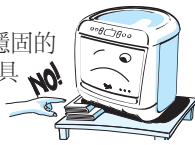


請將微波爐放置在遠離熱源的地方。為了確保通風良好，微波爐頂部必須留有30公分的空間。此爐必須背靠牆放置，確保微波爐底部，頂部及兩邊空氣流通。本爐具不應放置櫥櫃內使用。

必須確定微波爐沒有損壞。可檢查爐門關上時是否緊貼門框，以及內門的封邊是否完整無缺。將爐具內配件取出，然後用柔軟的濕布清潔爐具內部。



電線、插頭如有損壞，或爐具不能正常操作，或受到損壞或翻倒，則切勿使用微波爐。切勿將電線或插頭浸入水中，並避免接觸灼熱的表面，否則會引致觸電、火災或其他意外。

 請勿使用延長線：



如果你的電源線不夠長，請尋找合格的電工或維修人員在爐具附近安裝插頭。

 


警告：對接地插頭不正確的使用可能會導致被電擊。如果你對接地裝置的安裝不明白或者懷疑微波爐是否有正確的接地，請務必諮詢合格的電工或維修人員。

連接之後

微波爐只有在爐門緊閉之後才能操作。

如將微波爐放置在電視機、收音機或天線附近，可能會影響接收或引起干擾。

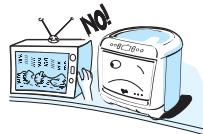

本產品必須接駁地線。

用戶如果不遵守這項規定，而導致任何人身、動物傷亡與財物損失，製造商概不負責。

由於用戶沒有遵守說明書的指示而造成的問題，製造商概不負責。



重要安全注意事項



請仔細閱讀本說明書並留做日後參考



切勿在微波爐內或其附近加熱或使用易燃物品。此等物品所釋出的氣體，可能會引起火災或爆炸。



切勿使用微波爐烘乾衣物、紙張、香料、草藥、木製品、花朵、水果或其他易燃物品，以免發生火警。



如物品在微波爐內/外起火或冒煙，請務必保持爐門關閉，然後拔下電源插頭或切斷保險絲或斷路器的電源。



切勿將食物煮得過熱，以免發生火警。



請務必經常留意爐內狀況，尤其是在使用紙制物品、塑膠或其他易燃材料所製造的器皿時。烹煮食物時，紙張可能會起火燃燒或燒焦，塑膠甚至可能會被熔解。
含大量油脂的食物或食用油容易過熱引起著火，使用時請密切留意爐具的狀況。



切勿在本產品中使用腐蝕性化學品或氣體，本爐具專為加熱食物或烹煮食物而設計，它並不適合工業或實驗用途。



切勿懸掛或放置重物於爐門上，以免損壞爐門或爐門鉸鏈。爐門把手亦不應該懸掛物品。



兒童使用本爐具前必須得到恰當的指引，才被允許不在成人的監督下使用本微波爐，且確保他們能夠安全地使用本產品，並明白不適當使用微波爐帶來的後果。如果你的微波爐具備其他熱源能與微波同時使用，會產生比較高的溫度，兒童只有在成人的監督下才能使用微波爐。
此微波爐並非設計給身體、感官或精神上能力不足，或經驗及知識不足的人士使用（包括兒童），除非監護其安全的負責人監督或指引其使用。
務必確保兒童不會把微波爐當作玩具。



請不要使用微波爐來加熱密封容器內的食物或液體，因為在開啟容器時，上升的氣壓可能會導致容器損壞或引起爆炸。



請定期檢查爐門的封條與其附近位置，確保他們沒有損壞。如果已出現損壞，切勿使用本微波爐，直至專業的維修人員維修妥當為止。



本產品並不能依靠外部計時器或獨立的遙控系統使用。

雞蛋

切勿使用微波爐烹煮或加熱連殼或不連殼的原只雞蛋，雞蛋可能因此會爆開。





注意事項



一般注意事項

本產品僅供一般家居使用!

 
爐內沒有食物時，切勿使用本微波爐，否則可能會對爐具造成損壞。

爐頂的排氣孔必須保持暢通。若爐具抽氣或排氣受阻的話，均會對爐具造成損壞，以及影響烹調效果。

假如您要學習使用的技巧，可把一杯清水放置在爐內，讓清水將微波能量吸收，以免損壞爐具。

切勿將微波爐放置在室外或在室外使用。

爐具不應存放在廚房水槽、泳池附近以及潮濕的地窖等地方。

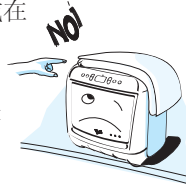

切勿將爐腔作存放對象之用。
食物在放入微波爐前，應先去除紙袋或膠袋口的金屬封口線。



油炸

切勿使用微波爐來油炸食物，因為油的溫度無法控制。



烹調之後，觸碰容器、爐具零件及烤盤前，請務必使用隔熱墊或隔熱手套。烹調時爐具可接觸到的部分會變熱，小孩切勿接近。

流質食物

用微波爐加熱的飲品或清水，即使煮得過熱，甚至超過沸點，也未必會出現沸騰的氣泡，但是液體卻可能會突然溢出造成燙傷。



為了避免發生上述情況，請遵守下列幾點：

1. 請避免使用窄頸的直身容器。
2. 將流質食物放入爐內之前，請先加以攪拌，並將湯勺留在容器內。
3. 流質食物加熱之後，請讓它留在爐內一會兒，再加以攪拌，才將容器小心拿出。

奶樽或嬰兒食物器皿中的食品或飲料加熱之後，在餵食之前，先將食物加以攪拌及測試食物的溫度，確保熱力分佈均勻，以避免燙傷或灼傷嬰兒。
請確保加熱前已將樽蓋與奶嘴取出!





一般資料

市面上出售的配件種類繁多，請在購買之前先確定是否適合本微波爐使用。

在烹煮食物之前，請確保您使用的器皿適用於微波爐，並可讓微波通過。



將食物及配件放進微波爐時，請確保它們與配件沒有直接觸及爐壁或頂部。
在使用金屬配件或帶有金屬材質的配件時，尤需加倍小心。

 
在微波爐運作時，如果配件的金屬部分誤觸微波爐的內壁或頂部的話，可能會產生火花並導致微波爐損壞。

在使用微波爐之前，請確保轉盤可自由轉動。若轉盤不能自由轉動，請使用較小的容器。

轉盤托架

請將轉盤托架放置在玻璃轉盤下。切勿在轉盤托架上放置其他器皿。

* 把轉盤托架裝入微波爐中



玻璃轉盤

各種烹調模式皆應使用玻璃轉盤。它可以避免食物碎屑及肉汁沾汙微波爐內腔。
請將玻璃轉盤置放在轉盤托架上。

 


配件



脆焗盤手柄(僅適用於特定機型)

使用附送的專用脆焗盤手柄，取出微波爐內燙熱的脆焗盤。



脆焗盤(僅適用於特定機型)

將食物直接放在脆焗盤上。使用脆焗盤時，應使用玻璃轉盤作為支撐。

 
切勿將其他器皿放在脆焗盤上，因為脆焗盤會快速變熱，並對器皿造成損毀。

在使用前，可以預熱脆焗盤（最多3分鐘）。請使用脆焗功能預熱脆焗盤。




燒烤架(僅適用於特定機型)

燒烤架用于燒烤功能。



蒸籠(僅適用於特定機型)

 使用蒸籠烹調魚類、蔬菜及馬鈴薯等食物時，請使用濾盤。
請務必將蒸籠放在「玻璃轉盤」上。

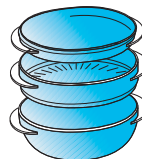

維護保養及清潔

微波爐只要勤加清潔，便是最佳的維護方法。但在清潔前，必須關掉電源。

微波爐必須保持清潔，否則可能導致爐身受到腐蝕，縮短微波爐的使用壽命，造成發生危險的可能。

i 切勿使用金屬刷清潔爐腔內壁，否則會刮花表面。
切勿使用金屬刷、腐蝕性的清潔劑、砂布清潔微波爐，否則可能會使控制板、爐具內外四壁受損，只須用布沾上性質溫和的洗潔精，或在廚房用紙上噴上玻璃清潔劑，便可清潔微波爐。
切勿將玻璃清潔劑直接噴在爐上。



應定期取出轉盤及轉盤托架，然後清潔爐腔底部，特別是當倒翻食物後，更應如此。



本爐具經精心設計，當轉盤安放妥當後，才可操作。

i 當取出轉盤清潔時，切勿使用微波爐。使用溫和的洗潔精、水及軟布，抹拭爐腔內壁、爐門的前、後部分及開門位置。

i 不要讓油漬及食物的渣滓，堆積在爐門的周圍。

若要去掉頑固汙漬，可將一杯清水放在爐煮2-3分鐘，水蒸汽便可軟化頑固汙跡。如要清除爐內的難聞氣味，可將一杯混有檸檬汁的清水，放在轉盤上，然後煮沸，便可消除爐腔內的難聞氣味。

i 請勿使用蒸汽清潔裝置來清潔微波爐。

 
i 本爐應該被定期清潔，清理食物殘渣。

燒烤元件不需要清潔，因為其產生的高溫能夠燒掉油漬。但燒烤元件下的爐頂需要定期清潔。

若燒烤功能並不常用，要減少危險發生，請於每月至少使用燒烤功能一次，每次10分鐘以清潔有關組件。

下列配件，可用洗碗碟機清洗：


轉盤托架

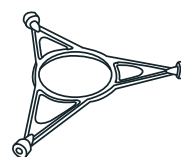


玻璃轉盤



 
脆焗盤手柄

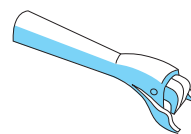

蒸籠

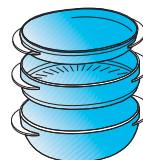 


燒烤架

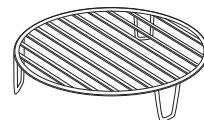 

小心清潔：

脆焗盤必須用溫和的清潔劑清洗。要去除頑固汙漬，可用百潔海綿及溫和的去垢劑清洗。

 清洗前必須讓脆焗盤冷卻。



i 當脆焗盤仍熱時，請勿用水將它浸泡或清洗。將脆焗盤快速冷卻可能會令其損壞。

i 切勿用金屬刷清潔脆焗盤，否則會刮花表面。

問題解決指南

若微波爐不能操作，請檢查下列各項後才致電維修中心：

- ❖ 轉盤和轉盤托架是否固定就位
- ❖ 插頭是否完全插入插座
- ❖ 爐門是否完全關閉
- ❖ 檢查保險絲，並確定已接上電源
- ❖ 檢查微波爐是否有良好的通風環境
- ❖ 等待十分鐘後再嘗試操作
- ❖ 再作嘗試前，請開啟爐門，然後將其關上。

以上檢查，可避免不必要的檢查維修，維修服務可能會收費。

致電維修服務中心時，請提供機身編號及微波爐型號（請參閱維修服務標籤）。有關詳細資料，請參閱保修卡。



若需更換電源線，必須使用原廠產品，並由接受過專業培訓的維修技師負責更換。有關的電源線可聯絡維修中心。



維修工作應交由專業的技師執行，若由非合格的人員進行維修涉及拆除防止微波外泄的保護蓋，均屬非常危險。

切勿拆除任何蓋子。



環保建議

用來盛載本爐具的紙盒印有環保標誌，可以完全循環再造。棄置有關包裝材料時，請遵循本地的廢物棄置條例。請把可能引致危險的包裝材料（如膠袋、發泡膠等）放置在小孩接觸不到的地方。



 
本產品依照歐洲關於廢棄電子電氣產品條例 2002/96/EC 進行標識(WEEE)。用戶正確棄置能夠幫助預防對環境及人類健康潛在的負面影響。

產品上或產品檔上的此標誌表示本產品有可能不屬於家庭棄置廢物。需要將其交至指定的電子電氣產品廢置站。

本產品如日後需要棄置，請遵循本地的廢物棄置條例。

有關產品處理，恢復及迴圈使用的詳細資料，請諮詢本地政府機構，家庭棄置廢物機構或購買產品的商舖。

棄置前請切斷電源線，使本產品不能連接電源。

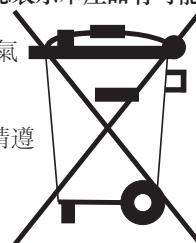

Three horizontal blue lines for writing.



Twenty horizontal blue lines for writing.

符合IEC 60705。

為測試不同微波爐產品的熱量功能，國際電器技術委員會制定了特定的標準。
建議本微波爐應以下列資料為標準。

實驗	重量	大約時間	火力級別	容器
12.3.1	750 克	9.5 分鐘	700 瓦	PYREX 3.220
12.3.2	475 克	5 分鐘	700 瓦	PYREX 3.827
12.3.3	900 克	15 分鐘	700 瓦	PYREX 3.838
13.3	500 克	11-13 分鐘	極速解凍	



W 1 0 3 8 6 6 0 8



惠而浦是美國惠而浦公司 (WHIRLPOOL CORPORATION, USA) 的註冊商標