

# EN AWC 7085 D

Max. Load: 7kg / Max Spin Speed: 850 rpm

## PROGRAMME CHART




### A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

### B. "Service" indication

### C. "Water tap closed" indication

### D. "Clean pump" indication

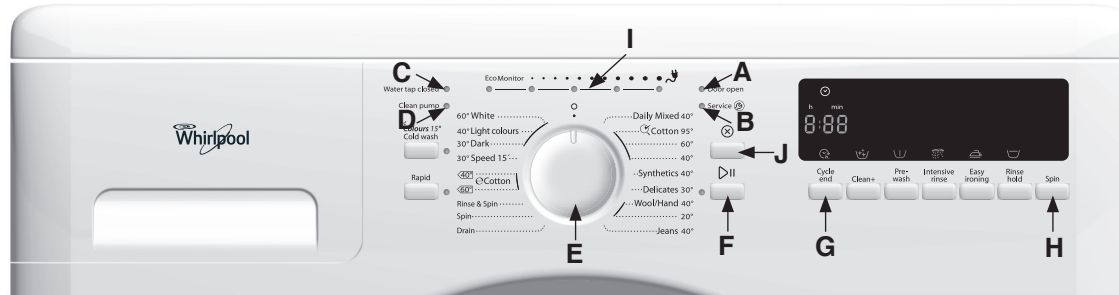

### E. Programme selector

### F. "Start/Pause" button

### G. "Cycle end" button

### H. "Spin" button

### I. Eco monitor

### J. "Reset" button

Programme	Temperature	Care Labels	Suggested Load kg	Type of wash / Notes <i>- respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options							Max Spin Speed rpm		
					Pre-wash	Main Wash	Softener	Colours 15° Cold wash	Rapid	Cycle end	Clean+	Pre-wash	Intensive rinse	Easy ironing		Rinse hold	Spin
<b>Daily Mixed</b>	40°C		4.0	<b>Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends.</b> Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	-	Yes	*	*	-	*	-	-	*	*	*	*	Max.
<b>Fabrics</b>	<b>Cotton</b>	40-60-95°C		7.0	<b>Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.</b>	*	Yes	*	*	*	*	*	*	*	*	*	Max.
	<b>Synthetics</b>	40°C		3.0	<b>Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.</b>	*	Yes	*	*	*	*	*	*	*	*	*	Max.
	<b>Delicates</b>	30°C		1.5	<b>Curtains and delicate clothing, dresses, skirts, shirts and blouses.</b>	*	Yes	*	*	-	*	-	-	*	*	*	Max.
	<b>Wool/ Handwash</b>	cold-40°C		1.0	<b>Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.</b>	-	Yes	*	*	-	*	-	-	-	*	*	Max.
	<b>Jeans</b>	40°C		4.0	<b>Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.</b>	*	Yes	*	*	*	*	*	*	*	*	-	*
<b>Colours</b>	<b>White</b>	60°C		7.0	<b>Normally to heavily soiled and robust white cotton laundry.</b> Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	-	Yes	*	*	-	*	*	-	*	*	*	Max.
	<b>Light colours</b>	40°C		4.0	<b>White and pastel shaded garments made of delicate fabrics.</b> Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	-	*	*	-	*	*	*	Max.
	<b>Dark</b>	30°C		4.0	<b>Black and dark garments made of cotton, cotton blends and polyester.</b> Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	*	-	*	*	-	*	Max.
<b>Eco</b>	<b>Speed 15'</b>	30°C		3.0	<b>Briefly worn clothing made of cotton, artificial fibres and blends with cotton.</b> Refresh programme. Use lowest recommended detergent amount.	-	Yes	*	*	-	*	-	-	-	*	*	Max.
	<b>Cotton</b>	40-60°C		7.0	<b>Normally soiled cotton laundry.</b> At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	-	Yes	*	*	-	*	-	*	-	*	*	Max.
Rinse & Spin	-	-	7.0	<b>Separate rinse and spin programme.</b> Suitable for robust laundry.	-	-	*	-	-	*	-	-	*	-	*	*	Max.
Spin	-	-	7.0	<b>Separate spin programme.</b> Suitable for robust laundry.	-	-	-	-	-	*	-	-	-	-	*	*	Max.
Drain	-	-	-	<b>Drain only - no spinning.</b> Alternative method of terminating programme after "Rinse hold".	-	-	-	-	-	*	-	-	-	-	-	-	-

\* = option / Yes = dosing required.

**CONSUMPTION DATA**

Power consumption in off-mode 0.16 W / in left-on mode 0.16 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh) without "Rapid"	Approx. programme duration (hours : minutes) ☺	
					without "Rapid"	with "Rapid"
Daily Mixed	40	4.0	48	0.50	1:00	-
Cotton	95	7.0	74**	2.20	2:30	-
Cotton	60	7.0	54	1.19	2:20	1:35
Cotton	40	7.0	66	1.00	2:45	1:15
Synthetics	40	3.0	46	0.70	2:15	0:55
Delicates	30	1.5	60	0.40	0:46	-
Wool/ Handwash	40	1.0	45	0.55	0:40	-
Jeans	40	4.0	52	0.50	1:30	1:10
White	60	7.0	68	1.20	2:35	-
Light colours	40	4.0	60	0.45	1:20	-
Dark	30	4.0	40	0.40	1:40	1:15
Speed 15'	30	3.0	25	0.15	0:15	-
Cotton <60>*	60	7.0	50	0.84	4:00	-
Cotton <60>*	60	3.5	40	0.63	3:00***	-
Cotton <40>*	40	3.5	40	0.61	3:00***	-

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

\* Reference programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Automatic adaptation of programme duration after detection of wash load

**LOAD LAUNDRY, ADD DETERGENTS AND SELECT THE PROGRAMME**

Load the laundry, close the door and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. Turn the programme selector to the desired programme and temperature. The display shows the programme duration, and the predefined spin speed lights up. The "Start/Pause" indicator blinks.

The washing machine is designed to save energy, therefore, if you have selected a programme but do not start it within about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to "O" and then to the desired programme again.

**SELECT ANY DESIRED OPTION**

Push the button of any option desired - the indicator lights up. If the combination programme/option or option/option is not possible, the indicator switches off automatically.

**"Colours 15°" / "Cold wash" button**

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.
- Recommendable for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures (15 or 20°C).
- Not selectable for Cotton 95°C.

**"Rapid" button**

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.
- Not selectable for Cotton 95°C.

**"Clean+" button**

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- May prolong the programme by up to 15 minutes
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

**"Prewash" button**

- Adds a prewash cycle to the wash programme selected;prolongs the programme by about a quarter of an hour.
- Recommended for heavily soiled laundry (e.g. with sand or granular dirt).
- Do not use liquid detergent for the main wash when activating the "Prewash" option.

**"Intensive rinse" button**

- Add one more rinse cycle and prolong the rinse time.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

**"Easy ironing" button**

- Reduces creasing by an increased water quantity and a very gentle spin.

**"Rinse hold" button**

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- The wash programme stops to "Rinse hold" when the "Rinse hold" indicator on the display blinks. The "Start/Pause" indicator blinks as well.

**Terminate the "Rinse hold" option:**

- Press the "Start/Pause" button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the "Start/Pause" button.

**"Spin" button**

- Every programme has a predefined spin speed, press the button to set different spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

**SET CYCLE END** ☺

With this function you can postpone your programme to complete at a later time: press the button to select in how many hours the programme shall be finished. Thus, it allows you to have your laundry ready at a particular time and to profit from more favorable energy rates during the night, for example. Do not use liquid detergent when activating "Cycle end" option.

- The time until the "Cycle end" can be selected in full hour time segments (1 to 24 h). When you press the button, the shortest possible time will be displayed; keep on pressing the button to loop through all the available times. To remove it again, keep on pressing the button until you see the value "0:00".
- When you have selected the desired time until the "Cycle end", press "Start/Pause" - the countdown will begin.
- During the countdown, you can still modify the programme setting (select or deselect options, change spin speed etc.). If the modifications prolong the programme duration so that it overruns the originally set time until the "Cycle end", the programme will start immediately.
- Sometimes the programme may finish before the selected time until the "Cycle end" has expired (e.g. for small loads). In this case, the washing machine will tumble the laundry regularly to keep it fresh, until the selected "Cycle end" time has expired. During tumbling, the display will show an animation. The tumbling phase can be stopped at any time either by pressing any button or by rotating the programme selector; the animation will stop and the door will unlock in about 1 minute as indicated on the display.

**ECO MONITOR** ☺

The "Eco monitor" gives you a rough feedback about the power consumption of the programme setting you selected. As soon as you turn the programme selector to any programme, the "Eco monitor" is on. The indicator on the left is to show that the "Eco monitor" is active. The four indicators next to it show the degree of consumption: the less power your programme setting is

forecasted to consume, the less indicators will light up. This depends on the programme, temperature and options selected, and also on the size of the wash load. For that reason, the forecasted degree of power consumption may adapt when the washing machine detects the wash load.

**PROGRAMME START** ▶

Open the tap and press the "Start/Pause" button . The indicator next to the "Start/Pause" button lights up. When the laundry load is detected or the programme duration is updated, the display shows an animation.

**"DOOR OPEN" INDICATION**

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset" a running programme before the end".

**FAILURE INDICATION**

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed": no or not sufficient inlet water

☺ "Service" : failure or malfunction of an electrical component.

"Clean pump": waste water is not pumped out.

Spin speed on display blinks: unbalance during spinning.

**PROGRAMME END**

The "Door open" indicator lights up, and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.

1. Turn the programme selector to the "O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

**CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START**

1. Press the "Start/Pause" button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

**CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END** ☺

The "Reset" button cancels a programme before the end.

- Press and hold the "Reset" button for a few seconds. The water is drained. It may last some time until the doorcan be opened.