


Whirlpool

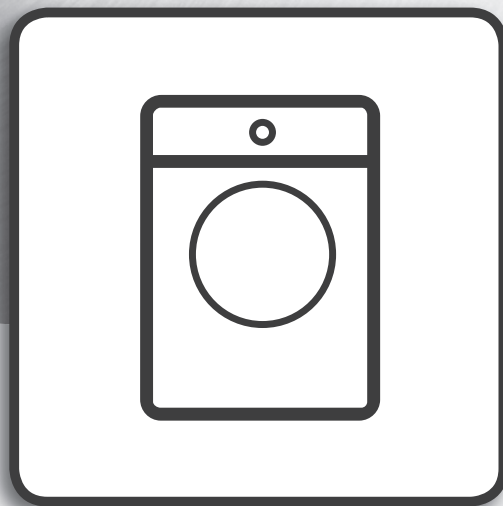

User Manual and Online Warranty Registration Information

產品使用說明及網上登記保養資料

Model 產品型號：AWD712S



**www.whirlpool.com.sg
www.whirlpool.com.hk**

ENGLISH3

繁體中文.....23

Table of Contents

| | |
|--|----|
| 1. Safety guide..... | 4 |
| 1.1 Important safety instructions..... | 5 |
| 1.2 Safety precautions..... | 7 |
| 2. Introduction | 8 |
| 2.1 Control panel and features | 8 |
| 2.2 Cycles guide..... | 9 |
| 3. Using the dryer | 10 |
| 3.1 Check care label on clothing | 10 |
| 3.2 Clean lint filter | 11 |
| 3.3 Load the dryer | 11 |
| 3.4 Select cycle | 12 |
| 3.5 Select options | 12 |
| 3.6 START/PAUSE | 12 |
| 3.7 When cycle ends | 12 |
| 3.8 Drying rack | 13 |
| 4. Dryer care | 14 |
| 4.1 General care | 14 |
| 4.2 Clean dryer drum | 14 |
| 4.3 Remove accumulated lint | 14 |
| 4.4 Clean the lint filter | 15 |
| 4.5 Care during vacation or moving | 16 |
| 5. Troubleshooting | 17 |
| 6. Technical Specifications | 21 |
| 7. Environmental issues | 22 |

Please read the User Manual carefully before operating the dryer. Before plugging in the dryer, make sure that the outlet is properly grounded for your safety.

NOTE: All images contained in this manual are merely illustrative.

1. Safety guide

Your safety and the safety of others is very important.

We have provided several important safety messages in this manual and on your appliance.

Always read and observe all safety messages.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the alert symbol or the word **DANGER** or **WARNING**. These words mean:



DANGER

Indicates a hazardous situation which, if not avoided, will cause serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential risk presented and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the dryer. Care fully observe the following instructions. Failure to observe these instructions may lead to risks. The Manufacturer declines any liability for injury to persons or animals or damage to property if these advices and precautions are not respected.



WARNING



Risk of Fire

Dryer installation must be performed by a qualified technician.

Install the dryer in accordance with the manufacturer's instructions.

Follow all installation instructions in order to reduce the risk of serious injury or death.

Instructions to be read and observed.

1.1 Important safety instructions

WARNING: To reduce the risk of fire, electric shock or bodily injuries when using the dryer, take into account the following information:

- Read all instructions before using the dryer.
- This dryer is intended FOR DOMESTIC USE ONLY.
- Any electrical work required to install the appliance should be performed by a qualified professional.
- Under no circumstance should the product be used for any purpose other than as indicated.
- It is dangerous to alter or modify the product in any manner that is not done with authorized tools.
- We recommend unplugging the appliance after use. The appliance should always be unplugged if it is not going to be used for long period of time, **example**, weeks, vacations, etc.
- Do not exceed the maximum recommended load.
- Do not dry items that have been cleaned with, washed with, soaked in or spotted with cooking oil, gasoline, dry-cleaning solvents or inflammable or explosive substances, as they give off vapors that could ignite or explode.
- Use a non-flammable cleaner.
- Keep inflammable materials and vapors, such as gasoline, away from the dryer.
- Do not allow children to play in or on top of the dryer. Keep close supervision of children when they are near the operating dryer.
- This appliance has not been designed to be used by persons (including children) with reduced physical, sensory or mental capacity or with lack of experience and knowledge, unless they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved.
- Before the dryer is removed for servicing or disposal, remove the dryer door.
- Do not install or store the dryer where it will be exposed to outdoor.
- There must be adequate ventilation to avoid the backflow of gases into the room from appliances that burn other fuels, including open fires.
- The ventilation grills must not be obstructed by any carpet located at the base of the dryer.
- It is recommended that the dryer should not be installed next to an oven since its operation may be affected.
- The exhaust air from the dryer must not be discharged into a chimney that is used for exhaust smoke from appliances that burn gas or other fuels.
- Do not block the rear air intakes.
- Do not allow lint to build up within the dryer.
- The appliance should not be installed behind a door that can be locked, a sliding door or a door with a hinge on the side opposite of the dryer.

- Do not try to force the controls.
- Do not repair or replace any part of the dryer and do not attempt to service it unless specifically recommended to do so in this Use and Care Guide and in the User Repair Instructions published that you understand and may perform.
- Disconnect the power supply before servicing.
- The dryer must be repaired by authorized technical support service and only original spare parts may be used.
- Do not use the dryer if you suspect that it is damaged.
- Do not use fabric softeners or products for eliminating static electricity unless recommended to do so by the product manufacturer.
- Do not use heat to dry any items that contain foam rubber or materials with rubber-like textures.
- Do not try to dry dripping-wet clothing.
- Clean the lint filter before every load.
- Keep the area around the exhaust opening and adjacent areas free of lint, dust and dirt.
- It is important to clean lint from the window and around the door seal after every drying cycle.
- The connection plug must be connected only to a connection outlet with the same characteristics as the plug.
- This appliance must be earthed.
- Do not remove the earthing terminal.
- Do not use adapters or extension cables. The dryer must be connected to its own outlet.
- Two or more people are needed to move and install the dryer.

INSTRUCTIONS TO BE READ AND OBSERVED

NOTE: All images contained in this manual are merely illustrative.

1.2 Safety precautions

This information is provided in the interest of safety. Read them carefully before installing or using the appliance.



WARNING

Do not dry products that have been soaked in fuels, chemicals or liquid solvents.

The connection plug must be connected only to a connection outlet with the same characteristics as the plug.


Check to make sure the ventilation system has good air flow.

In addition to heat, dryers also need good air flow to dry clothing efficiently. Proper ventilation will reduce drying time and improve your energy savings. See the installation instructions.

Service calls caused by improper ventilation will not be covered by the warranty and will be borne by the customer, no matter who installed the dryer.

Maintain good air flow by doing the following:


- Clean the lint filter before every load.
- Use a vent with the shortest length possible.
- Do not have more than 4 times of 90° bends in a ventilation system; every bends reduce air flow.
- Remove lint and debris from the ventilation hood.
- Remove lint from the entire length of the ventilation system at least every 6 months. When you have finished cleaning, check it again to ensure that you have followed the installation instruction.
- Remove any item at the front of the dryer.

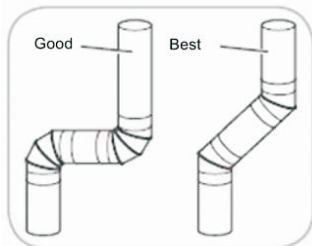

2. Introduction

Thank you for buying Whirlpool product, we suggest that you carefully read the instructions in this user manual and keep it in a safe place for future reference. This will help you to understand and obtain the best performance for your new Whirlpool dryer.

2.1 Control panel and features

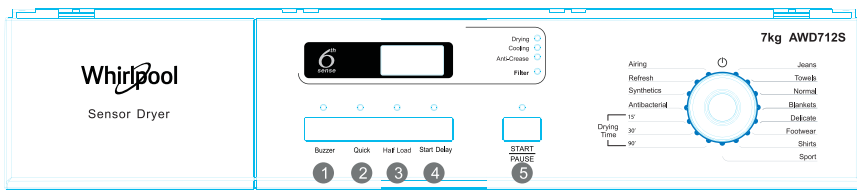

❶ Buzzer

Press to turn off/on the sound when you select a cycle, option or alarm.

❷ Quick

Press to reduce the cycle time. Only available for the jeans, towels and normal cycles.

Quick option and Half Load option cannot be selected at the same time.

❸ Half Load

Press to adjust the cycle time if you are drying a smaller load. Quick option and Half Load option cannot be selected at the same time.

❹ Start Delay

Press to delay the starting time of the cycle by maximum 12 hours. This feature can be activated after selecting the cycle. Then press START/PAUSE to start the cycle.



❺ START/PAUSE

Press to start a cycle or press to pause a running cycle.

2.2 Cycles guide

| Cycle: | Amount of dry clothing: | Default program time(hh:mm): | Options available: | Articles to dry: |
|---------------|----------------------------------|------------------------------|--------------------|---|
| Jeans | 7 kg | 2:30 | Quick Half Load | Jeans, heavy work clothing |
| Towels | 6 kg | 2:20 | Quick Half Load | Cotton clothing, towels and swimsuits |
| Normal | 6 kg | 2:10 | Quick Half Load | Cotton blends and everyday clothes |
| Blankets | 6 kg | 1:50 | Half Load | Linens and corduroy |
| Delicates | 6 kg | 1:40 | Half Load | Lingerie, lightweight fabrics and delicates |
| Footwear | - | 3:00 | Half Load | Two pairs of shoes NOTE: Install the dryer rack and put shoes on the rack, not in the drum. |
| Shirts | 3 kg | 1:05 | Half Load | Shirts and blouses |
| Sport | 3 kg | 0:50 | Half Load | Sportswear |
| 90' | 6 kg | 1:30 | - | Any load NOTE: Select Airing to dry foam, rubber, plastic or heat-sensitive fabrics. |
| 30' | 3 kg | 0:30 | - | |
| 15' | For small loads of 3-4 articles. | 0:15 | - | |
| Antibacterial | 3 kg | 2:10 | - | Antibacterial |
| Synthetics | 1.5 kg | 1:50 | - | Permanent Ironing clothes and synthetic fabrics |
| Refresh | 3 kg | 1:00 | - | Shirts, blouses and pants |
| Airing | 2 kg | 0:30 | - | Foam, rubber, plastic or heat-sensitive fabrics. |

3. Using the dryer

|  WARNING | |
|--|--|
|  | <p>Explosion Hazard</p> <p>Keep flammable materials and vapors, such as gasoline, away from dryer.</p> <p>Do not dry any item that has or come in contact with any flammable substance (even after washing it).</p> <p>Failure to follow these instructions may result in fire, explosion or death.</p> |

WARNING: In order to reduce the risk of fire, electric shock or personal injury, read the IMPORTANT SAFETY INSTRUCTIONS before operating this dryer.

Before using the dryer, clean the drum with a damp cloth to remove any dust that accumulated during storage and shipping.

3.1 Check care label on clothing

Care labels that you may find on your fabrics:



Suitable for dryers



Dry at high heat



Dry at medium heat




Do not tumble dry

- Do not dry wool or wool blend clothing unless the clothing is labelled as being suitable for doing so. Otherwise, it may lead to shrinking.
- Empty pockets before loading the dryer.
- Place delicate clothing, such as stockings and scarves, into a laundry bag or similar item.
- To avoid ironing polyester/cotton clothing, it is recommended to dry them in small loads.
- It is recommended to dry small and large clothes together.

- Do not overload the dryer or dry very large items such as bed sheets or sleeping bags because it is important to allow air to circulate in the dryer drum.
- Do not place clothing contaminated with inflammable substances, such as gasoline, cleaning solvents, etc into the dryer. These substances may cause fire. For the same reason, use only Airing cycle for dry rubber, foam rubber and plastic.



3.2 Clean lint filter

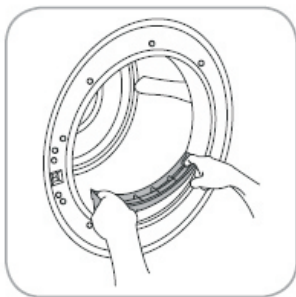Clean the lint filter before every load. Otherwise, the safety disconnection mechanism could be activated.



1. Pull the lint filter straight up.
 2. Remove lint by rolling it with your fingers.
 3. Push the lint filter firmly until it locks back into place.
- For more information about cleaning, see "Dryer care."

3.3 Load the dryer

|  WARNING | |
|--|---|
|  | Fire Hazard |
| | No washing can remove oil completely. |
| | Do not dry any item that come in contact with any type of oil (including cooking oil). |
| | Items that contain foam, rubber or plastic must be dried on a drying rack or by using Airing Cycle. |
| Failure to follow these instructions may result in fire or death. | |

1. Open the door and place the clothing into the drum (place sheets in first starting with the corner).
2. Close the door and dry your hands.
Do not overload the dryer; clothing must be able to rotate freely.

3.4 Select cycle

Select the cycle based on the clothing loaded in the dryer.

3.5 Select options

Select the desired options.

The Quick option is available only for the Jeans, Towels and Normal cycles.

Quick option and Half Load option cannot be selected at the same time.

3.6 START/PAUSE

Press the **START/PAUSE** button to start the cycle.

NOTE: If the dryer does not start up, press the button on the back of the dryer to reset the protection thermostat and press Start/Pause again. If the problem persists, check to see if the ventilation system is obstructed or contact your service agent or qualified personnel.

Now the drum will begin to spin.

The drum will periodically stop and rotate in the other direction for a short period of time. This will repeated throughout the entire drying cycle. It is important to take into account that the first stop period may be longer than following ones.

If the clothing is dried before the cycle ends, or if an excessively long cycle time has been selected, the built-in thermostat will automatically turn off the heater to prevent the clothing from being over-drying and save energy, even though the drum will continue to rotate.

Simply open the door in the middle of a cycle to stop the machine; the drum will stop rotating automatically.

Press the **START/PAUSE** button again to restart the cycle.

There is an automatic 30-minute period at the end of each cycle which helps to smooth out wrinkles. During this period, the dryer will make periodic rotations.

3.7 When cycle ends

Remove clothing as soon as the cycle has completed in order to reduce wrinkles.

NEVER UNPLUG THE DRYER AND LEAVE A WARM LOAD IN THE DRUM.

If any individual items are still damp after the drying cycle has completed, extend the drying process by setting to a 30 minutes drying cycle. This will be required especially for multilayered items such as pockets, collars etc.

3.8 Drying rack

Use the drying rack for items that you do not want to tumble dry, such as sweaters and athletic shoes.


When you use the drying rack, the drum will continue to rotate, but the rack remains fixed. The drying rack has been designed to be used only with the Footwear, Synthetics and Airing cycles.

To use the drying rack:

IMPORTANT

Do not remove the lint filter.

1. Open the dryer door.
2. Place the rear bracket on the back edge of the dryer and support the two hooks that are at the front part of the drying rack on the door opening.

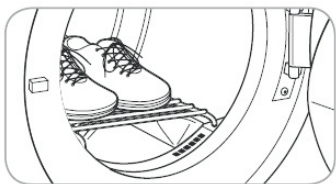

3. Place wet items on the drying rack. Leave space around the items so that the air may circulate. The drying rack does not move, but the drum will rotate; ensure that there is adequate space inside the dryer drum. Make sure that items do not hang by the edges or between the grills.

4. Close the door.
5. Select the Footwear to dry shoes, Synthetics to dry, for example, sweaters and Airing to dry items that contain foam, rubber or plastic.
6. Start the dryer.



NOTE: After the cycle has ended, check the lint filter and remove the accumulated lint from item that have been dried on the drying rack.

4. Dryer care

Clean the product according to the manufacturer's recommendations. Do not use direct streams, hoses or buckets of water.

4.1 General care

Keep the area of the dryer clear and free from items that may obstruct air flow so that the dryer will operate properly. This includes clearing away stacks of clothing that are in front of the dryer.

|  WARNING | |
|--|---|
|  | <p>Explosion Hazard</p> <p>Keep flammable materials and vapors, such as gasoline, away from dryer. Place dryer at least 460 mm above the floor for a garage installation. Failure to follow these instructions may result in fire, explosion or death.</p> |

4.2 Clean dryer drum

To clean the dryer drum:

1. Apply a liquid, non-flammable household cleaner to the stained area of the drum and rub with a soft cloth until the stain disappears.
2. Clean the drum thoroughly with a damp cloth.
3. Place a load of clean clothing or towels inside to dry the drum. Use the Airing cycle.

NOTE: Clothing with fading colors such as jeans or brightly colored cotton items may stain the dryer drum. These stains do not damage the dryer nor they will stain future laundry loads. Dry these clothing inside-out to prevent it from staining the dryer drum.

4.3 Remove accumulated lint

Inside of the dryer housing


Based on how the dryer is used, lint must be removed every 2 years, or sometimes more frequently. Cleaning must be done by a qualified personnel.

In the exhaust vent

Lint must be removed every 6 months, or sometimes more frequently, depending on the frequency of usage.

4.4 Clean the lint filter

The lint filter is located inside the dryer door. A filter clogged with lint may increase drying time.

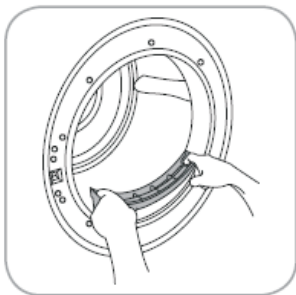

To clean:

1. Pull the filter straight up. Remove lint from the filter by rolling it with your fingers. Do not rinse or wash the filter to remove the lint.
2. Push the lint filter firmly until it locks back into place.

IMPORTANT:

- Do not operate the dryer with a loose, damage, clogged or missing lint filter. Doing so can cause overheating and damage both the dryer and the clothing.
- If lint falls into the dryer when removing it from the filter, check the ventilation hood and remove the lint. See "Ventilation System in page 7."

Cleaning when needed

Residue from laundry detergent and fabric softener may accumulate in the lint filter. This accumulation may cause prolonged drying times for your clothing or cause the dryer to stop before its load is completely dried. The filter is probably clogged if lint falls from it while inside the dryer.

Clean the lint filter with a nylon brush every 6 months or more frequently if it is being clogged due to the accumulation of residues.

To wash it:

1. Remove lint from the filter by rolling it with your fingers.
2. Wet both sides of the lint filter with warm water.
3. Wet a nylon brush with warm water and liquid detergent. Scrub the lint filter with the brush to remove the accumulated residues.

4. Rinse the filter with warm water.
5. Dry the lint filter thoroughly with a clean towel.
6. Place the filter back into the dryer.

4.5 Care during vacation or moving

Store your dryer in a place where it will not freeze. Since a small amount of water remains in the hoses, its freezing could damage your dryer. If you are going to store or move your dryer during the winter, be sure to condition it.

Care during non-use or storage

Operate your dryer only when you are at home. If you go on vacation or are not going to use your dryer for a long time, you must:

1. Unplug the dryer or disconnect the power supply.
2. Clean the lint filter. See "Cleaning the lint filter."

Care during moving

For dryers connected with a power cord:

1. Unplug the power cord.
2. Make sure that the leveling legs are fixed at the base of the dryer.
3. Use adhesive tape to secure the dryer door



WARNING



Electrical Shock Hazard

Disconnect power before servicing.
 Replace all parts and panels before operating.
 Failure to follow these instructions may result in electric shock, fire or death.

5. Troubleshooting

Below are suggested solutions before a technical service call.

| If you experience the following | Possible causes | Solution |
|---|--|---|
| Clothing is not being dried properly, drying times are too long or the load is too hot. | Lint filter clogged with lint. | The lint filter must be cleaned before every load. |
| | Have you selected the Airing cycle? | Select the proper cycle for the type of clothing that you want to dry. See the "Cycles guide." |
| | The load is too large and heavy to dry quickly. | Separate the load so that it can rotate freely. |
| | The outdoor exhaust vent or hood is clogged with lint, obstructing air flow. | Let the dryer run for 5-10 minutes. Place your hand under the outdoor ventilation hood to check for the movement of air. If you do not feel any, clean lint from the ventilation system or replace the exhaust vent with a heavy metal or flexible metal one. Ensure that the exhaust vent is not crushed or kinked. See the "Installation instructions." |
| | The exhaust vent is not the correct length. | Check the exhaust vent to verify that it is not too long nor has too many turns. Ventilation with a long vent will increase drying time. Be sure that the exhaust vent is not crushed or kinked. See the "Installation instructions." |
| | The load consists of multilayered items such as pockets, collars etc | If any individual items are still damp after the drying cycle has completed, extend the drying process by setting to a 30 minutes drying cycle. |

| If you experience the following | Possible causes | Solution |
|---|---|---|
| Clothing is not being dried properly, drying times are too long or the load is too hot. (Cont.) | Is the dryer located in a room where the temperature is below 45°F (7°C)? | The proper operating temperature for dryer cycles requires higher than 45°F (7°C). |
| The dryer is not working. | The door is not closed completely. | Make sure that the dryer door is closed tightly. |
| | A household fuse has blown or the circuit breaker has tripped. | Electric dryers use 2 household fuses or circuit breaker. Replace both fuses or reset the circuit breaker. If the problem persists, call a qualified electrician. |
| | Incorrect power supply source. | Electric dryers require a 220-240V power supply. Verify with a qualified electrician. |
| | Wrong type of fuse. | Use a time-delay fuse. |
| Strange sounds. | The dryer was not used for a certain period of time. | If the dryer has been out of use for a season, you will hear a slight rattling sound for the first few minutes of operation. |
| | Is there a coin, button or paper clip between the drum and the front or rear part of the dryer? | Check the front and back edges of the drum for small objects. Empty pockets before drying. |
| | Are the four feet of the dryer installed and levelled from front to back and side to side? | Level the dryer by adjusting the adjustable feet. |

| If you experience the following | Possible causes | Solution |
|--|--|--|
| Strange sounds. (Cont.) | The clothing is tangled or rolled into a ball. | If the load is rolled into a ball, it will bounce around, causing the dryer to vibrate. Separate the tangled clothing and restart the dryer. |
| No heat. | A household fuse has blown or the circuit breaker has tripped. | Electric dryer uses 2 household fuses or circuit breaker. Replace the fuse or reset the circuit breaker. If the problem persists, call a qualified electrician. |
| | Incorrect power supply source. | Electric dryers require a 220-240 V power supply. Verify with a qualified electrician. |
| | The thermostat is activated. | Press the button on the back of the dryer and press Start/Pause again. If the problem persists, check to see if the ventilation system is obstructed or contact your service agent or qualified personnel. |
| Lint in the load. | The lint filter is clogged. | The lint filter must be cleaned before every load. |
| Loads are wrinkled. | The dryer was overloaded. | Dry smaller loads that can rotate freely and reduce the formation of wrinkles. |
| Odors. | Have you been painting, staining or varnishing recently in the area where your dryer is located? | If so, ventilate the area. When the odor is gone, wash the clothing again and then dry. |

| If you experience the following | Possible causes | Solution |
|-----------------------------------|---|--|
| Odors. (Cont.) | Are you using the electric dryer for the first time? | The new electric heating element may emit an odor. The odor will disappear after the first cycle. |
| The load is too hot. | Did you remove the clothing from the dryer before the end of cycle? | Let the Cool-down cycle finish before removing the clothing from the dryer. The load will cool down slowly throughout all cycles to reduce wrinkles and make the load easier to handle. It is possible for the clothing to be too hot to touch before the Cool-down cycle. |
| The interior light does not work. | The bulb is burned out. | Contact your service agent or qualified personnel. |

6. Technical Specifications

Whirlpool Electric Dryer

| | |
|---------------------------------|-------------|
| Model | AWD712S |
| Power Supply Voltage | 220 - 240 V |
| Operating Frequency | 50 Hz |
| Max Power | 2350W |
| Maximum Capacity (dry clothing) | 7 kg |
| Height | 85 cm |
| Width | 59.5 cm |
| Depth | 55.5 cm |

7. Environmental issues

Packaging

The packaging material used is recyclable, making it possible for consumers to dispose them, preferably to recyclers.

Product

This product is built with materials that can be recycled and/or reused. Therefore, when disposing of this product, please look for companies specialized in disassembling them properly.

Disposal

When disposing this product, please observe the current local legislation in your region so that the disposal can be done in accordance. The product should not be treated as domestic waste, but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment. For more information, please contact your local authority or the store where you purchase the dryer. Before disposal, cut off the power cord to avoid any accidents.



Photos are solely for advertising purposes.

目錄

| | |
|--------------------|----|
| 1. 安全指引..... | 24 |
| 1.1 重要安全資訊..... | 25 |
| 1.2 安全措施..... | 27 |
| 2. 乾衣機介紹..... | 28 |
| 2.1 控制面板..... | 28 |
| 2.2 程序表..... | 29 |
| 3. 日常使用..... | 30 |
| 3.1 乾衣衣物護理標籤..... | 30 |
| 3.2 清潔機門過濾器..... | 31 |
| 3.3 放入衣物..... | 31 |
| 3.4 選擇乾衣程序..... | 32 |
| 3.5 選擇乾衣選項..... | 32 |
| 3.6 啟動/暫停程序..... | 32 |
| 3.7 程序結束..... | 32 |
| 3.8 乾衣架..... | 33 |
| 4. 清潔和保養..... | 34 |
| 4.1 一般保養須知..... | 34 |
| 4.2 清潔乾衣機滾筒..... | 34 |
| 4.3 清潔棉絨..... | 34 |
| 4.4 清潔機門過濾器..... | 35 |
| 4.5 長期不使用或搬運時..... | 36 |
| 5. 疑難排解..... | 37 |
| 6. 技術參數..... | 41 |
| 7. 回收資訊..... | 42 |

備注: 圖片只供參考

1. 安全指引

為了防止對您和他人造成傷害，現就安全方面需要遵守的事項，作出如下說明。
使用前請詳細閱讀此安全指引並正確使用本機。



此標示提醒需注意不正確使用本機對您和他人造成的潛在危險，請留意以下兩類標示：



危險

此標示欄的內容為【會引致嚴重受傷】。



警告

此標示欄的內容為【有引致嚴重受傷的可能性】。

標示欄說明各項可能發生的危險，以及如何減低因不正確使用本機引致受傷、損壞物品、觸電等風險。在使用本機時，請務必遵守這些安全指引。如因不正確使用或非本公司授權技術人員安裝而導致的故障，不論是否處於保養期，本公司概不負責。



警告



火災風險

乾衣機的安裝工作，必須由合資格的技術人員進行。
請根據安裝指引正確安裝本機，以避免受傷或死亡風險。

1.1 重要安全資訊

警告：使用本機前，請仔細閱讀以下安全資訊，以減低引致受傷、損壞物品、觸電等風險。

- 使用本機前，請仔細閱讀使用說明書。
- 本機僅可用於家用住宅環境。
- 所有電源連接等安裝或維修工作，均須由合資格的技術人員進行。
- 在任何情況下，本機只可用於其特定用途。
- 不可改裝本機。如發生故障，請聯絡售後服務中心。
- 我們建議於每次使用後，拔出電源插頭。如長期不使用本機，則需拔出電源插頭。
- 投入衣物量不應超出程序表中所列的最大乾衣量(衣物重量為乾衣狀態下的重量)。
- 請勿使用本機烘乾任何以食油、汽油、含有溶劑之洗滌劑、易燃或爆炸性物質洗滌或浸洗過的衣物，以避免起火或爆炸風險。
- 只可放入以非易燃之洗滌劑洗滌過的衣物，在本機進行烘乾。
- 任何易燃的物品(如汽油等)，請勿放近本機。
- 不要讓兒童在本機上或乾衣筒內玩耍，當未使用時請關好機門。當本機運行時，請讓兒童遠離本機。
- 兒童，患有身體、感官或精神障礙的人士，以及經驗知識不足的人士，需接受相關安全指導或監督，方可操作本機。
- 棄置本機前，請先移除機門。
- 請勿在戶外存放及使用本機。
- 請確保空氣流通，避免乾衣機排氣回流至室內，引致燃燒其他燃料，包括明火。
- 請勿使用地毯堵塞乾衣機底部排氣孔。
- 請勿在乾衣機附近放置焗爐，以避免影響乾衣機運作。
- 切勿將乾衣機連接至用來排放燃燒氣體或其他燃料的排氣管道。
- 請勿堵塞乾衣機背部入氣孔。
- 請確保沒有棉絨或塵埃積聚在乾衣機附近。
- 不得將此乾衣機安裝於下述類型的門的後方：包括帶鎖門、滑動門或當門鉸與乾衣機機門方向相反時，因為這些情況會令乾衣機機門不能完全打開。

- 請勿強行蹂躪機門或按下本機按鈕。
- 每次乾衣前，請清理過濾器上的棉絨或塵埃。
- 所有安裝或維修工作，均須由合資格的技術人員進行，以確保適當的維修和使用原廠零配件。切勿自行維修或更換本機零件。
- 請確保乾衣機排氣口及附近範圍沒有棉絨或塵埃積聚。
- 在進行任何清潔和保養工作前，必須將電源插頭拔下，以確保安全。
- 每次乾衣後，請清理機門範圍及門邊的棉絨或塵埃。
- 如果本機有所損壞，請勿繼續使用。
- 請確保電源插頭與電源線互相匹配。
- 若使用衣物柔順劑或同類產品，應根據產品說明書的規定使用。
- 本機必須接上地線，及符合本地的電器安全標準法。
- 請勿使用熱風烘乾泡沫橡膠(乳膠發泡體)或帶橡膠配件的物品。
- 切勿移除本機地線。
- 請勿以拖板或萬能插頭連接本機。
- 請勿將過濕的衣物放入乾衣機烘乾。
- 若要搬動本機，必須找兩至三人一同小心搬動，切勿單獨搬動。

重要事項：請閱讀並遵循

1.2 安全措施

使用本機前，請仔細閱讀以下安全措施提示。



警告

請勿使用本機烘乾任何以汽油、化學劑、液體溶劑洗滌或浸洗過的衣物。
請確保電源插頭與電源線互相匹配。


請確保排氣系統空氣流通

空氣流通是乾衣機運行乾衣的其中一個重要條件。維持良好的通風能令乾衣更有效，減少乾衣所需時間，因而節約能源。請參考以下注意事項。

因排氣系統堵塞導致的故障，可能並不納入保養範圍。

請參考以下注意事項，以確保空氣流通：

- 每次乾衣前，請清理過濾器上的棉絨或塵埃。
- 請盡量使用較短的排氣管。

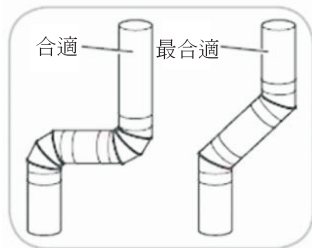


- 軟管放置路徑中不得超過四個直角彎。
- 請經常清理排氣口上及附近範圍的棉絨或塵埃。
- 請定期清理整條排氣管道內的棉絨或塵埃，建議至少每六個月清理一次。清理完畢並重新裝上時，請確保根據說明書內指引正確安裝。
- 請確保乾衣機前方沒有任何棉絨、塵埃或其它雜物阻擋通風口。

2. 乾衣機介紹

感謝您購買惠而浦產品，使用此產品前，請細心參閱「產品安全指引、使用說明及安裝指南」。

2.1 控制面板

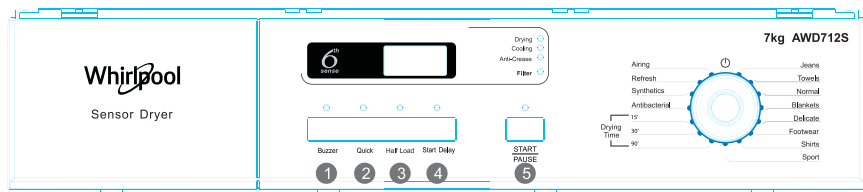

① 按鍵蜂鳴

按下此鍵以啟動/關閉旋鈕、按鍵及警報聲音。

② 快速鍵

按下此鍵允許更快的烘乾。此選項只適用於日常、牛仔布及毛巾程序。此選項不可與「半量乾衣」選項同時啟用。

③ 半量乾衣鍵

按下此鍵以烘乾少量衣物。
此選項不可與「快速」選項同時啟用。

④ 預校開機時間鍵

按下此鍵以預校程序開始時間 (可設定最多12小時之開機時間)。此功能可於選擇程序後啟用，選擇好所需開始時間後，按下啟動/暫停鍵以倒數開始程序。



⑤ 啟動/暫停鍵

按下此鍵以啟動乾衣程序，再次按下以暫停正在運行的程序。

2.2 程序表

| 程序: | 最大負載量 (乾衣重量): | 預設程序時間 (小時:分鐘): | 選項: | 適用衣物類型: |
|----------|------------------|--------------------|-------------|--|
| 牛仔布 | 7公斤 | 2:30 | 快速、 半量乾衣 | 以牛仔布堅固物料製成的棉質牛仔衣物，如長褲、外套等。 |
| 毛巾 | 6公斤 | 2:20 | 快速、 半量乾衣 | 彈性棉質衣物、毛巾、內衣褲等。 |
| 日常 | 6公斤 | 2:10 | 快速、 半量乾衣 | 棉質及日常衣物。 |
| 毛毯 | 6公斤 | 1:50 | 半量乾衣 | 滌綸、綸、混棉織物等。 |
| 纖細衣物 | 6公斤 | 1:40 | 半量乾衣 | 質料纖細的衣物，如內衣褲等。 |
| 鞋類 | - | 3:00 | 半量乾衣 | 鞋類(最多2對)。 注意: 請將鞋子放在鞋架上， 請勿直接放入筒內。 |
| 襯衣 | 3公斤 | 1:05 | 半量乾衣 | 由棉質、麻、合成纖維製成的襯衫、 上衣。 |
| 運動衣物 | 3公斤 | 0:50 | 半量乾衣 | 由合成纖維或棉質製成的運動服裝。 |
| 90分鐘乾衣 | 6公斤 | 1:30 | - | 注意: 泡沫橡膠或帶橡膠配件的物品， 以及不耐熱的衣物，請使用「風乾」 程序。 |
| 30分鐘速乾 | 3公斤 | 0:30 | - | |
| 15分鐘極速乾衣 | 約3-4件衣物 | 0:15 | - | |
| 抗菌 | 3公斤 | 2:10 | - | 有效抗菌。 |
| 合成纖維 | 1.5公斤 | 1:50 | - | 由合成纖維製成的衣物。 |
| 清新 | 3公斤 | 1:00 | - | 由棉質、麻、合成纖維等製成的襯 衫、上衣、褲。 |
| 風乾 | 2公斤 | 0:30 | - | 泡沫橡膠或帶橡膠配件的物品，以及 不耐熱的衣物。 |

3. 日常使用

|  警告 | |
|---|---|
|  | <p>爆炸風險</p> <p>任何易燃的物品(如汽油等)，請勿放近本機。</p> <p>請勿使用本機烘乾任何以易燃性物質洗滌或浸洗過的衣物，以避免起火、爆炸，甚至死亡風險。</p> |

警告: 使用本機前，請仔細閱讀相關安全指引，以減低引致受傷、火災、觸電等風險。

在安裝完成並使用乾衣機前，請先以微濕的棉布清潔滾筒。

3.1 乾衣衣物護理標籤

下列為常用乾衣護理圖標:



可以烘乾



適合高溫烘乾



適合低溫烘乾




不可烘乾

- 除非衣物標籤上另有說明，否則請勿烘乾羊毛製品或羊毛混合製品，以避免衣物縮水。
- 放入烘乾前請先檢查所有衣物口袋，確保沒有任何物品在內。
- 烘乾纖細衣物時 (如絲襪、絲巾、內衣等)，請先把它們放入網袋內。
- 為避免烘乾後需要熨平滌綸或純棉衣物，我們建議放入少量負載以烘乾此類衣物。
- 要達致較佳烘乾效果，我們建議將不同大小的衣物混合烘乾，並將其均勻擺放。
- 請勿使乾衣機超出負載運行，或用於烘乾大件物品如羽絨被或睡袋，以避免乾衣機內部氣流堵塞令空氣無法流通。
- 請勿使用本機烘乾任何以易燃或爆炸性物質，如汽油、含有溶劑之洗滌劑等洗滌或浸洗過的衣物，以避免起火或爆炸風險。另外，對於泡沫橡膠或帶橡膠配件的物品，請使用「風乾」程序。

3.2 清潔機門過濾器

每次乾衣前，請清潔機門過濾器。如果過濾器堵塞，可能導致乾衣機無法運作。

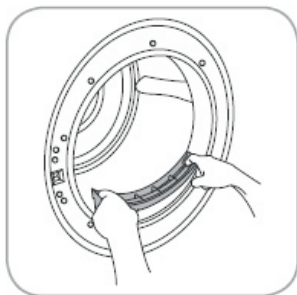

1. 打開機門並將過濾器向上拉。
2. 打開過濾器，清除所有部件上的棉絨。
3. 放回過濾器，並確保其與乾衣機邊緣密封。

請參閱「清潔和保養」篇章，了解更多相關資訊。

3.3 放入衣物



警告



火災風險

請勿使用本機烘乾任何以油 (包括食油、汽油等) 洗滌或浸洗過的衣物。
對於泡沫橡膠或帶橡膠配件的物品，請使用「風乾」程序。
否則可能會導致起火、爆炸，甚至死亡風險。

1. 打開機門，放入衣物。請先放入床單 (如有) 在角落位置。
2. 關上機門。確保衣物量沒有超出所選程序的最大負載量，太多衣物會令滾筒無法轉動。

3.4 選擇乾衣程序

根據衣物類型選擇乾衣程序。

3.5 選擇乾衣選項

根據需要選擇選項。

「快速」選項只適用於日常、牛仔布及毛巾程序。

「快速」與「半量乾衣」選項不可同時啟用。

3.6 啟動/暫停程序

按下「啟動/暫停」鍵以啟動乾衣程序。

注意: 如乾衣程序無法啟動，可嘗試按下機背按鈕以重設本機，再重新按下「啟動/暫停」鍵。如問題仍然存在，請檢查排氣系統是否暢通，或聯絡售後服務中心。

程序開始後，滾筒會開始轉動。雙向轉動型滾筒將間歇性停止轉動，然後開始短時間的反向轉動，直至程序完成。請注意，第一次的停止轉動時間，通常會較其後的長。

如衣物在程序結束前已經烘乾或程序設定時間過長，滾桶將繼續旋轉，同時機內恆溫器將自動調節加熱器以避免過度烘乾並節約能源。

如在程序運行期間打開機門，乾衣機將停止工作。如需重新啟動，請先關好機門，再按下「啟動/暫停」鍵。

程序結束後會有30分鐘的自動冷卻時間，期間加熱器將關閉。冷卻期間可減少衣物皺褶，滾筒將間歇性轉動。

3.7 程序結束

程序結束後，請盡快取出衣物，以減少衣物皺褶。

請勿在桶內衣物溫度較高時拔出乾衣機電源。

如程序結束後衣物仍然過濕，特別是較多口袋、鈕扣的衣物，可選擇加長乾衣時間 (建議運行「30分鐘速乾」程序)，加強乾衣效果。

3.8 乾衣架

乾衣架可用於不適合以滾筒轉動烘乾的衣物，如毛衣、鞋類等。


程序運行時，乾衣架會固定在滾筒內進行烘乾。乾衣架只適用於「鞋類」、「合成纖維」及「風乾」程序。

乾衣架使用方法：

重要

烘乾時請勿移除機門過濾器。

1. 打開機門。
2. 將乾衣架放入滾筒內，後方的鉤應掛在筒背中間位置，而前方兩個鉤應掛在門邊位置。

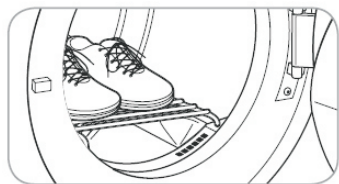

3. 將衣物/鞋類放在乾衣架上，每件衣物/鞋類之間，應該隔開適當距離，令空氣能夠流通。運行時滾筒會轉動，因此請在筒內預留足夠空間。另外，放在架上的物品，不應卡在乾衣架的邊緣位置（如鞋帶等）。

4. 關上機門。
5. 選擇合適的乾衣程序：「鞋類」程序用於烘乾鞋子，「合成纖維」程序用於烘乾衣物（例如毛衣），「風乾」程序用於泡沫橡膠或帶橡膠配件的物品。
6. 按下「啟動/暫停」鍵啟動乾衣程序。



注意：每次乾衣後，請清潔機門過濾器，以清理過濾器表面上的棉絨。

4. 清潔和保養

所有清潔和保養工作，必須依照將本使用說明書的指示進行。請勿直接用水沖洗本機。

4.1 一般保養須知

請確保乾衣機前方及附近範圍沒有任何衣物、棉絨、塵埃或其它雜物阻擋通風口，影響空氣流通。

|  警告 | |
|---|---|
|  | 爆炸風險 任何易燃的物品(如汽油等)，請勿放近本機。 如將乾衣機放置在車庫內，必須將其安裝在離地至少 460 毫米的位置。 以避免起火、爆炸，甚至死亡風險。 |

4.2 清潔乾衣機滾筒

要清潔滾筒及附近範圍:

1. 請使用非易燃清潔劑進行清潔，並用棉布擦拭污漬。
2. 使用濕布抹走清潔劑。
3. 放入乾淨衣物或毛巾，並使用「風乾」程序烘乾滾筒。

注意: 烘乾可能褪色的衣物 (如牛仔衣物、鮮豔顏色衣物)時，滾筒上或會殘留污漬。一般來說，這些污漬並不會沾到其它衣物。要避免此情況，建議乾衣前先將衣物內部反出來。

4.3 清潔棉絨

清潔乾衣機內棉絨:


根據使用情況，建議大約每隔2年需要進行一次清潔。清潔工作需由合資格的技術人員進行。

清潔排氣管道內棉絨:

根據使用情況，建議大約每隔半年(或更頻密地)需要進行一次清潔。

4.4 清潔機門過濾器

如機門過濾器堵塞，乾衣機內的氣流將受到嚴重影響，乾衣時間會延長。

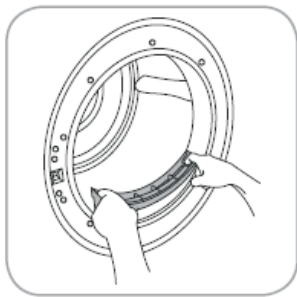

要清潔機門過濾器:

1. 打開機門並將過濾器向上拉。打開過濾器，用手清潔所有部件上的棉絨。切勿以直接沖水方式清除棉絨。
2. 放回過濾器，並確保其與乾衣機邊緣密封。

重要:

- 在過濾器鬆脫、損壞、堵塞或沒有放置的情況下，請勿使用乾衣機，以免乾衣機無法正常運作，以致對乾衣機及衣物做成損壞。
- 如在取出過濾器時棉絨掉落乾衣機內，應檢查排氣管道並清理它們。請參考「安全措施」篇章。

當需要時清洗過濾器:

洗衣劑、衣物柔順劑殘留等污漬或會積聚於過濾器內。如機門過濾器堵塞，乾衣時間會延長，乾衣程序或會於衣物未乾時強制停止。

建議至少每半年清洗一次過濾器，根據使用情況，或需更頻密地進行清洗工作。

要清洗機門過濾器:

1. 打開機門並將過濾器向上拉。打開過濾器，用手清理所有部件上的棉絨。
2. 以溫水沾濕過濾器的兩邊。
3. 使用軟刷、溫水及清潔劑清除過濾器上殘留的污漬。
4. 以溫水沖洗過濾器。
5. 以棉布抹乾過濾器。
6. 放回過濾器，並確保其與乾衣機邊緣密封。

4.5 長期不使用或搬運時

請勿將本機安裝及存放在可能會結冰的極冷環境下，以避免排氣管道內殘留的水份結冰，損壞乾衣機。如需在冬天存放或搬運乾衣機，請特別留意。

長期不使用時:

請勿無人在家的情況下，運作乾衣機。當長期不使用本機，請採取以下措施:

1. 拔除乾衣機電源插頭或關閉電源供應。
2. 清潔機門過濾器，見「清潔機門過濾器」篇章。

搬運時:

1. 拔除乾衣機電源插頭。
2. 確保機腳已裝在乾衣機底部。
3. 使用膠帶將機門穩固在乾衣機上。



警告



觸電風險

進行任何清潔、搬運等工作前，請先關閉及拔下電源插頭。
運作乾衣機前，請先更換所有損壞的零配件。

以避免觸電、起火，甚至死亡風險。

5. 疑難排解

聯絡售後服務中心之前，建議先自行進行檢查，看問題是否可以使用下列的簡易方法解決。

| 問題 | 可能原因 | 解決方法 |
|-----------------------|----------------|---|
| 完成程序後衣物不夠乾/太熱，或乾衣時間太長 | 機門過濾器堵塞。 | 每次乾衣前，請先清理過濾器上的棉絨或塵埃。 |
| | 選擇了「風乾」程序。 | 根據衣物類型選擇合適乾衣程序，請參閱「程序表」篇章。 |
| | 乾衣機負載量過多或衣物過厚。 | 將負載量分開數次運程序。 |
| | 排氣管道堵塞，影響空氣流通。 | 先讓乾衣機運作 5-10 分鐘，將手放到排氣口感受是否有空氣流動。如沒有空氣流動，請清理管道內棉絨；或更換管道。 請確保管道沒有被壓扁或扭結，詳情請參閱「安裝指引」。 |
| | 排氣管道長度不適當。 | 檢查排氣管道，確保沒有過長或放置路徑中出現過多直角彎。過長的管道會令乾衣時間延長。 請確保管道沒有被壓扁或扭結，詳情請參閱「安裝指引」。 |
| | 烘乾較多口袋、鈕扣的衣物。 | 如程序結束後衣物仍然過濕，可選擇加長乾衣時間(建議運行「 30 分鐘速乾」程序)，加強乾衣效果。 |

| 問題 | 可能原因 | 解決方法 |
|-----------------------|---------------------------------------|--|
| 完成程序後衣物不夠乾/太熱，或乾衣時間太長 | 乾衣機被放置於7°C(或45°F)以下的環境。 | 乾衣機需於7°C(或45°F)以上的環境方能正常運作。 |
| 乾衣機無法啟動 | 機門未正確關閉。 | 將機門關上。 |
| | 電源保險絲熔斷，或斷路器切斷電源。 | 重新更換並安裝電源保險絲或斷路器。如果問題仍然存在，請聯繫售後服務中心。 |
| | 電源供應異常。 | 本機的運作電力為220-240V。 |
| | 使用不適當電源保險絲。 | 使用慢熔型電源保險絲。 |
| 乾衣時出現異常噪音 | 乾衣機長期未使用。 | 如隔一段長時間未使用後再運作，乾衣機或會在最初數分鐘出現輕微聲響。 |
| | 滾筒與乾衣機前/後方之間夾有物品(如髮夾、大頭針、安全扣、硬幣和紙巾等)。 | 檢查滾筒與附近範圍，確保沒有任何物品。 放入乾衣前，清空所有衣物口袋。 |
| | 乾衣機機腳不平。 | 調節機腳，使本機水平放置。 |

| 問題 | 可能原因 | 解決方法 |
|-----------|--------------------|--|
| 乾衣時出現異常噪音 | 衣物過度扭結。 | 衣物過度扭結或捲成球的情況下，運行時會撞擊滾筒，引致異常噪音。建議將負載量分開數次運行程序。 |
| 乾衣時沒有熱力 | 電源保險絲熔斷，或斷路器切斷電源。 | 重新更換並安裝電源保險絲或斷路器。如果問題仍然存在，請聯繫售後服務中心。 |
| | 電源供應異常。 | 本機的運作電力為220-240V。 |
| | 恆溫器啟動。 | 按下機背按鈕以重設本機，再重新按下「啟動/暫停」鍵。如問題仍然存在，請檢查排氣系統是否暢通，或聯絡售後服務中心。 |
| 衣物上殘留棉絨屑 | 機門過濾器堵塞。 | 每次乾衣前，請先清理過濾器上的棉絨或塵埃。 |
| 完成程序後衣物過皺 | 乾衣機負載量過多。 | 較少的負載量能令衣物更順利翻滾，減少皺摺形成。 |
| 乾衣機有異味 | 乾衣機附近曾進行使用油漆的維修工作。 | 確保空氣流通。當異味減退後，重新洗滌及烘乾衣物。 |

| 問題 | 可能原因 | 解決方法 |
|---------|-------------------|--|
| 乾衣機有異味 | 第一次使用乾衣機時，或會出現異味。 | 運行乾衣程序後，異味便會消除。 |
| 衣物過熱 | 於程序完成前便取出衣物。 | 程序的最後一個階段為 30分鐘 的自動冷卻時間，冷卻期間可減少衣物褶皺。請等待程序完成後才取出衣物，否則衣物可能仍然過熱。 |
| 滾筒照明燈熄滅 | 照明燈泡燒壞。 | 聯絡售後服務中心。 |

6. 技術參數

惠而浦排氣式乾衣機

| 型號 | AWD712S |
|--------------------|-----------|
| 電壓 (伏特) | 220 - 240 |
| 電流頻率 (赫茲) | 50 |
| 最大功率 (瓦特) | 2350 |
| 最大乾衣量 (乾衣狀態下) (公斤) | 7 |
| 產品高度 (厘米) | 85 |
| 產品闊度 (厘米) | 59.5 |
| 產品深度 (厘米) | 55.5 |

7. 回收資訊

包裝材料


包裝材料均為**100%**可回收。請將可循環再用的物料，放置適當的回收中心，以便循環再用。

產品

本機以可回收或再利用之材料製成，棄置時，請交給回收電器和電子設備的適用收集點。

廢棄家用電器

棄置本機時，請依照當地廢棄物處理規定處置，本機不能作為一般家庭廢品處理，您應將它交給回收電器和電子設備的適用收集點。如需取得進一步有關處理及回收本機之資訊，請與您的家用廢棄物回收商及零售商聯繫。棄置前，請先切斷電源線。

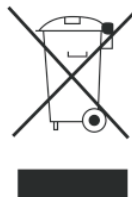

Register your product online

網上登記新產品保養

For Singapore Warranty, please scan QR code or visit below website:



<https://www.whirlpool.com.sg/>

For Hong Kong Warranty 香港地區保養

Save the planet and register your product warranty online!
Enjoy extra 1-month free warranty upon online registration.

「惠」環保出力，減少用紙！於網上登記產品更可獲額外多一個月保養。



<https://rebrand.ly/WPwarranty>

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies
All rights reserved

註冊商標/惠而浦集團的TM商標
版權所有 翻印必究

