


# EN - TDLR7021 I

Max. Load: 7 kg | Max. Spin Speed: 1200 rpm

## PROGRAMME CHART



- A. Programme selector
- B. "Start/Pause" button
- C. "Reset/Drain" button
- D. "Start delay" button
- E. "Favourites" button
- F. Child lock button combination
- G. "Spin speed" button
- H. Time display
- I. Programme sequence indicator

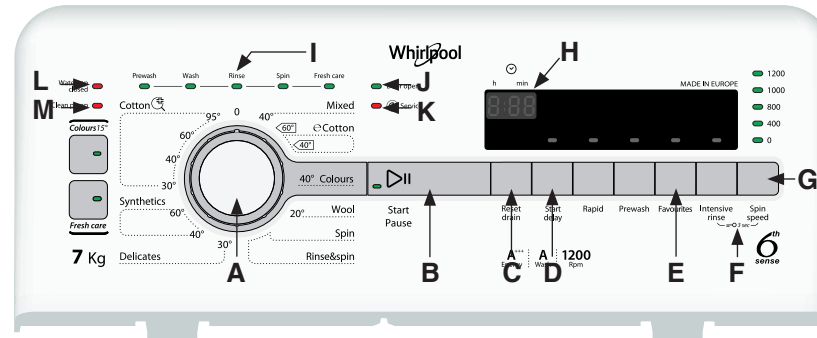

- J. "Lid open" indication
- This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:
- K. "Service" indication
- L. "Water tap closed" indication
- M. "Clean pump" indication

| Programme                            | Care Labels | Max. Load kg | Type of wash / Notes<br><i>- respect the manufacturer's recommendations on the care label</i>  | Detergents and Additives |           |          | Special options |            |             |       |         |           |                 | Max. Spin Speed rpm |                    |
|--------------------------------------|-------------|--------------|--|--------------------------|-----------|----------|-----------------|------------|-------------|-------|---------|-----------|-----------------|---------------------|--------------------|
|                                      |             |              |  | Pre-wash                 | Main Wash | Softener | Colours 15°     | Fresh care | Start delay | Rapid | Prewash | Favourite | Intensive rinse |                     | Spin speed         |
| <b>Cotton</b><br>30 - 40 - 60 - 95°C |             | 7.0          | Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.<br><i>Selecting "Cotton 95", this programme eliminates bacteria, ensuring sanitization of your laundry. The bacterial removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001</i> | *                        | Yes       | *        | *               | *          | *           | *     | *       | *         | *               | *                   | max.               |
| <b>Synthetics</b><br>40 - 60°C       |             | 3.0          | Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon), or their blends of cotton.  | *                        | Yes       | *        | *               | *          | *           | *     | *       | *         | *               | *                   | max.               |
| <b>Delicates</b><br>30°C             |             | 1.5          | Curtains and delicate clothing, dresses, skirts, shirts and blouses.   | *                        | Yes       | *        | *               | *          | *           | -     | *       | *         | -               | *                   | 1000 <sup>1)</sup> |
| <b>Mixed</b><br>40°C                 |             | 3.0          | Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends.<br><i>Effective one-hour programme. Make sure to wash only similar colours together in one wash load.</i>   | -                        | Yes       | *        | *               | *          | *           | -     | -       | *         | *               | *                   | max.               |
| <b>e Cotton</b><br>40°/60°           |             | 7.0          | Normally soiled cotton laundry.<br><i>At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.</i>   | -                        | Yes       | *        | -               | *          | *           | -     | -       | *         | *               | *                   | max.               |
| <b>Colours</b><br>40°C               |             | 4.0          | White and pastel shaded garments made of delicate fabrics.<br><i>Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.</i>   | *                        | Yes       | *        | *               | *          | *           | *     | *       | *         | *               | *                   | 1000 <sup>1)</sup> |
| <b>Wool Cold</b>                     |             | 1.0          | Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.  | -                        | Yes       | *        | *               | *          | *           | -     | -       | *         | -               | *                   | 1000 <sup>1)</sup> |
| <b>Rinse &amp; Spin</b>              | -           | 7.0          | <i>Same as the last rinse and the final spin in the "Cotton" programme.</i>  | -                        | -         | *        | -               | *          | *           | -     | -       | *         | *               | *                   | max.               |
| <b>Spin</b>                          | -           | 7.0          | <i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>  | -                        | -         | -        | -               | *          | *           | -     | -       | *         | -               | *                   | max.               |

Yes = dosing required / \* = optional

1) For improved garment care, spin speed is restricted in these programmes.

Whirlpool is a registered trademark of Whirlpool USA.

WI 12 08 525

 - the sensor technology adapts water, energy and programme duration to your wash load.

## CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

| Programme       | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) without "Rapid" | Approx. Programme Duration ☺ (hrs : min) |              |
|-----------------|------------------|-----------|-----------|------------------------------|--|--------------|
|                 |                  |           |           |                              | without "Rapid"                          | with "Rapid" |
| Cotton          | 95               | 7.0       | 58*       | 2.10                         | 2:35                                     | 2:00         |
| Cotton          | 60               | 7.0       | 52        | 1.33                         | 2:35                                     | 1:45         |
| Cotton          | 40               | 7.0       | 64        | 0.99                         | 3:00                                     | 1:30         |
| Cotton          | 30               | 7.0       | 64        | 0.52                         | 3:00                                     | 1:30         |
| Synthetics      | 60               | 3.0       | 54*       | 0.89                         | 2:05                                     | 1:14         |
| Synthetics      | 40               | 3.0       | 50        | 0.56                         | 1:50                                     | 0:59         |
| Delicates       | 30               | 1.5       | 50        | 0.50                         | 0:45                                     | -            |
| Mixed           | 40               | 3.0       | 40        | 0.45                         | 1:00                                     | -            |
| Colours         | 40               | 4.0       | 70        | 0.55                         | 1:20                                     | 1:00         |
| Wool            | cold             | 1.0       | 40        | 0.10                         | 0:35                                     | -            |
| eCotton <60>*** | 60               | 7.0       | 48        | 0.90                         | 4:00                                     | -            |
| eCotton <60>*** | 60               | 3.5       | 34        | 0.75                         | 2:50                                     | -            |
| eCotton <40>*** | 40               | 3.5       | 34        | 0.65                         | 2:30                                     | -            |

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\* Standard Cotton programme and basis for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

## PREPARATION OF THE WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The time display shows the duration of the chosen programme (in hours and minutes), and the lamp next to the **"Start/Pause"** button flashes. The indication lamp of the predefined spin speed lights up. The spin speed can be changed by pressing the "Spin speed" button. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to "O" and then to the desired programme.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Colours 15" button

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.
- Recommendable for lightly soiled laundry without stains.
- Make sure that your detergent is suitable for cold wash temperatures (15 - 20 °C).
- Not selectable for Cotton 95 °C.

### "Fresh care" button

- Select this option if you cannot unload the laundry soon after programme end, or if you tend to forget the laundry in your washing machine. It will help to keep your laundry fresh.
- The washing machine will start to tumble the laundry periodically after programme end.
- The light of the "Fresh care" button will blink while this function is active, and the display will show an animation.
- The periodic tumbling will last up to approximately 6 hours after the end of your wash programme, and you can stop it at any time by pressing the "Fresh care" button. It will last a while until you can open the door.
- After the "Fresh care" period has run out, the display indicates "End".

### "Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Intensive rinse" button

- Add one more rinse cycle and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

### "Spin speed" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.

- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

## SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and option(s), push and hold the **"Favourites"** button for at least 3 seconds. The lamp next to **"Favourites"** shortly flashes and then lights up - the programme settings is saved.

Next time you want to use your individual programme settings, select the programme, push the **"Favourites"** button and start by pushing **"Start/Pause"**.

**If you want to replace the saved programme setting by another one:**

- Select programme temperature, spin speed and options as desired and then press and hold the "Favourites" button for at least 3 seconds. The previously saved programme setting will be replaced by the new one.

## START DELAY

The "Start delay" button allows the user to run the machine at his convenience, thus, it allows you to have your laundry ready at a particular time and to profit from more favourable energy rates during the night, for example.

- Do not use liquid detergent when activating this function.
- Select programme, spin speed and options.
- Press the "Start delay" button several times to select a delay time by 1 to 24 hours.
- Start the programme (see "Programme Start"). The indication lamp over the "Start delay" button lights up and goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining time.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

### To cancel the "Start delay"

**..before you press the "Start/Pause" button:**

- Turn the programme selector to another position or press the **"Reset/Drain"** button.

**..after having pressed the "Start/Pause" button:**

- Press the **"Reset/Drain"** button for at least 3 second. The start delay indicator light goes off.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the time display.**

## "LID OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

## CHILD LOCK BUTTONS =O 3 sec

You can lock the buttons of the control panel against improper use (e.g. by children).

- Press both of the child lock buttons simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
- To unlock the buttons again: proceed in the same way.

## FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

### "Water tap closed":

No or not sufficient inlet water.

### "Service": ☹

Failure or malfunction of an electrical component.

### "Clean pump":

Waste water is not pumped out.

**Spin speed on display blinks:** unbalance during spinning

## PROGRAMME END

- The "Lid open" indicator lights up, and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.

1. Turn the programme selector to the "O" position.
2. Close the water tap.
3. Open the lid and drum and unload the machine.
4. Leave the lid open for some time to allow the interior of the machine to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.