


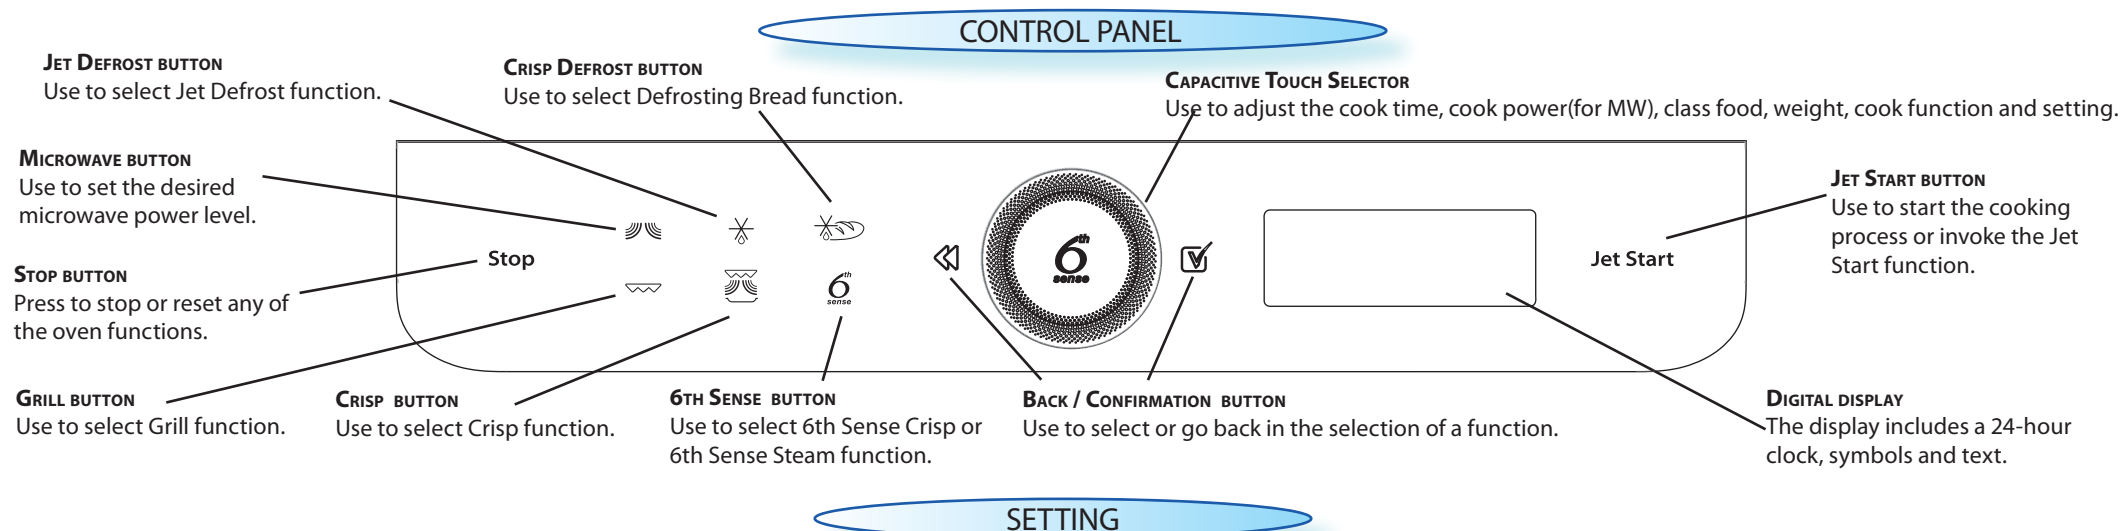

**NOTE: ALL THE PROMOTION STICKERS NEED TO BE TAKEN OUT OF THE PRODUCT BEFORE USE.**

**WHEN THE PRODUCT IS OFF OR IN STANDBY MODE**, while opening or closing the door a beep will signal, and all the function key will be visible on control panel. Or you can press the touch selector, all the function key will be visible on it.



**WHEN THE PRODUCT** is initially plugged into the power source, a selection of settings automatically appear to enable you to adjust/customize values such as Clock, Volume and Eco mode.

**IF YOU WISH** to change any setting, you can keep the Stop button pressed for 3 seconds to reach it.

#### Set Clock

- 1 **TURN TOUCH SELECTOR** to set the actual time-of-day.
- 2 **PRESS CONFIRMATION BUTTON** to confirm selection.

**NOTE:** It gives you **10 MINUTES** to complete the setting of the Clock.

#### ECO Mode

- 1 **TURN TOUCH SELECTOR** to select Activated or Deactivated.
- 2 **PRESS CONFIRMATION BUTTON** to confirm selection.

**NOTE:** **ECO MODE** Deactivated is Default.

**WHEN ECO MODE IS SET**, the clock will not be visible when the product is in Standby.

#### Set Volume

- 1 **TURN TOUCH SELECTOR** to select the Volume.
- 2 **PRESS CONFIRMATION BUTTON** to confirm selection.

VOLUME	VOLUME HIGH	VOLUME MEDIUM (DEFAULT)	VOLUME LOW	SILENT
Buttons (all touch buttons)	100%	100%	50%	0%
Central Jewel	100%	50%	20%	0%
Alerts, Alarms & Reminders	100%	100%	100%	100%



## COOK &amp; REHEAT WITH MICROWAVES

USE THIS FUNCTION for normal cooking and reheating, such as vegetables, fish, potatoes and meat.

- 1 **PRESS THE MICROWAVE BUTTON** repeatedly to select the power.
- 2 **PRESS CONFIRMATION BUTTON** to confirm.
- 3 **TURN THE TOUCH SELECTOR** to adjust the cooking time.
- 4 **PRESS THE JET START BUTTON.**

**YOU CAN PRESS** the back button if you wish to return to previous setting before pressing Jet start button.

**ONCE THE COOKING PROCESS HAS BEEN STARTED:**

The time can easily be increased in 30-second steps by pressing the Jet Start button. *Each press* increases the time with 30 seconds. You may also alter the time by rotating the finger on the central touch selector to increase or decrease the time.



MICROWAVES ONLY	
POWER	SUGGESTED USE:
COOK-REHEAT Jet Power	<b>COOKING</b> of fish, meat, vegetables etc.
COOK-REHEAT 500 W	<b>MORE CAREFUL COOKING</b> e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
COOK-MELT 350 W	<b>SIMMERING STEWS</b> , melting butter.
DEFROST 160 W	<b>DEFROSTING</b> . Softening butter, cheeses.
SOFTENING 90 W	<b>SOFTENING</b> Ice cream.

## AMBIENT LIGHT

**UNDERNEATH THE PRODUCT** there is a White ambient light which reflects off the underlying surface. The white light should be present when the product is in setup state or when a cooking process has finished.

**THE AMBIENT LIGHT** should change color depending on the active process:

- 🌿 **GREEN LIGHT ("healthy")**, Shown during the cooking process for: 6th Sense Steam.
- 🔴 **RED LIGHT ("heated cooking")**, Shown during the cooking process for: MW, Grill, Combi, 6th Sense Crisp, Manual Crisp, Crisp Defrost.
- 🌿 **BLUE LIGHT ("cool defrosting")**, Shown during the cooking process for: Jet Defrost.

**NOTE: THE AMBIENT LIGHT** will be deactivate when ECO Mode is activated.

## DEMO MODE

- 🌿 How to activate Demo Mode: While the oven is in normal mode, open the door, press Stop button, press and hold the Jet Start button for 8 seconds until you hear a beep. The oven will show "Demo Mode activated".
- 🌿 How to deactivate Demo Mode: Open the door, press Stop button, press and hold the Jet Start button for 8 seconds until you hear a beep. The Demo Mode function will be deactivated.

**NOTE: THE DEMO MODE** will be activated under the language selected.

## PAUSE OR STOP COOKING

**TO PAUSE COOKING:**

**THE COOKING CAN BE PAUSED** to check, turn or stir the food by opening the door. The setting will exit to standby mode after 5 minutes.

**TO CONTINUE COOKING:**

**CLOSE THE DOOR** and press the Jet Start button **ONCE**. The cooking is resumed from where it was paused.

**IF YOU DON'T WANT TO CONTINUE COOKING:**

**REMOVE THE FOOD**, close the door and press the STOP button.

**NOTE:** After cooking ends, the fan and cavity lamp is on before pressing STOP button, it's normal.

**A BEEP WILL SIGNAL** once a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



## CHILD LOCK/TOUCH LOCK

**THIS AUTOMATIC SAFETY FUNCTION IS ACTIVATED 2 MINUTES AFTER** the oven has returned to "stand by mode". In this mode the door are locked.



**THE DOOR MUST BE OPENED AND CLOSED** e.g. putting food into it, before the safety lock is released. Else the display will show "DOOR".


## JET START

**THIS FUNCTION IS USED** for quick reheating of food with a high water content such as clear soups, coffee or tea.

- 1 **PRESS JET START BUTTON.**

**THIS FUNCTION AUTOMATICALLY STARTS** with maximum microwave power level and the cooking time set to 30 seconds. *Each additional press* increases the time with 30 seconds. You may also alter the time by rotating the finger on the central touch selector to increase or decrease the time after the function has started.

**PRESSING THE JET START BUTTON ONCE** will increase the time by 30 seconds.





## JET DEFROST

USE THIS FUNCTION for defrosting Meat, Poultry and Fish. JET Defrost should only be used if the net weight is between 100 g- 1.5 kg.

ALWAYS PLACE THE FOOD on the glass turntable.

- 1 PRESS THE JET DEFROST BUTTON.
- 2 TURN THE TOUCH SELECTOR to adjust the weight of the food.
- 3 PRESS THE JET START BUTTON.

MIDWAY THROUGH THE DEFROSTING PROCESS the oven stops and prompts you to *TURN FOOD*.

- Open the door.
- Turn the food.
- Close the door and restart by pressing the Jet Start button.

**NOTE:** THE OVEN CONTINUES AUTOMATICALLY after 2 min. if the food hasn't been turned.


## FROZEN FOODS:

IF THE WEIGHT IS LESS THAN OR GREATER THAN RECOMMENDED WEIGHT: Follow the procedure for "Cook & Reheat with microwaves" and choose 160 W when defrosting.



IF THE FOOD IS WARMER than deep-freeze temperature (-18°C), choose lower weight of the food.

IF THE FOOD IS COLDER than deep-freeze temperature (-18°C), choose higher weight of the food.

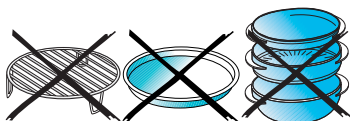

## GRILL

USE THIS FUNCTION to quickly give a pleasant brown surface to the food.

- 1 PRESS THE GRILL BUTTON.
- 2 TURN THE TOUCH SELECTOR to adjust the cooking time.
- 3 PRESS THE JET START BUTTON.

DURING THE COOKING, It is possible to adjust the cooking time by turning the touch selector.

**i** ENSURE THAT THE UTENSILS used are heat resistant and ovenproof before grilling with them.

**i** DO NOT USE PLASTIC utensils when grilling. They will melt. Items of wood or paper are not suitable either.



## CRISP

USE THIS FUNCTION TO cook quiches, pizzas and other dough based food. Also ideal for roasting meat, fish and frying bacon, eggs, potatoes, etc.

- 1 PRESS THE CRISP BUTTON.
- 2 TURN THE TOUCH SELECTOR to adjust the cooking time.
- 3 PRESS CONFIRMATION BUTTON to confirm. Then a message appears informing the users to use the crisp plate.
- 4 PRESS THE JET START BUTTON.

YOU CAN PRESS back button if you wish to return to previous setting before pressing Jet start button.

IT IS NOT POSSIBLE TO CHANGE OR SWITCH the Power level or Grill on/off, when using the Crisp function.

DURING COOKING TIME, It is possible to adjust the cook time by turning the touch selector.

THE OVEN AUTOMATICALLY uses Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

ONLY USE the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.



**i** ENSURE that the Crisp-plate is correctly placed in the middle of the Glass turntable.

**i** THE OVEN AND THE CRISP-PLATE become very hot when using this function.

**i** DO NOT PLACE THE HOT CRISP-PLATE on any surface susceptible to heat.

**i** BE CAREFUL, NOT TO TOUCH the ceiling beneath the Grill element.

**USE OVEN MITTENS** or the special Crisp handle supplied when removing the hot Crisp-plate.



## GRILL COMBI

USE THIS FUNCTION TO cook such food as Gratin, Lasagne, Poultry and Baked potatoes.


- 1 PRESS THE GRILL BUTTON FIRST, and press MW button, then display will show the "COMBI FUNCTION".
- 2 TURN TOUCH SELECTOR to select the power.
- 3 PRESS CONFIRMATION BUTTON to confirm.
- 4 TURN TOUCH SELECTOR to adjust the cooking time.
- 5 PRESS JET START BUTTON.

YOU CAN PRESS back button if you wish to return to previous setting before pressing Jet start button.

DURING COOKING TIME, It is possible to adjust the cook time by turn the touch selector or press start button.

**i** ENSURE THAT THE UTENSILS used are heat resistant and ovenproof before grilling with them.

**i** DO NOT USE PLASTIC utensils when grilling. They will melt. Items of wood or paper are not suitable either.



## GRILL COMBI

POWER	SUGGESTED USE:
350 - 500 W	COOKING Poultry & Lasagne
160 - 350 W	COOKING Fish & frozen gratins
160 W	COOKING Meat
90 W	GRATINATING fruit
0 W	BROWNING only during cooking

6<sup>TH</sup> SENSE STEAM

USE THIS FUNCTION FOR such food as vegetables, Frozen vegetables, fish fillets, fruits.

ALWAYS USE SUPPLIED STEAMER when using this function.

- 1 PRESS THE 6<sup>TH</sup> SENSE BUTTON mode position.
- 2 TURN TOUCH SELECTOR to select 6<sup>th</sup> Sense Steam.
- 3 PRESS CONFIRMATION BUTTON to confirm.
- 4 TURN TOUCH SELECTOR to select the food type.
- 5 PRESS CONFIRMATION BUTTON to confirm. Two messages appear to remind you to use the steamer and add water to steamer.
- 6 PRESS JET START BUTTON.

YOU CAN PRESS back button if you wish to return to previous setting.




THE STEAMER is designed to be used with microwaves only!  
NEVER USE IT with any other function at all.

USING THE STEAMER in any other function may cause damage.

ALWAYS ENSURE THAT the turntable is able to turn freely before starting the oven.

ALWAYS PLACE the steamer on the Glass Turntable.



FOOD CLASS	AMOUNT	HINTS
1 VEGETABLES	300g - 400g	PLACE IN STEAM GRID. Add 100ml water in bottom and cover with lid.
2 FROZEN VEGETABLES		ALLOW TO STAND for 1 - 2 minutes. Add 100ml water in bottom and cover with lid.
3 FISH FILETS		DISTRIBUTE FILLETS EVENLY on the steam grid. Interlace thin parts. Allow to stand for 1 - 2 minutes, after cooking. Add 100ml water in bottom and cover with lid.
4 FRUITS		PLACE IN STEAM GRID. Add 100ml water in bottom and cover with lid.

## CRISP DEFROST

USE THIS FUNCTION TO Defrost crispy bread. Crisp Defrost should only be used if the net weight is between 50g- 400g.

- 1 PRESS THE CRISP DEFROST BUTTON.
- 2 TURN THE TOUCH SELECTOR to select the weight.
- 3 PRESS CONFIRMATION BUTTON to confirm. Then a message appears to inform you to use the crisp plate.
- 4 PRESS JET START BUTTON to preheating of the Crisp plate. When the temperature has been reached, a message informs you to insert the food (bread).
- 5 ADD FOOD(BREAD) and press start button.

IF YOU DO NOT open and close door in add food stage, the cooking can not be resumed and continue cooking.

6<sup>TH</sup> SENSE CRISP

USE THIS FUNCTION TO cook Pizzas, French Fries, Quiche, and Chicken nuggets. This function is used only for frozen ready-made food.

- 1 PRESS THE 6<sup>TH</sup> SENSE BUTTON mode position.
- 2 TURN TOUCH SELECTOR to select 6<sup>th</sup> Sense Crisp.
- 3 PRESS CONFIRMATION BUTTON to confirm.
- 4 TURN TOUCH SELECTOR to select the food type.
- 5 PRESS CONFIRMATION BUTTON to confirm. Then a message appears informing the users to use the crisp plate.
- 6 PRESS JET START BUTTON.

YOU CAN PRESS back button if you wish to return to previous setting.



DO NOT PLACE any containers or wrappings on the Crisp plate!


ONLY USE the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.



USE OVEN MITTENS or the special Crisp handle supplied when removing the hot Crisp-plate.



ONLY THE FOOD IS TO be placed on the Crisp plate.



FOOD CLASS		AMOUNT	HINTS
1	PIZZA, FROZEN	300-400G	For pizzas with crust.
2	FRENCH FRIES, FROZEN		Spread out the fries in an even layer on the crisp plate. Sprinkle with salt if crispier fries are desired. The fries can be stirred when the time is displayed.
3	QUICHE FROZEN		Remove package and place the Quiche on the crisp plate.
4	CHICKEN NUGGETS/ WINGS, FROZEN		Spread out the Chicken wings in an even layer on the crisp plate. The chicken Nuggets can be stirred when the time is displayed.
FOR FOOD NOT LISTED IN THIS TABLE and if the weight is lesser or greater than recommended weight, you should follow the procedure for the manual Crisp function.			

## TECHNICAL SPECIFICATION

MODEL	MAX109/BRZ
SUPPLY VOLTAGE	230 V/50 Hz
RATED POWER INPUT	1500 W
FUSE	10 A (UK 13 A)
MW OUTPUT POWER	700 W
GRILL	650 W
OUTER DIMENSIONS (HxWxD)	360 x 392 x 350
INNER DIMENSIONS (HxWxD)	149 x 290 x 290

